

Controller/Driver

Series *LEC* ☐

Step Data Input Type Page 551

Step Motor (Servo/24 VDC)/ Series *LECP6*



Servo Motor (24 VDC)/ Series *LECA6*



Gateway Unit Page 563

Series *LEC-G*



Programless Type Page 567

Step Motor (Servo/24 VDC)/ Series *LECP1*



Programless Type (With Stroke Study) Page 574

Step Motor (Servo/24 VDC)/ Series *LECP2*

Specialized for Series LEM



Pulse Input Type ... Page 581

Step Motor (Servo/24 VDC)/ Series *LECPA*



CC-Link Direct Input Type Page 591

Series *LECPMJ*




Simple Setting to Use Straight Away

◎ Easy Mode for Simple Setting

If you want to use it right away, select “Easy Mode.”

Step motor
(Servo/24 VDC)
LECP6

Servo motor
(24 VDC)
LECA6

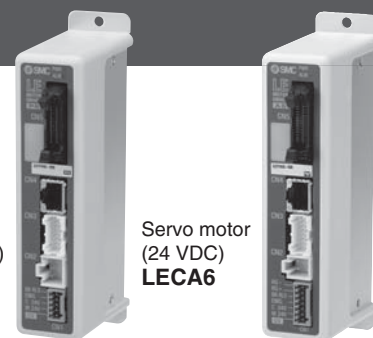

<When a PC is used> Controller setting software

- Step data setting, test drive, jogging and move for the constant rate can be set and operated on one screen.

Setting of jog and speed of the constant rate

Jogging

Start testing

Step data setting

Move for the constant rate

No.	Move M	Speed	Position	PushingF	PushingSp	In pos
0	Absolute	100	5.00	0	0	1.00
1	Absolute	100	10.00	0	0	1.00
2	Absolute	100	20.00	0	0	1.00
3	Absolute	200	30.00	0	0	1.00
4	Absolute	200	40.00	0	0	1.00
5	Absolute	300	50.00	0	0	1.00
6	Absolute	300	60.00	0	0	1.00
7	Absolute	400	70.00	0	0	1.00
8	Absolute	400	80.00	0	0	1.00
9	Absolute	500	90.00	0	0	1.00

<When a TB (teaching box) is used>

- Simple screen without scrolling promotes ease of setting and operating.
- Pick up an icon from the first screen to select a function.
- Set up the step data and check the monitor on the second screen.



Example of setting the step data

1st screen

2nd screen

It can be registered by “SET” after entering the values.

Step	Axis 1
Step No.	0
Posn	123.45 mm
Speed	100 mm/s

Example of checking the operation status

1st screen

2nd screen

Operation status can be checked.

Monitor	Axis 1
Step No.	1
Posn	12.34 mm
Speed	10 mm/s

Teaching box screen

- Data can be set with position and speed. (Other conditions are already set.)

Step	Axis 1
Step No.	0
Posn	50.00 mm
Speed	200 mm/s



Step	Axis 1
Step No.	1
Posn	80.00 mm
Speed	100 mm/s


◎ Normal Mode for Detailed Setting

Select normal mode when detailed setting is required.

- Step data can be set in detail.
- Parameters can be set.
- Signals and terminal status can be monitored.
- JOG and constant rate movement, return to origin, test drive and testing of forced output can be performed.

<When a PC is used> Controller setting software

- Step data setting, parameter setting, monitor, teaching, etc., are indicated in different windows.

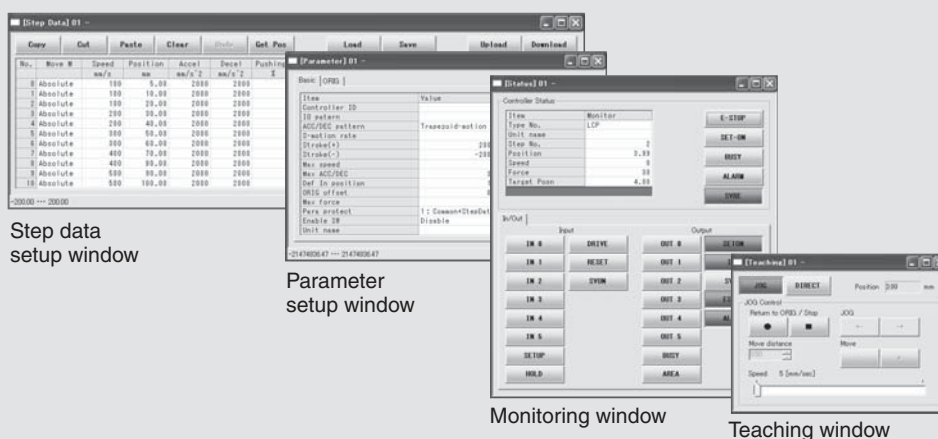


<When a TB (teaching box) is used>

- Multiple step data can be stored in the teaching box, and transferred to the controller.
- Continuous test drive by up to 5 step data.

Teaching box screen

- Each function (step data setting, test, monitor, etc.) can be selected from the main menu.

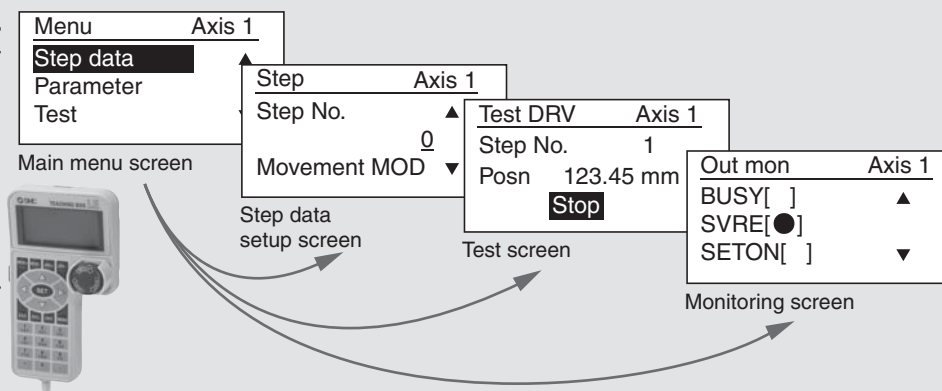


The actuator and controller are provided as a set. (They can be ordered separately.)

Confirm that the combination of the controller and the actuator is correct.

<Check the following before use.>

- ① Check the actuator label for model number. This matches the controller.
- ② Check Parallel I/O configuration matches (NPN or PNP).

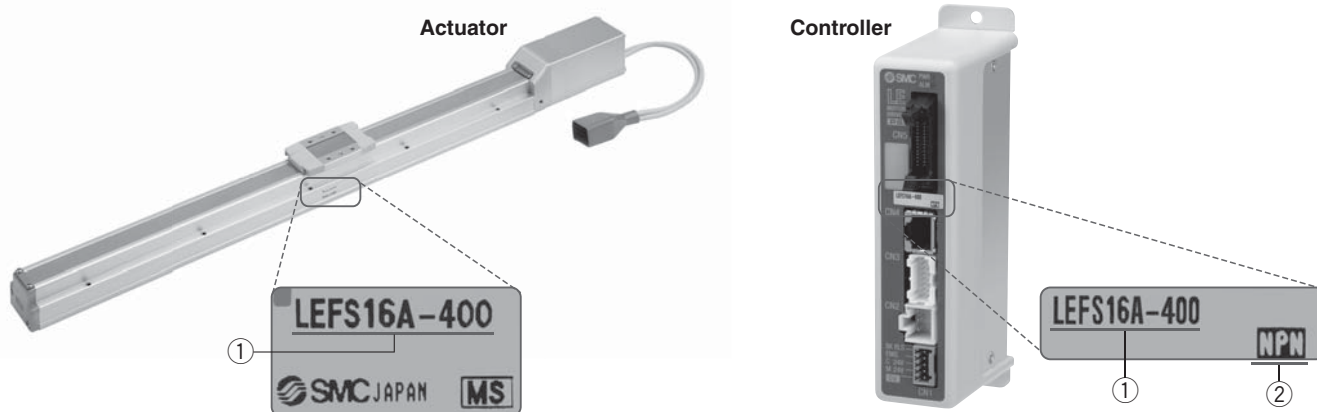

Fieldbus Network

CC-Link Direct Input Type Step Motor Controller


Series **LECPMJ** ▶Page 591



- ◎ CC-Link Ver. 1.10 compliant
- ◎ External data import function

- The step data can be rewrite temporarily by feeding back external information to the PLC.
- 64 or more data points can be defined with the 3 types of data import modes.


Operation example: The opening width of the electric gripper is changed appropriately according to the results of the measurement with the imaging camera.

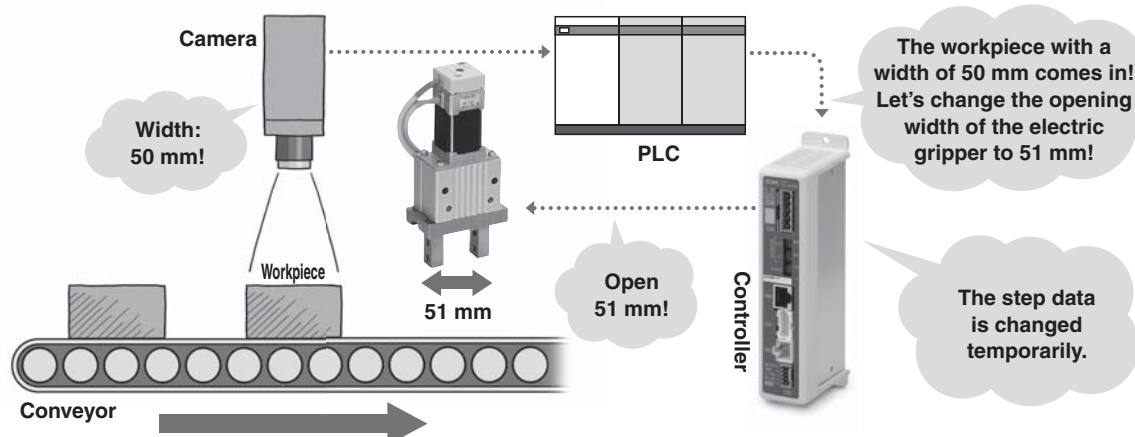

● 3 types of data import modes

- Single numeric parameter (Number of occupied stations: 1) Movement MOD (movement mode) and another parameter item are changed.
- Half numeric parameters (Number of occupied stations: 2) Up to 6 parameter items are changed at once.
- Full numeric parameters (Number of occupied stations: 4) Up to 12 parameter items are changed at once.

- ◎ Position and speed can be monitored by the PLC touch panel (display).
- ◎ Step data can be edited from the PLC touch panel (display). (Except in the case of the single numeric parameter)

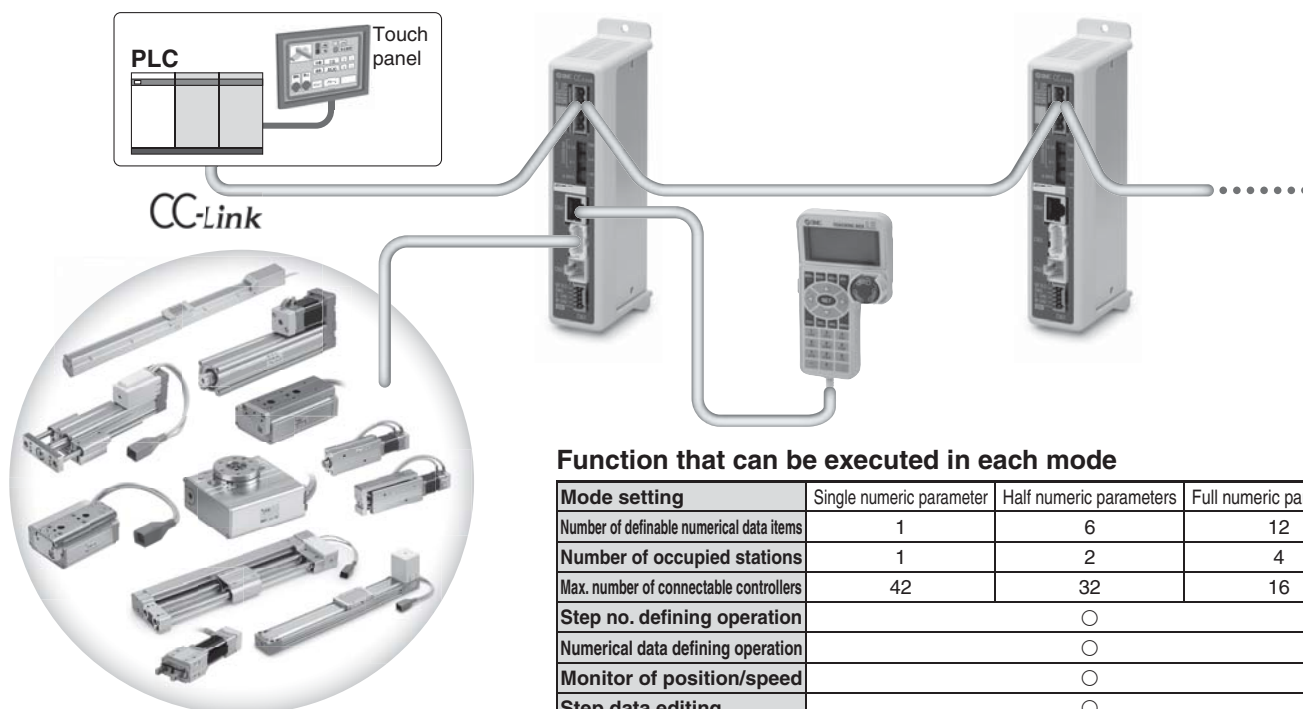

Function that can be executed in each mode

Mode setting	Single numeric parameter	Half numeric parameters	Full numeric parameters
Number of definable numerical data items	1	6	12
Number of occupied stations	1	2	4
Max. number of connectable controllers	42	32	16
Step no. defining operation		○	
Numerical data defining operation		○	
Monitor of position/speed		○	
Step data editing		○	

Fieldbus-compatible Gateway (GW) Unit

Series **LEC-G** ▶Page 563

◎ Conversion unit for Fieldbus network and LEC serial communication


Applicable Fieldbus protocols: CC-Link **V2** DeviceNet[™] **PROFI[®] BUS** EtherNet/IP[™]

◎ Two methods of operation

Step data input: Operate using preset step data in the controller.

Numerical data input: The actuator operates using values such as position and speed from the PLC.

◎ Values such as position, speed can be checked on the PLC.

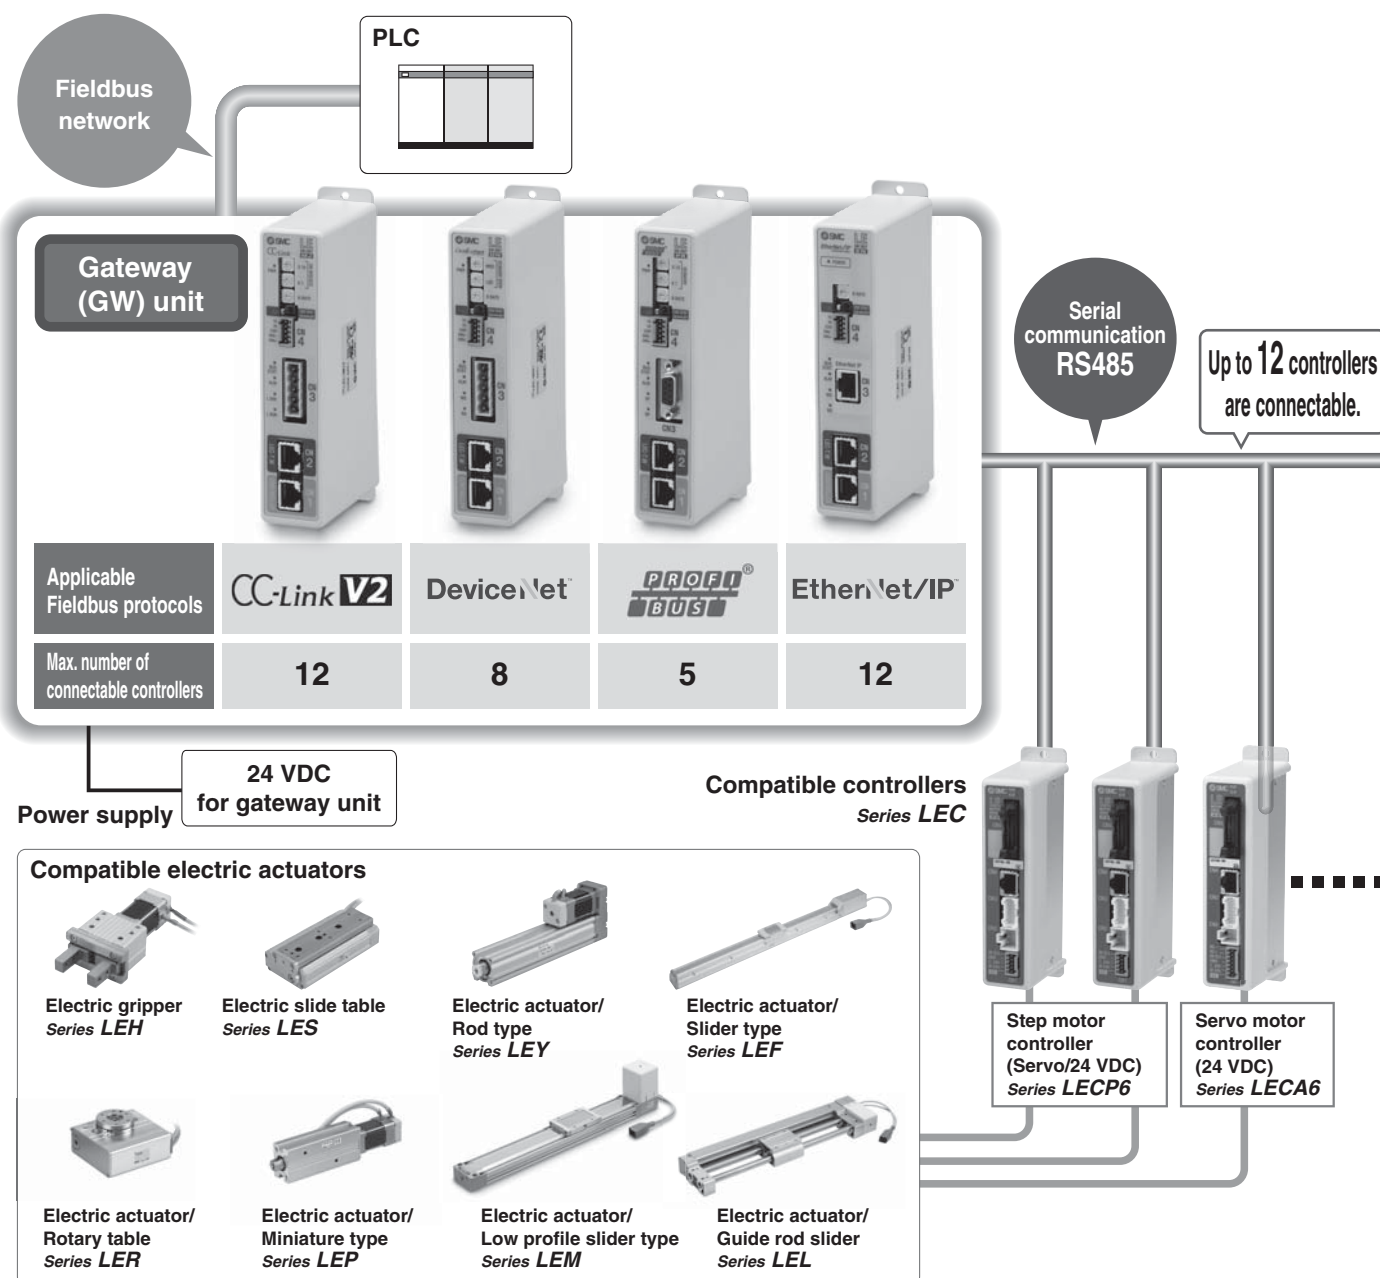

LEFS
LEFB

LEJS
LEJB

LEL

LEM

LEY
LEYG

LES
LESH

LEPY
LEPS

LER

LEH

LEY-X5

11-LEFS

11-LEJS

25A-

LEC

LECS

LECS-T

LECYM
LECYU

Motorless

LAT3



No Programming

Capable of setting up an electric actuator operation without using a PC or teaching box




Step motor
(Servo/24 VDC)
LECP1

- ① Setting position number**
Setting a registered number for the stop position
Maximum 14 points
- ② Setting a stop position**
Moving the actuator to a stop position using FORWARD and REVERSE buttons
- ③ Registration**
Registering the stop position using SET button

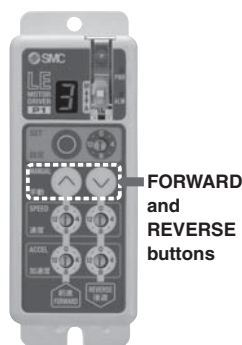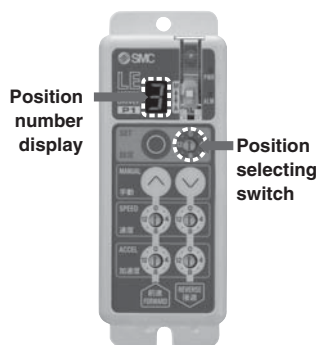


Speed/Acceleration 16-level adjustment

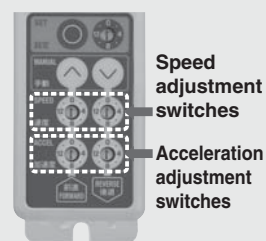

Pulse Input Type *Series LECPA* ▶Page 581

- A driver that uses pulse signals to allow positioning at any position.
The actuator can be controlled from the customers' positioning unit.

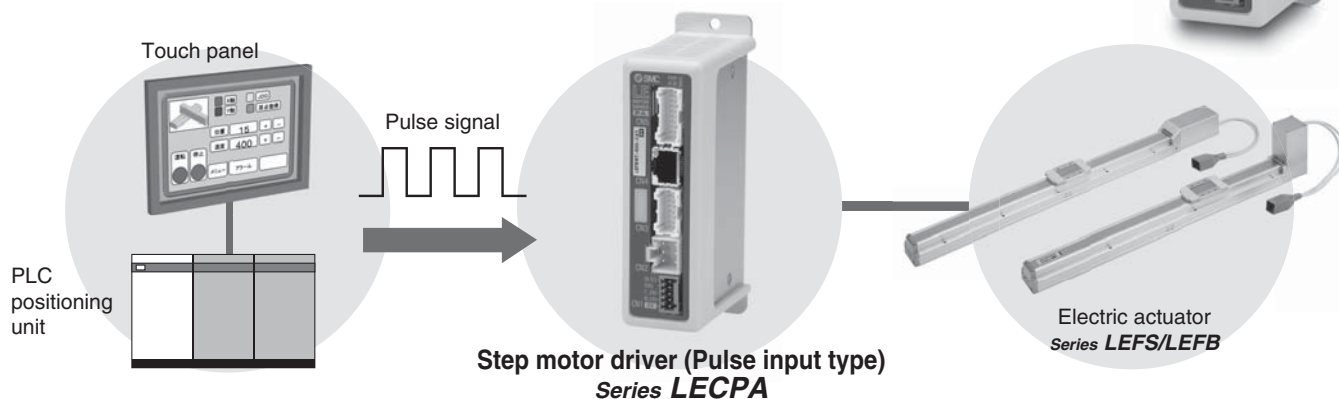

- **Return-to-origin command signal**
Enables automatic return-to-origin action.
- **With force limit function (Pushing force/Gripping force operation available)**
Pushing force/Positioning operation possible by switching signals.

Stroke end operation similar to an air cylinder is possible.

(using the 1 stroke study and 2 reduced wiring below)




Step motor
(Servo/24 VDC)
LECP2

1 Stroke study (Simple registration of both stroke end positions)

After the stroke adjustment unit has travelled, both stroke ends are automatically registered by the stroke study function!


1 Setting position number

Set the position selecting switch to 15(F).

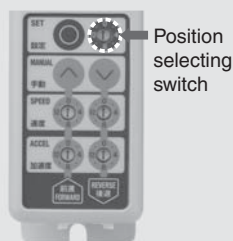


2 The stroke study begins

Press the SET button for 3 seconds or longer.

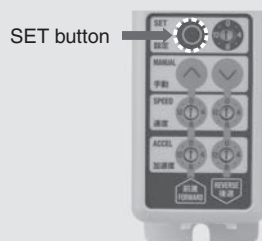


Automatic registration of both end positions

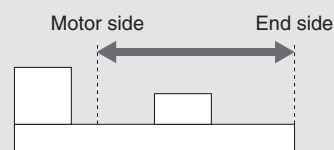


2 Wiring (Reduced wiring)

2-wire input signals*

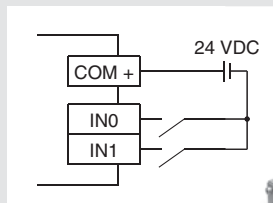


* Both stroke end positions and an intermediate position can be set using this wiring.

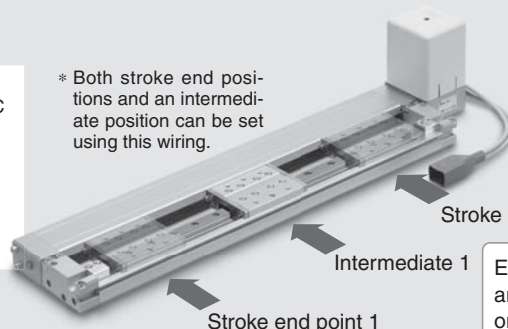


End point operation like an air cylinder by turning on input IN0 or IN1.


Speed/Acceleration 16-level adjustment

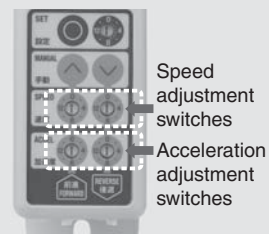


Compatible Actuators

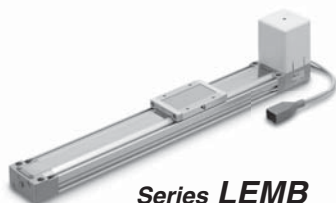


Series **LEMB**

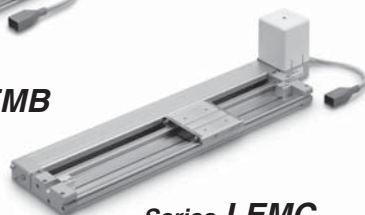

Series **LEMC**

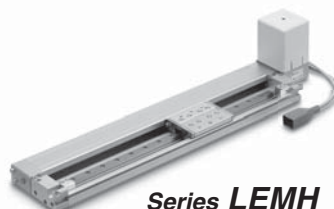

Series **LEMH**

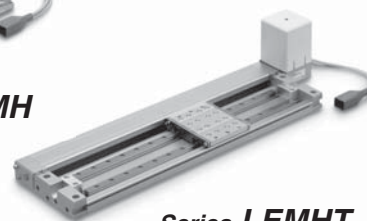

Series **LEMHT**

Function

Item	Step data input type LECP6/LECA6	Programless type LECP1	Programless type (With stroke study) LECP2	Pulse input type LECPA
Step data and parameter setting	<ul style="list-style-type: none"> Input from controller setting software (PC) Input from teaching box 	<ul style="list-style-type: none"> Select using controller operation buttons 	<ul style="list-style-type: none"> Select using controller operation buttons 	<ul style="list-style-type: none"> Input from controller setting software (PC) Input from teaching box
Step data "position" setting	<ul style="list-style-type: none"> Input the numerical value from controller setting software (PC) or teaching box Input the numerical value Direct teaching JOG teaching 	<ul style="list-style-type: none"> Direct teaching JOG teaching 	<ul style="list-style-type: none"> Stroke end: Automatic measurement Intermediate position: Direct teaching JOG teaching 	<ul style="list-style-type: none"> No "Position" setting required Position and speed set by pulse signal
Number of step data	64 points	14 points	2 stroke end points + 12 intermediate points (14 points in total)	—
Operation command (I/O signal)	Step No. [IN*] input ⇒ [DRIVE] input	Step No. [IN*] input only	Step No. [IN*] input only	Pulse signal
Completion signal	[INP] output	[OUT*] output	[OUT*] output	[INP] output

Setting Items


TB: Teaching box PC: Controller setting software

Item		Contents	Easy mode		Normal mode	Step data input type LECP6/LECA6	Pulse input type LECPA	Programless type LECP1*	Programless type (With stroke study) LECP2
			TB	PC	TB·PC				
Step data setting (Excerpt)	Movement MOD	Selection of “absolute position” and “relative position”	△	●	●	Set at Absolute/Relative	No setting required	Fixed value (Absolute)	Fixed value (Absolute)
	Speed	Transfer speed	●	●	●	Set in units of 1 mm/s		Select from 16-level	Select from 16-level
	Position	[Position]: Target position [Pushing]: Pushing start position	●	●	●	Set in units of 0.01 mm		Direct teaching JOG teaching	Stroke end: Automatic measurement Intermediate position: Direct teaching JOG teaching
	Acceleration/Deceleration	Acceleration/deceleration during movement	●	●	●	Set in units of 1 mm/s ²		Select from 16-level	Select from 16-level
	Pushing force	Rate of force during pushing operation	●	●	●	Set in units of 1%	Set in units of 1%	Select from 3-level (weak, medium, strong)	No setting required
	Trigger LV	Target force during pushing operation	△	●	●	Set in units of 1%	Set in units of 1%	No setting required (same value as pushing force)	
	Pushing speed	Speed during pushing operation	△	●	●	Set in units of 1 mm/s	Set in units of 1 mm/s		
	Moving force	Force during positioning operation	△	●	●	Set to 100%	Set to (Different values for each actuator) %		
	Area output	Conditions for area output signal to turn ON	△	●	●	Set in units of 0.01 mm	Set in units of 0.01 mm		
	In position	[Position]: Width to the target position [Pushing]: How much it moves during pushing	△	●	●	Set to 0.5 mm or more (Units: 0.01 mm)	Set to (Different values for each actuator) or more (Units: 0.01 mm)		
Parameter setting (Excerpt)	Stroke (+)	+ side limit of position	×	×	●	Set in units of 0.01 mm	Set in units of 0.01 mm	Compatible	No setting required
	Stroke (–)	– side limit of position	×	×	●	Set in units of 0.01 mm	Set in units of 0.01 mm		
	ORIG direction	Direction of the return to origin can be set.	×	×	●	Compatible	Compatible		
	ORIG speed	Speed during return to origin	×	×	●	Set in units of 1 mm/s	Set in units of 1 mm/s		
	ORIG ACC	Acceleration during return to origin	×	×	●	Set in units of 1 mm/s ²	Set in units of 1 mm/s ²		
Test	JOG		●	●	●	Continuous operation at the set speed can be tested while the switch is being pressed.	Continuous operation at the set speed can be tested while the switch is being pressed.	Hold down MANUAL button (ⒶⒷ) for uniform sending (speed is specified value)	Hold down MANUAL button (ⒶⒷ) for uniform sending (speed is specified value)
	MOVE		×	●	●	Operation at the set distance and speed from the current position can be tested.	Operation at the set distance and speed from the current position can be tested.	Press MANUAL button (ⒶⒷ) once for sizing operation (speed, sizing amount are specified values)	Press MANUAL button (ⒶⒷ) once for sizing operation (speed, sizing amount are specified values)
	Return to ORIG		●	●	●	Compatible	Compatible	Compatible	Performed by the stroke endpoint operation when power is turned ON.
	Test drive	Operation of the specified step data	●	●	● (Continuous operation)	Compatible	Not compatible	Compatible	Compatible
	Forced output	ON/OFF of the output terminal can be tested.	×	×	●	Compatible	Compatible	Not compatible	Not compatible
Monitor	DRV mon	Current position, speed, force and the specified step data can be monitored.	●	●	●	Compatible	Compatible		
	In/Out mon	Current ON/OFF status of the input and output terminal can be monitored.	×	×	●	Compatible	Compatible		
ALM	Status	Alarm currently being generated can be confirmed.	●	●	●	Compatible	Compatible	Compatible (display alarm group)	Compatible (display alarm group)
	ALM Log record	Alarm generated in the past can be confirmed.	×	×	●	Compatible	Compatible	Not compatible	Not compatible
File	Save/Load	Step data and parameter can be saved, forwarded and deleted.	×	×	●	Compatible	Compatible		
Other	Language	Can be changed to Japanese or English.	●	●	●	Compatible	Compatible		


△: Can be set from TB Ver. 2.** (The version information is displayed on the initial screen)

* Programless type LECP1 cannot be used with the teaching box and controller setting kit.

System Construction/General Purpose I/O

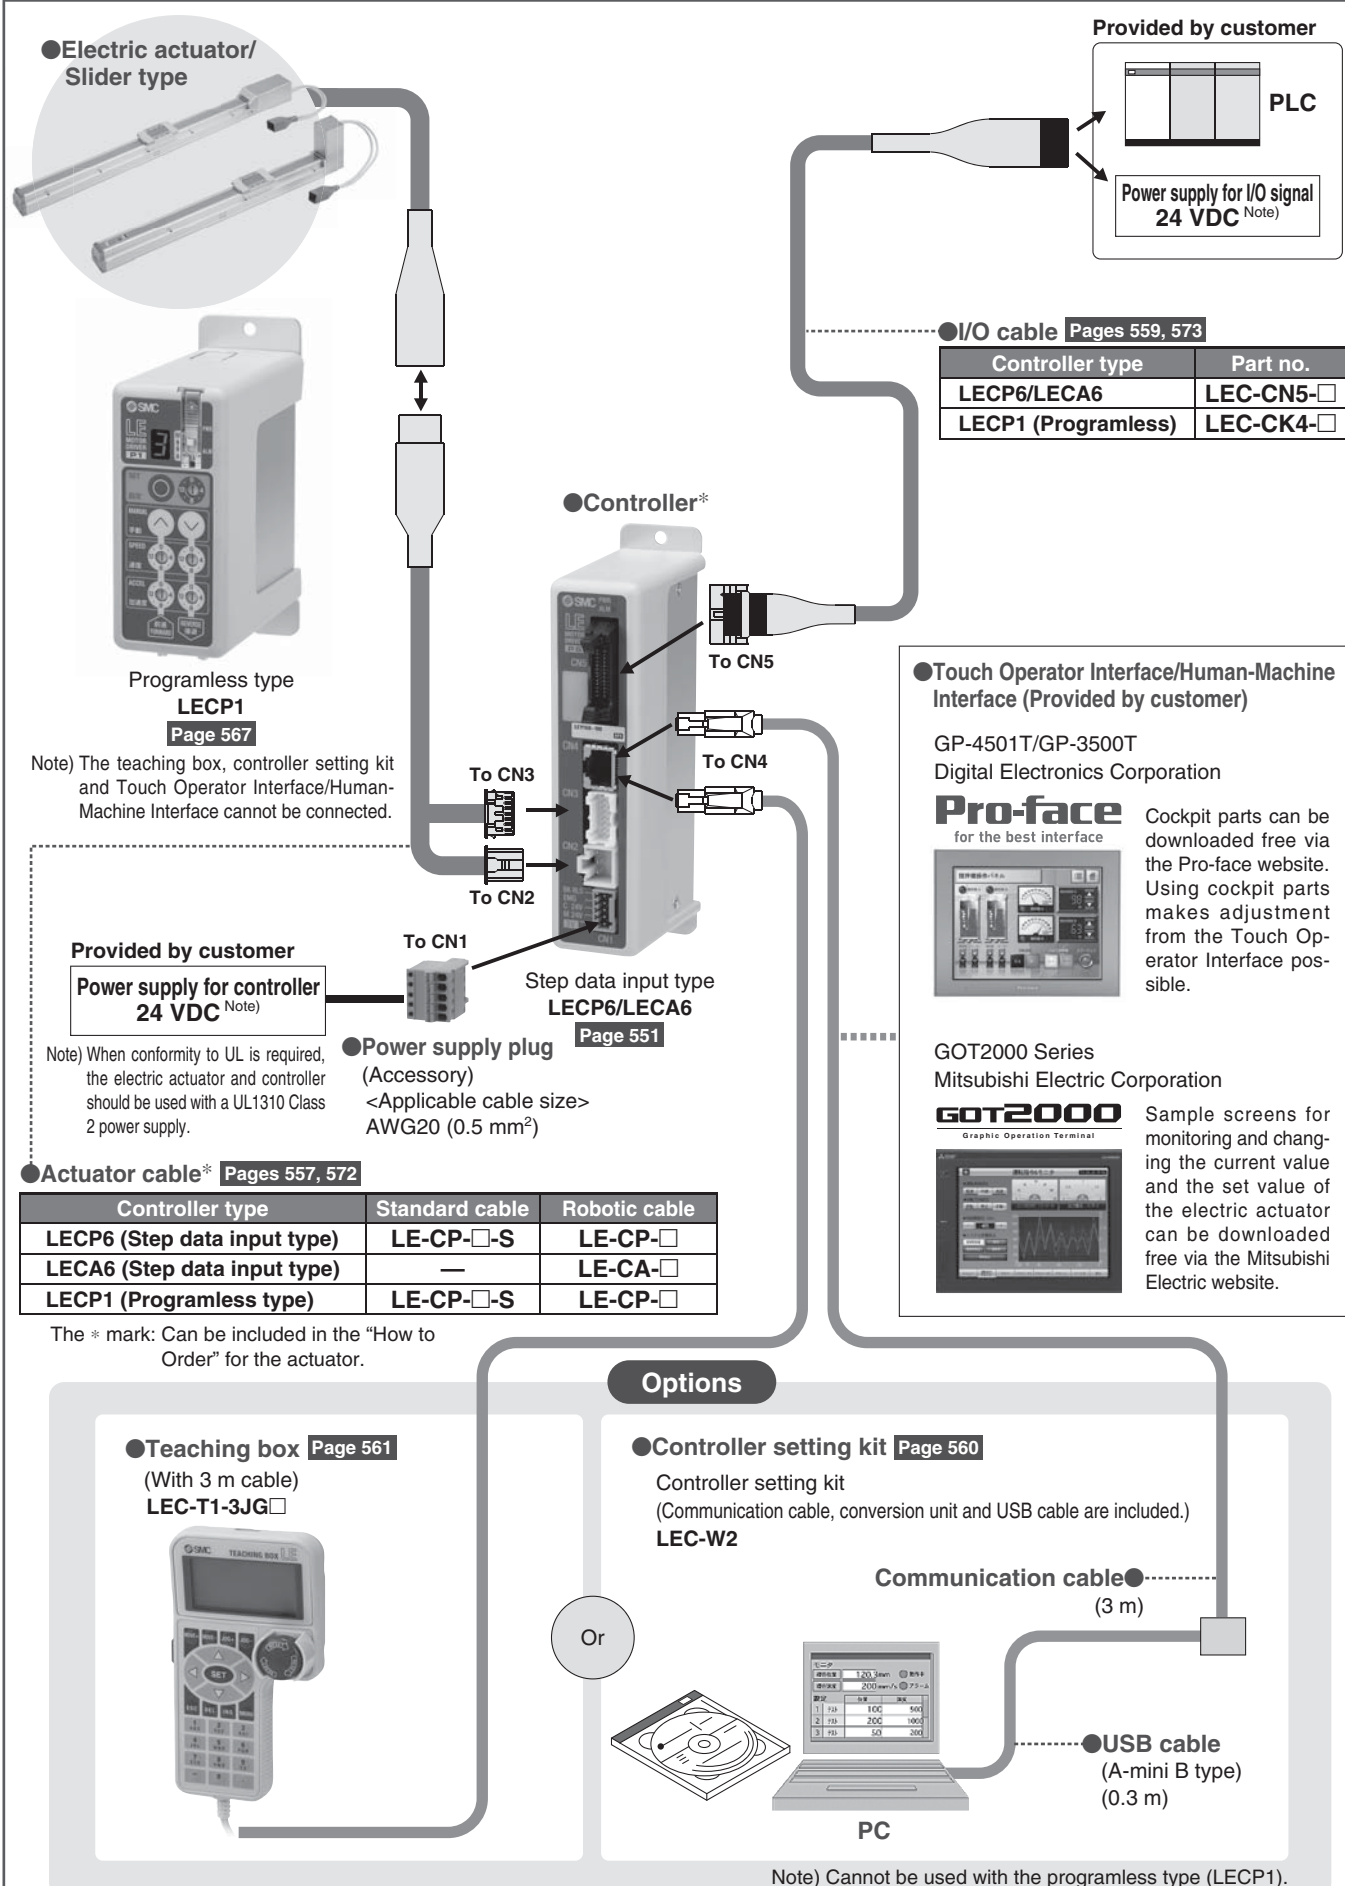


System Construction/Pulse Signal

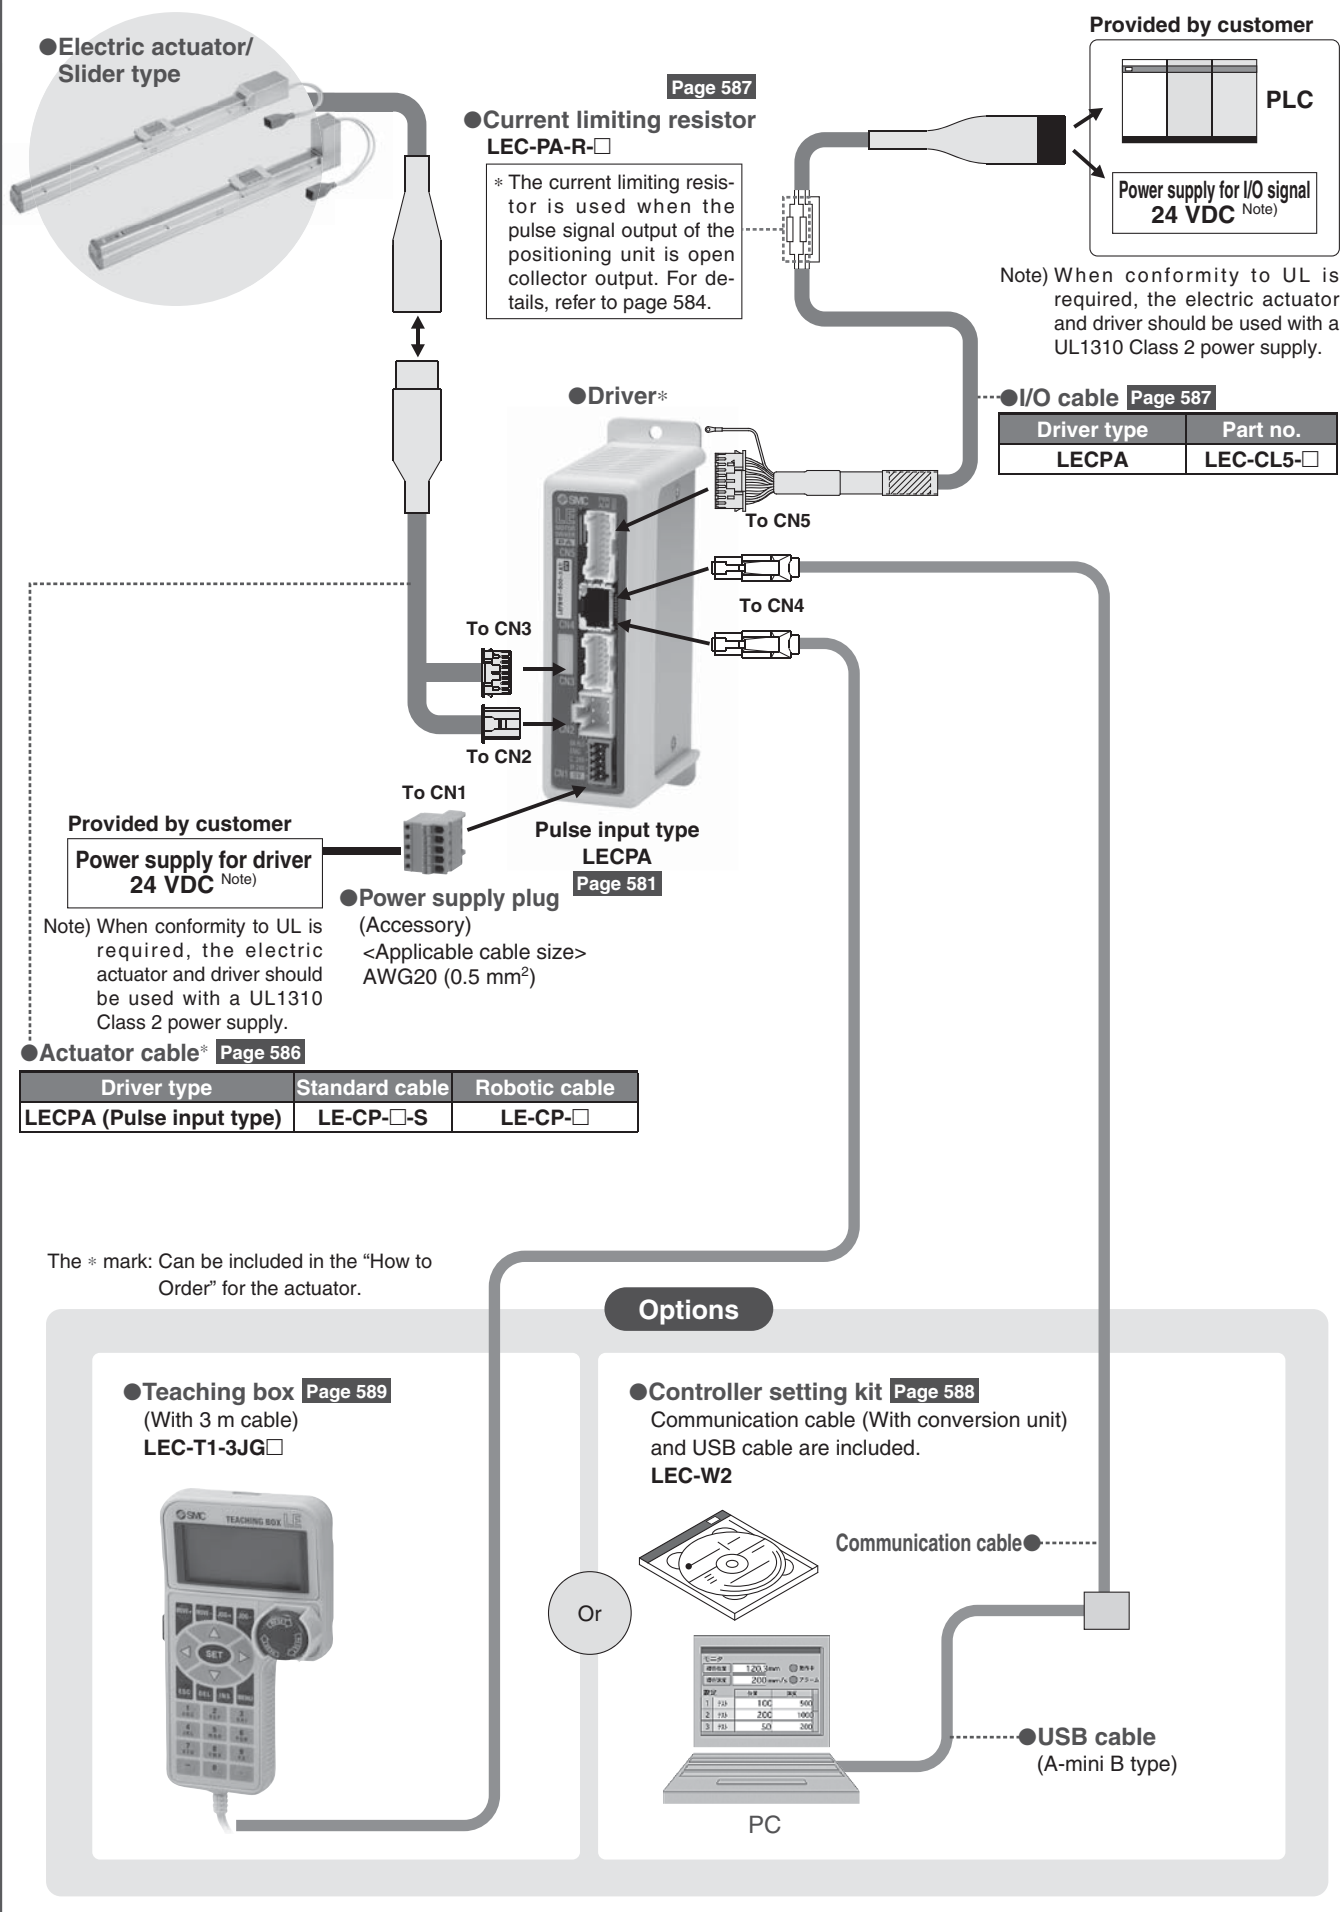


System Construction/Programless Type

●Electric actuator/ Low profile slider type

Series **LEM**

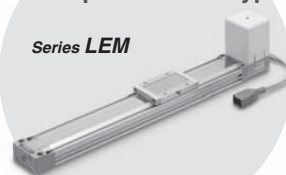

Provided by customer

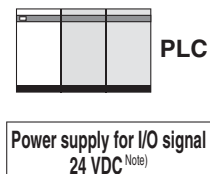

●I/O cable* Pages 573, 580


Controller type	Part no.
LECP1/LECP2	LEC-CK4-□



Programless type
(With stroke study)
LECP2
Page 574



Programless type
LECP1
Page 567

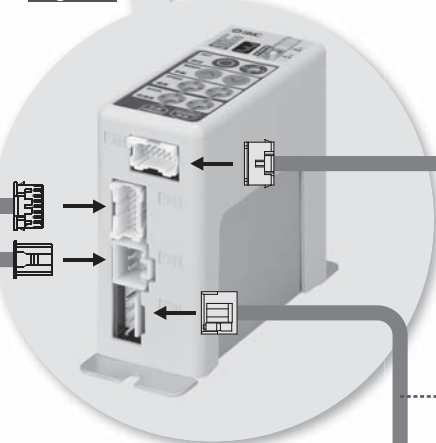

●Actuator cable* Pages 572, 579

Controller type	Standard cable	Robotic cable
LECP1/LECP2	LE-CP-□-S	LE-CP-□

The * mark: Can be included in the "How to Order" for the actuator.


●Power supply cable (1.5 m)
(Accessory)

Provided by customer

Power supply for controller
24 VDC^{Note)}


Note) When conformity to UL is required,
the electric actuator and controller
should be used with a UL1310 Class
2 power supply.

System Construction/Fieldbus Network (CC-Link Direct Input Type)

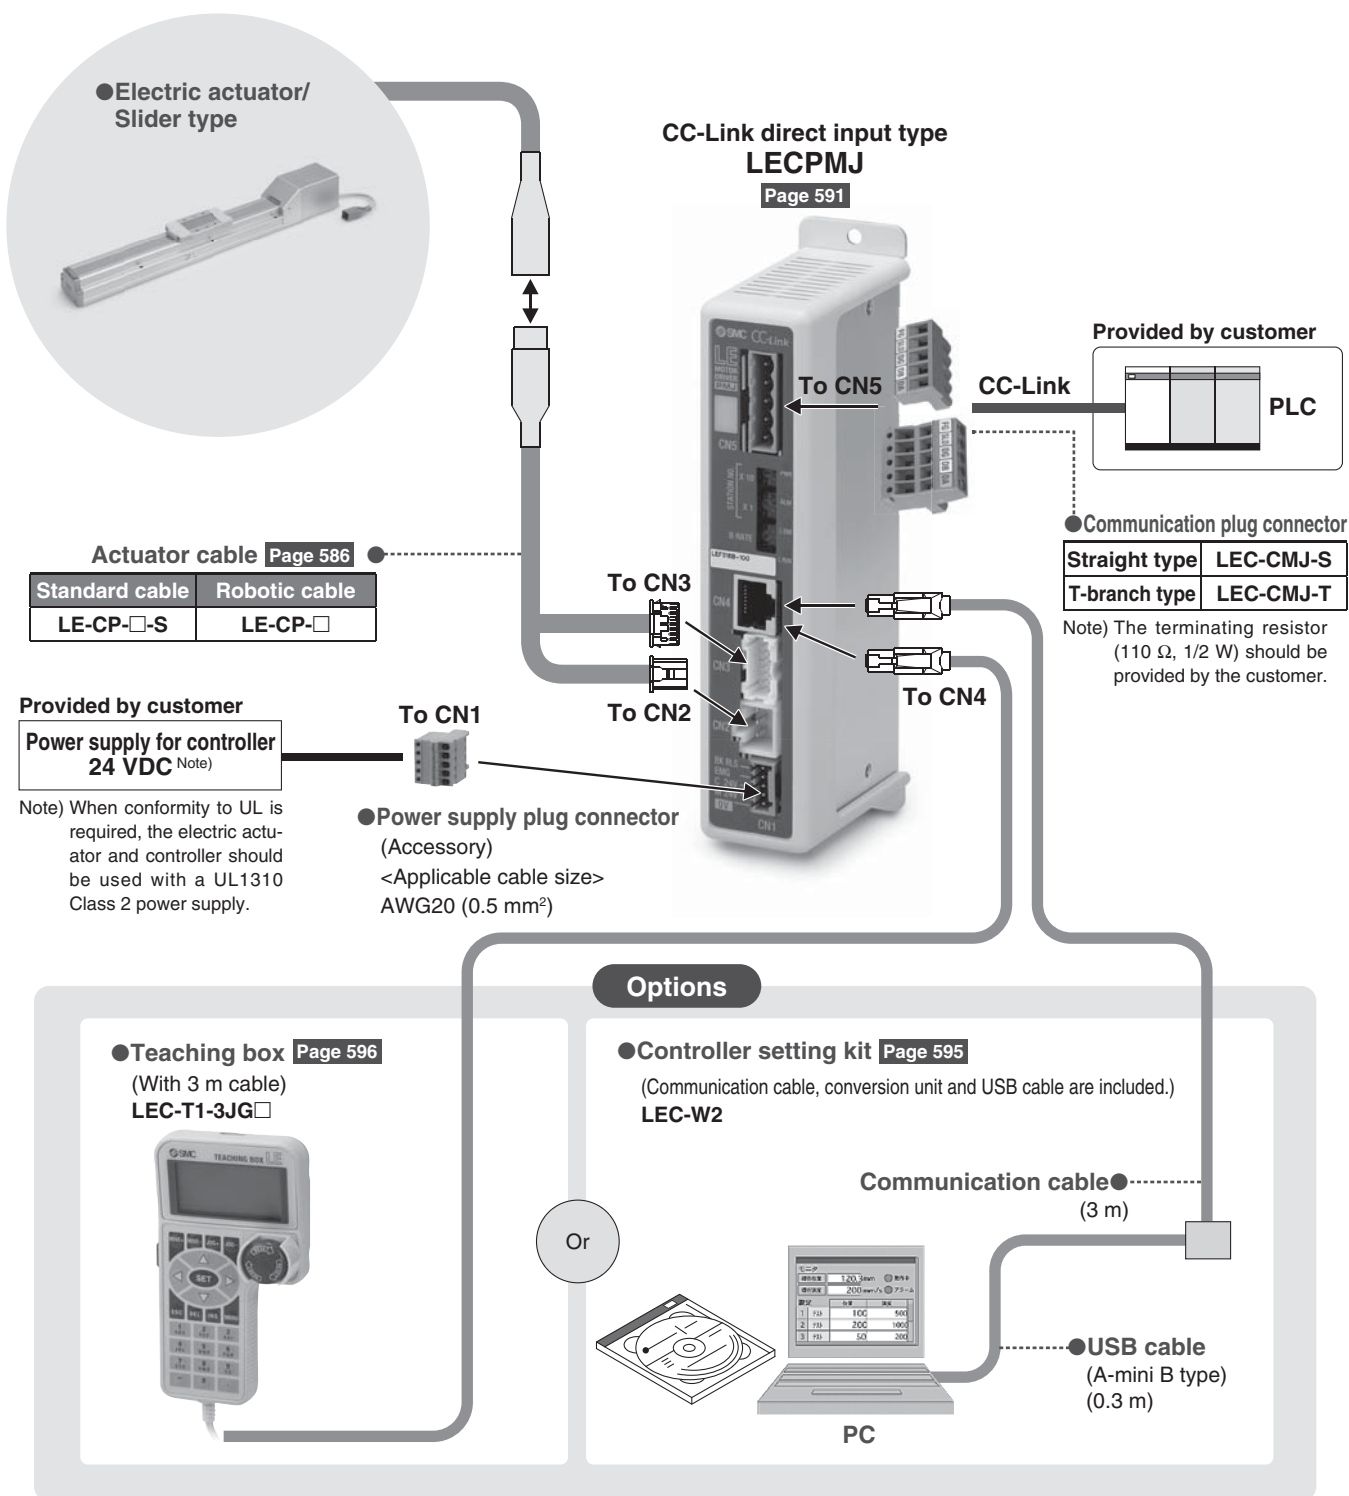


Note) Cannot be used with the programless type (LECP1).

Caution Be sure to connect the terminating resistor to both ends of the CC-Link line.

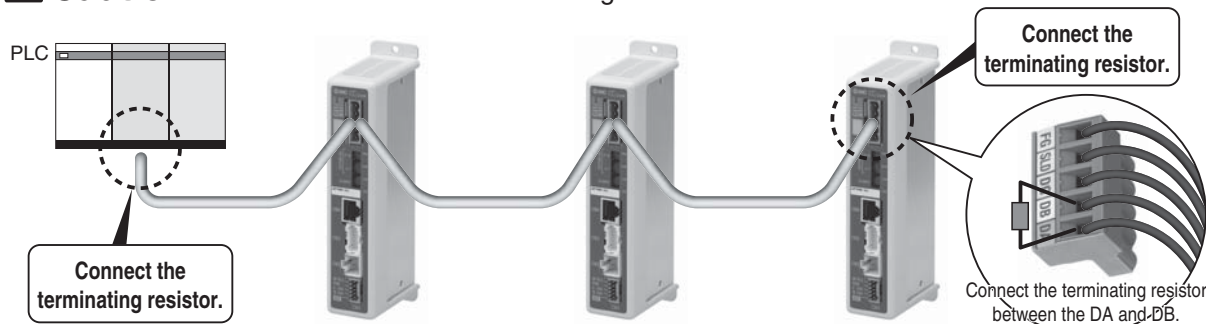

System Construction/Fieldbus Network

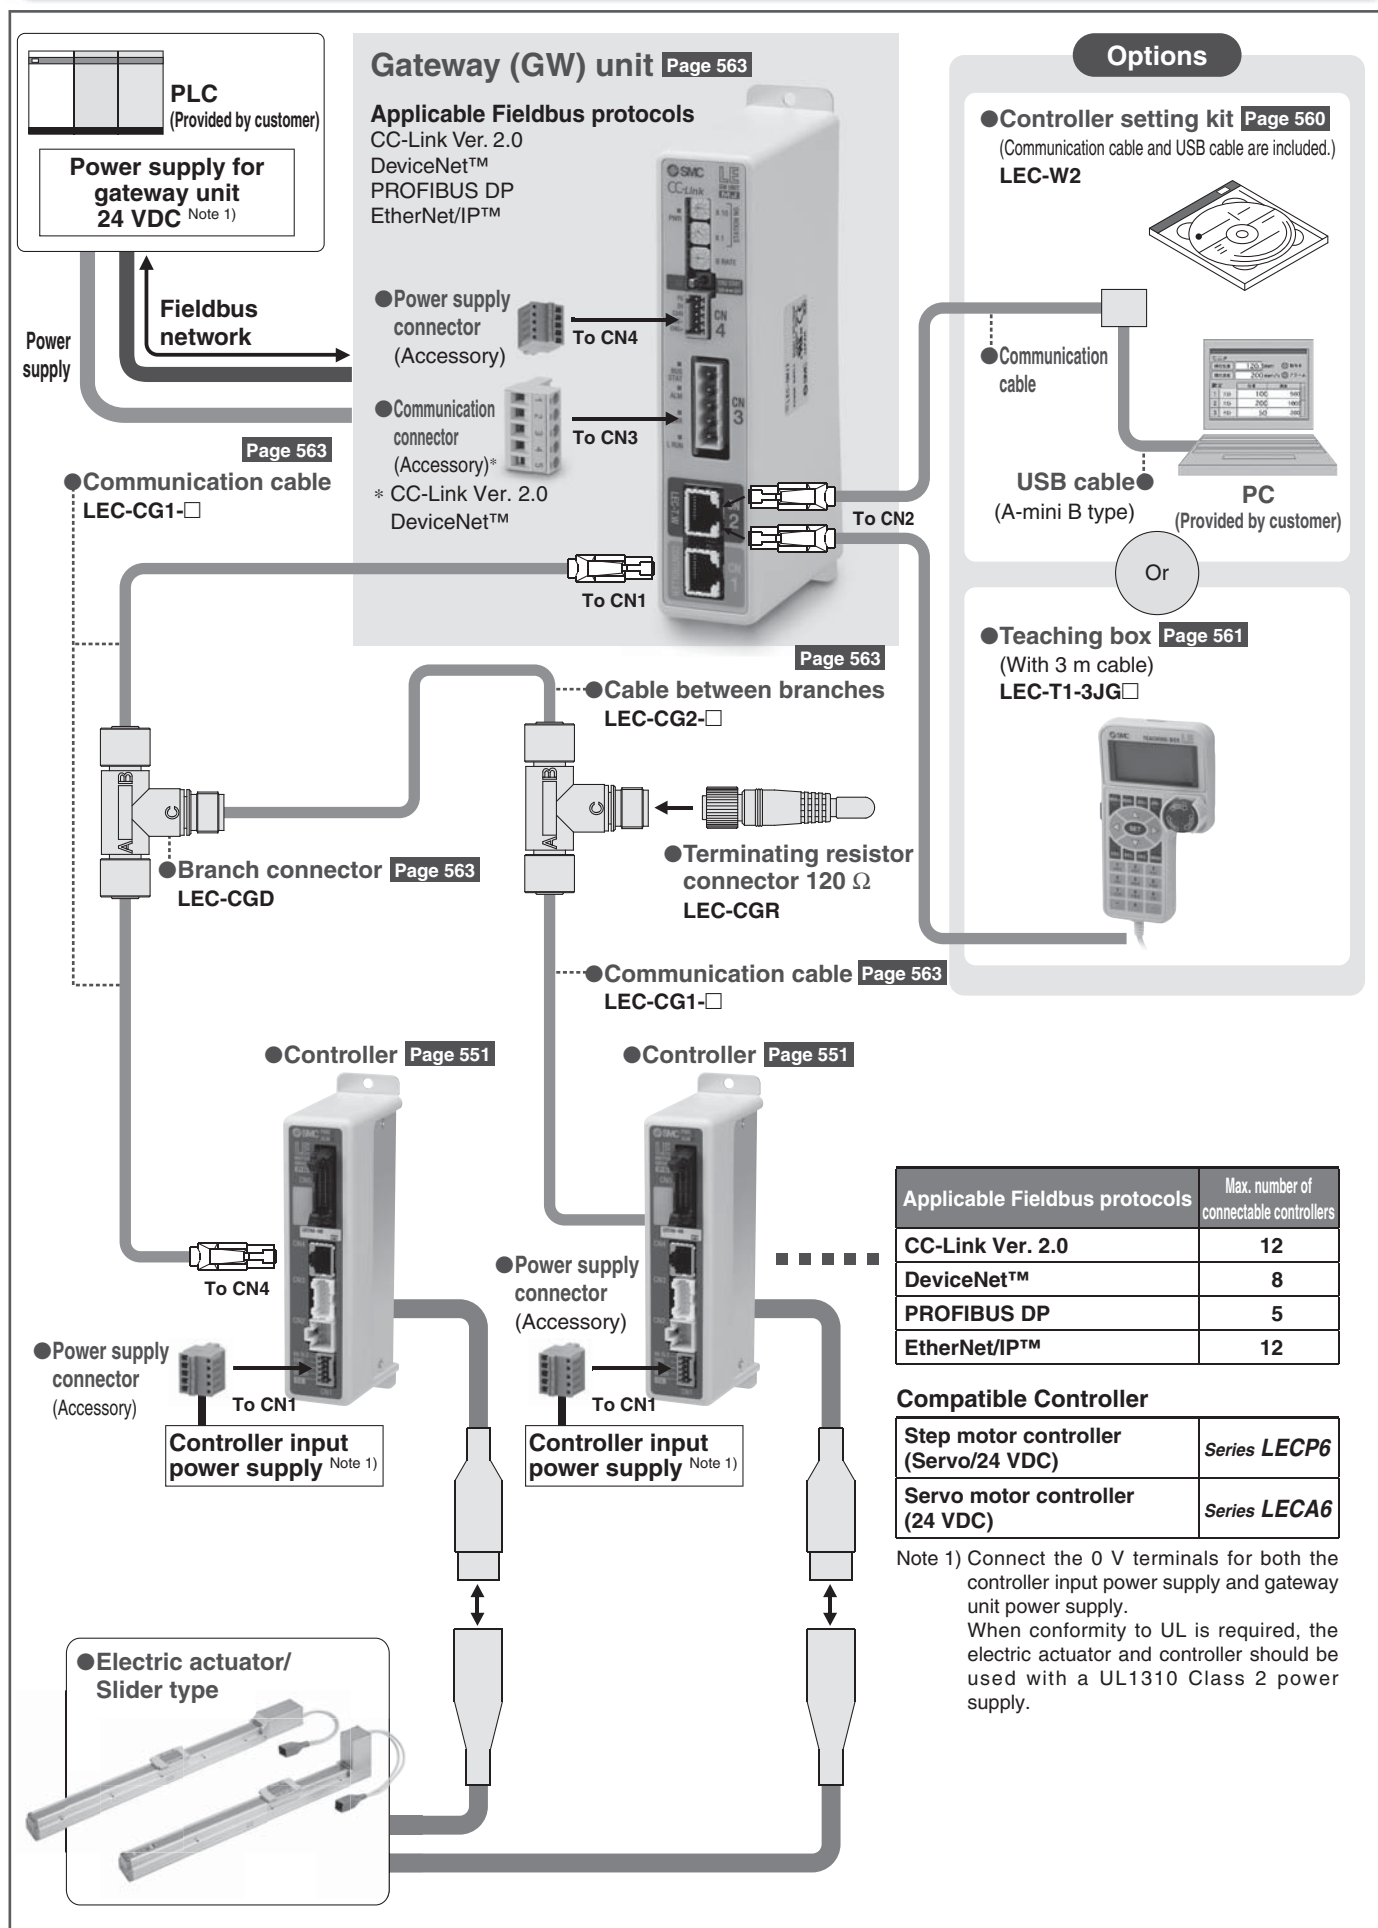

Compatible actuators

LEF	LEL	LEM
LEY	LES	LEP
LER	LEH	

* Not compatible with the LECA6.

Controller (Step Data Input Type) Step Motor (Servo/24 VDC)

Series **LECP6**

Servo Motor (24 VDC)

Series **LECA6**



Series **LECP6** Series **LECA6**



How to Order

⚠ Caution

[CE-compliant products]


① EMC compliance was tested by combining the electric actuator LE series and the controller LEC series.

The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, conformity to the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify conformity to the EMC directive for the machinery and equipment as a whole.

② For the LECA6 series (servo motor controller), EMC compliance was tested by installing a noise filter set (LEC-NFA). Refer to page 559 for the noise filter set. Refer to the LECA Operation Manual for installation.

[UL-compliant products]

When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

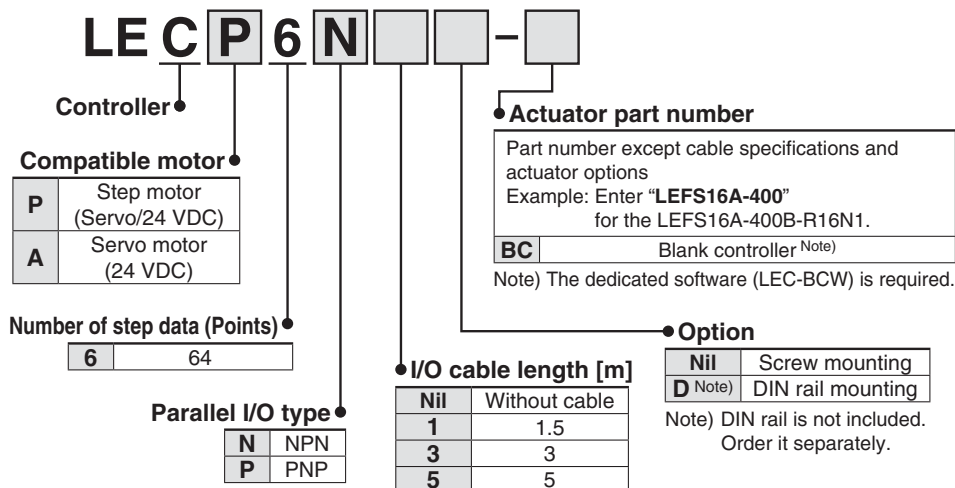


* When controller equipped type is selected when ordering the LE series, you do not need to order this controller.

The controller is sold as single unit after the compatible actuator is set.

Confirm that the combination of the controller and the actuator is correct.

<Check the following before use.>

- Check the actuator label for model number. This matches the controller.
- Check Parallel I/O configuration matches (NPN or PNP).

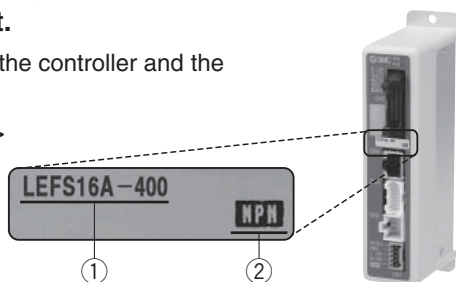

Precautions on blank controller (LEC□6□□-BC)

Blank controller is a controller to which the customer can write the data of the actuator to be combined and used. Use the dedicated software (LEC-BCW) for data writing.

- Please download the dedicated software (LEC-BCW) via our website.
- Order the controller setting kit (LEC-W2) separately to use this software.

SMC website

<http://www.smcworld.com>

* Refer to the operation Manual for using the products. Please download it via our website, <http://www.smcworld.com>

Specifications

Basic Specifications

Item	LECP6	LECA6
Compatible motor	Step motor (Servo/24 VDC)	Servo motor (24 VDC)
Power supply ^{Note 1)}	Power voltage: 24 VDC $\pm 10\%$ ^{Note 2)} [Including motor drive power, control power, stop, lock release]	Power voltage: 24 VDC $\pm 10\%$ ^{Note 2)} [Including motor drive power, control power, stop, lock release]
Parallel input	11 inputs (Photo-coupler isolation)	11 inputs (Photo-coupler isolation)
Parallel output	13 outputs (Photo-coupler isolation)	13 outputs (Photo-coupler isolation)
Compatible encoder	Incremental A/B phase (800 pulse/rotation)	Incremental A/B (800 pulse/rotation)/Z phase
Serial communication	RS485 (Modbus protocol compliant)	RS485 (Modbus protocol compliant)
Memory	EEPROM	EEPROM
LED indicator	LED (Green/Red) one of each	LED (Green/Red) one of each
Lock control	Forced-lock release terminal ^{Note 3)}	Forced-lock release terminal ^{Note 3)}
Cable length [m]	I/O cable: 5 or less, Actuator cable: 20 or less	I/O cable: 5 or less, Actuator cable: 20 or less
Cooling system	Natural air cooling	Natural air cooling
Operating temperature range [°C]	0 to 40 (No freezing)	0 to 40 (No freezing)
Operating humidity range [%RH]	90 or less (No condensation)	90 or less (No condensation)
Storage temperature range [°C]	-10 to 60 (No freezing)	-10 to 60 (No freezing)
Storage humidity range [%RH]	90 or less (No condensation)	90 or less (No condensation)
Insulation resistance [MΩ]	Between the housing and SG terminal: 50 (500 VDC)	Between the housing and SG terminal: 50 (500 VDC)
Weight [g]	150 (Screw mounting), 170 (DIN rail mounting)	150 (Screw mounting), 170 (DIN rail mounting)


Note 1) Do not use the power supply of "inrush current prevention type" for the controller power supply. When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

Note 2) The power consumption changes depending on the actuator model. Refer to the specifications of actuator for more details.


Note 3) Applicable to non-magnetizing lock.

How to Mount

a) Screw mounting (LEC□6□□-□)
(Installation with two M4 screws)

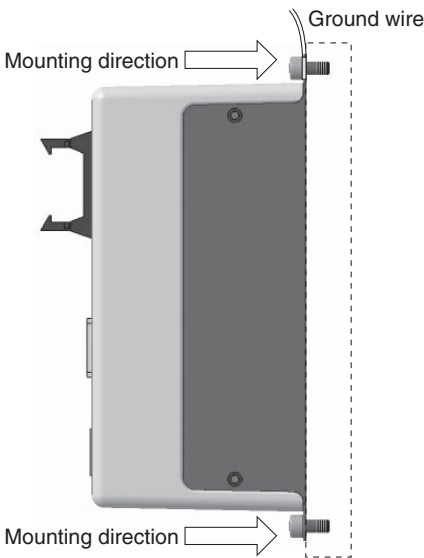


b) DIN rail mounting (LEC□6□□D-□)
(Installation with the DIN rail)

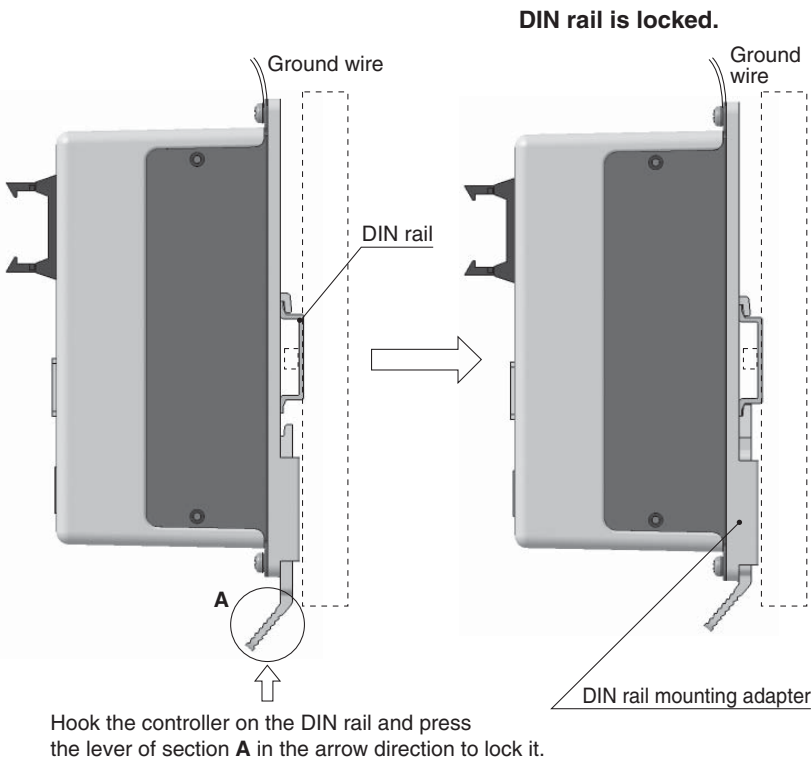

Note) When size 25 or more of the LE series are used, the space between the controllers should be 10 mm or more.

DIN rail
AXT100-DR-□

* For □, enter a number from the “No.” line in the table below.
Refer to the dimensions on page 553 for the mounting dimensions.

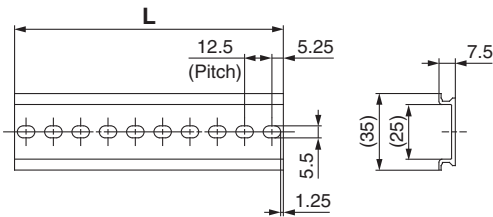

L Dimension [mm]

No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5

No.	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
L	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5

DIN rail mounting adapter
LEC-D0 (with 2 mounting screws)

This should be used when the DIN rail mounting adapter is mounted onto the screw mounting type controller afterwards.


LEFS	LEFB
LEJS	LEJB
LEL	
LEM	
LEY	LEYG
LES	LESH
LEPY	LEPS
LER	
LEH	
LEY-X5	
11-LEFS	
11-LEJS	
25A-	
LEC□	
LECS□	
LECSS-T	
LECYM	LECYU
Motorless	
LAT3	

Series LECP6


Series LECA6

Dimensions

a) Screw mounting (LEC□6□□-□)

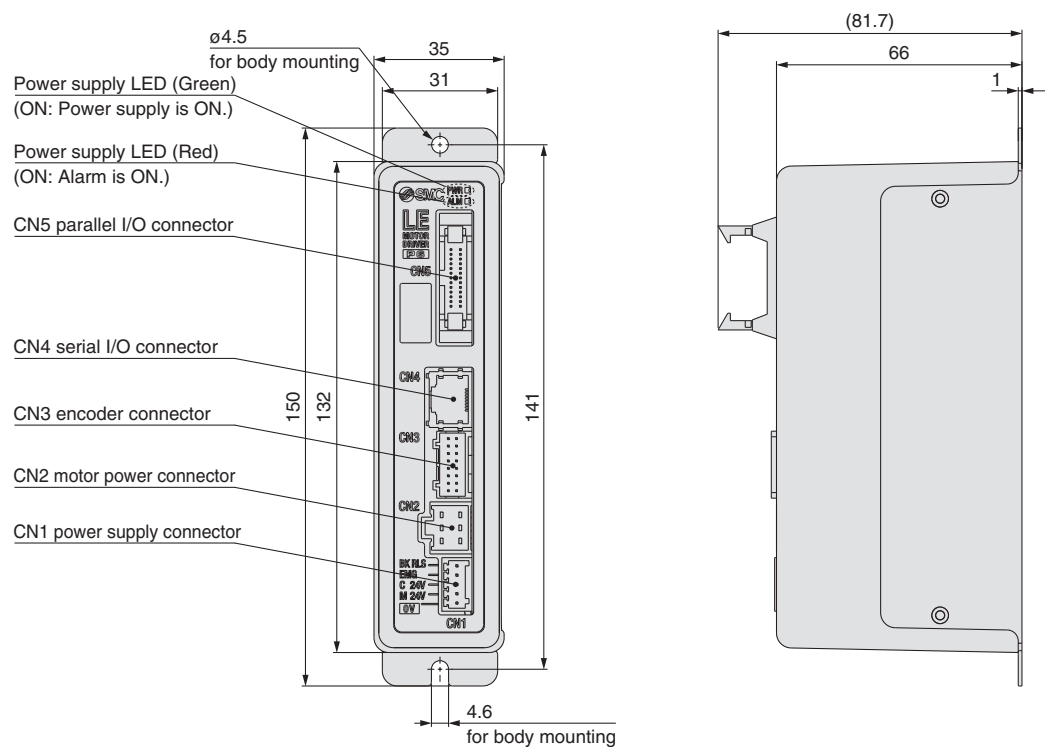

b) DIN rail mounting (LEC□6□□D-□)

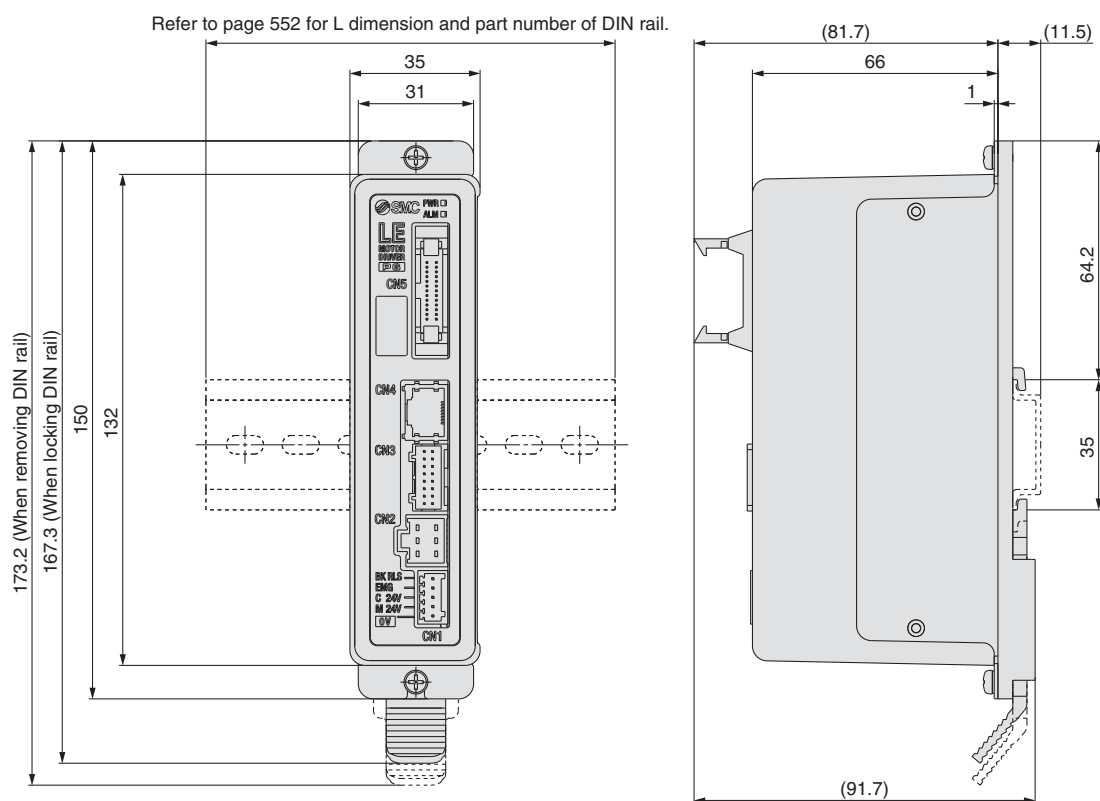

Controller (Step Data Input Type)/Step Motor (Servo/24 VDC) **Series LECP6**


Controller (Step Data Input Type)/Servo Motor (24 VDC) **Series LECA6**

Wiring Example 1

Power Supply Connector: CN1

* Power supply plug is an accessory.
<Applicable cable size> AWG20 (0.5 mm²), cover diameter 2.0 mm or less


Power supply plug for LECP6

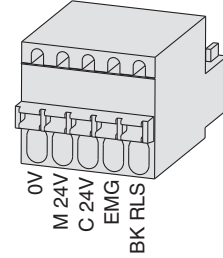

CN1 Power Supply Connector Terminal for LECP6 (PHOENIX CONTACT FK-MC0.5/5-ST-2.5)

Terminal name	Function	Details
0V	Common supply (-)	M 24V terminal/C 24V terminal/EMG terminal/BK RLS terminal are common (-).
M 24V	Motor power supply (+)	Motor power supply (+) supplied to the controller
C 24V	Control power supply (+)	Control power supply (+) supplied to the controller
EMG	Stop (+)	Input (+) for releasing the stop
BK RLS	Lock release (+)	Input (+) for releasing the lock

Power supply plug for LECA6

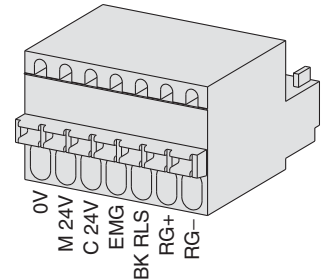

CN1 Power Supply Connector Terminal for LECA6 (PHOENIX CONTACT FK-MC0.5/7-ST-2.5)

Terminal name	Function	Details
0V	Common supply (-)	M 24V terminal/C 24V terminal/EMG terminal/BK RLS terminal are common (-).
M 24V	Motor power supply (+)	Motor power supply (+) supplied to the controller
C 24V	Control power supply (+)	Control power supply (+) supplied to the controller
EMG	Stop (+)	Input (+) for releasing the stop
BK RLS	Lock release (+)	Input (+) for releasing the lock
RG+	Regenerative output 1	Regenerative output terminals for external connection
RG-	Regenerative output 2	(Not necessary to connect them in the combination with the LE series standard specifications.)


Wiring Example 2

Parallel I/O Connector: CN5


* When you connect a PLC, etc., to the CN5 parallel I/O connector, please use the I/O cable (LEC-CN5-□).
* The wiring should be changed depending on the type of the parallel I/O (NPN or PNP).

Wiring diagram

LEC□6N□□-□ (NPN)

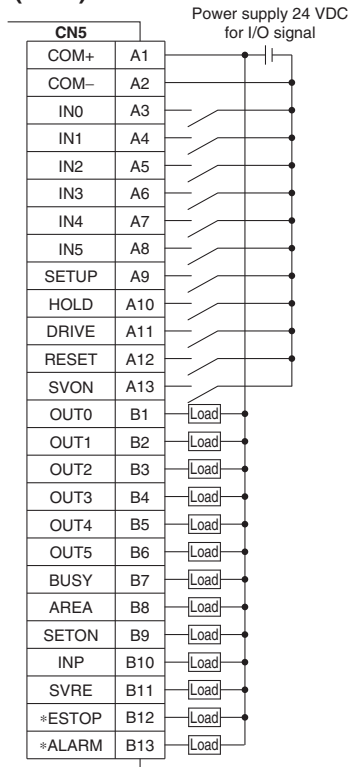

LEC□6P□□-□ (PNP)

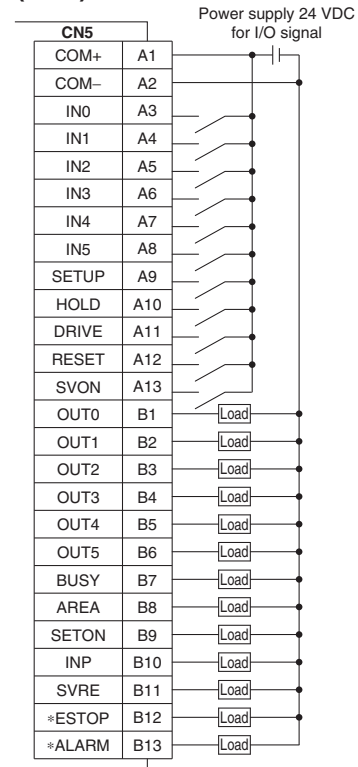

Input Signal

Name	Details
COM+	Connects the power supply 24 V for input/output signal
COM-	Connects the power supply 0 V for input/output signal
IN0 to IN5	Step data specified Bit No. (Input is instructed in the combination of IN0 to 5.)
SETUP	Instruction to return to origin
HOLD	Operation is temporarily stopped
DRIVE	Instruction to drive
RESET	Alarm reset and operation interruption
SVON	Servo ON instruction

Output Signal

Name	Details
OUT0 to OUT5	Outputs the step data no. during operation
BUSY	Outputs when the actuator is moving
AREA	Outputs within the step data area output setting range
SETON	Outputs when returning to origin
INP	Outputs when target position or target force is reached (Turns on when the positioning or pushing is completed.)
SVRE	Outputs when servo is on
*ESTOP (Note)	Not output when EMG stop is instructed
*ALARM (Note)	Not output when alarm is generated


(Note) Signal of negative-logic circuit (N.C.)

Step Data Setting

1. Step data setting for positioning

In this setting, the actuator moves toward and stops at the target position.

The following diagram shows the setting items and operation. The setting items and set values for this operation are stated below.

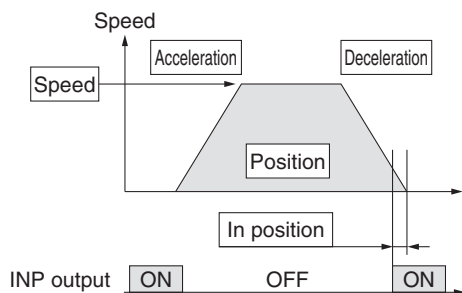

◎ : Need to be set.
○ : Need to be adjusted as required.
— : Setting is not required.


Step Data (Positioning)

Necessity	Item	Details
◎	Movement MOD	When the absolute position is required, set Absolute. When the relative position is required, set Relative.
◎	Speed	Transfer speed to the target position
◎	Position	Target position
○	Acceleration	Parameter which defines how rapidly the actuator reaches the speed set. The higher the set value, the faster it reaches the speed set.
○	Deceleration	Parameter which defines how rapidly the actuator comes to stop. The higher the set value, the quicker it stops.
◎	Pushing force	Set 0. (If values 1 to 100 are set, the operation will be changed to the pushing operation.)
—	Trigger LV	Setting is not required.
—	Pushing speed	Setting is not required.
○	Moving force	Max. torque during the positioning operation (No specific change is required.)
○	Area 1, Area 2	Condition that turns on the AREA output signal.
○	In position	Condition that turns on the INP output signal. When the actuator enters the range of [in position], the INP output signal turns on. (It is unnecessary to change this from the initial value.) When it is necessary to output the arrival signal before the operation is completed, make the value larger.

2. Step data setting for pushing

The actuator moves toward the pushing start position, and when it reaches that position, it starts pushing with the set force or less.

The following diagram shows the setting items and operation. The setting items and set values for this operation are stated below.

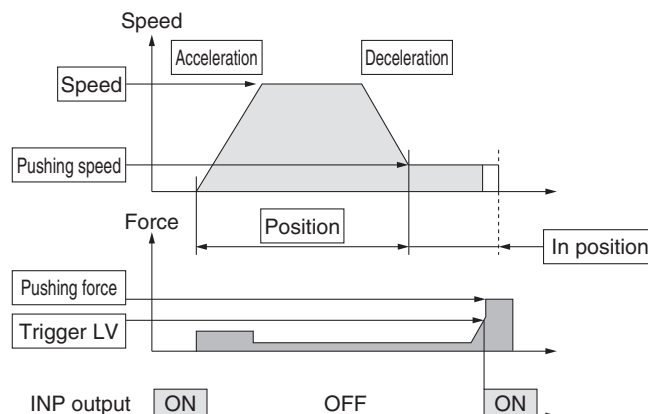


◎ : Need to be set.
○ : Need to be adjusted as required.

Step Data (Pushing)

Necessity	Item	Details
◎	Movement MOD	When the absolute position is required, set Absolute. When the relative position is required, set Relative.
◎	Speed	Transfer speed to the pushing start position
◎	Position	Pushing start position
○	Acceleration	Parameter which defines how rapidly the actuator reaches the speed set. The higher the set value, the faster it reaches the speed set.
○	Deceleration	Parameter which defines how rapidly the actuator comes to stop. The higher the set value, the quicker it stops.
◎	Pushing force	Pushing force ratio is defined. The setting range differs depending on the electric actuator type. Refer to the operation manual for the electric actuator.
◎	Trigger LV	Condition that turns on the INP output signal. The INP output signal turns on when the generated force exceeds the value. Trigger level should be the pushing force or less.
○	Pushing speed	Pushing speed during pushing. When the speed is set fast, the electric actuator and workpieces might be damaged due to the impact when they hit the end, so this set value should be smaller. Refer to the operation manual for the electric actuator.
○	Moving force	Max. torque during the positioning operation (No specific change is required.)
○	Area 1, Area 2	Condition that turns on the AREA output signal.
◎	In position	Transfer distance during pushing. If the transferred distance exceeds the setting, it stops even if it is not pushing. If the transfer distance is exceeded, the INP output signal will not turn on.


Signal Timing

Return to Origin

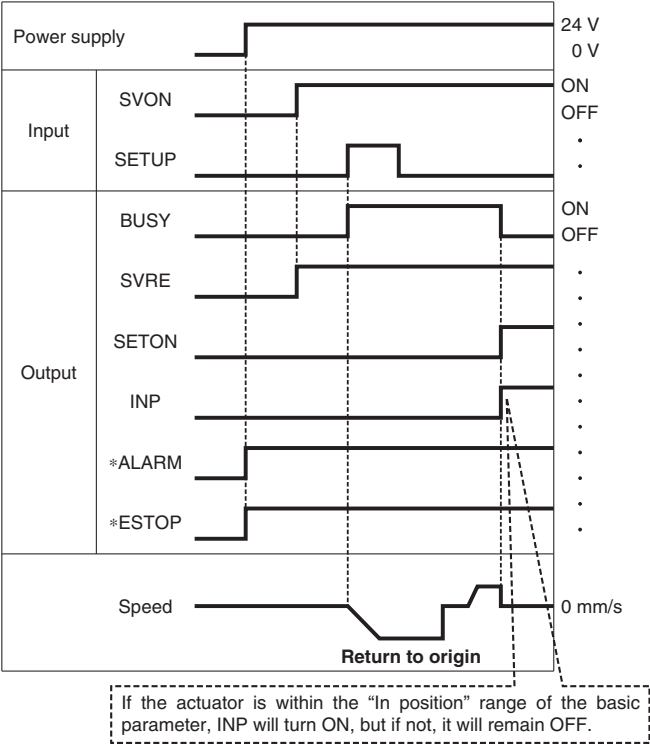


*"ALARM" and "*ESTOP" are expressed as negative-logic circuit.

Positioning Operation

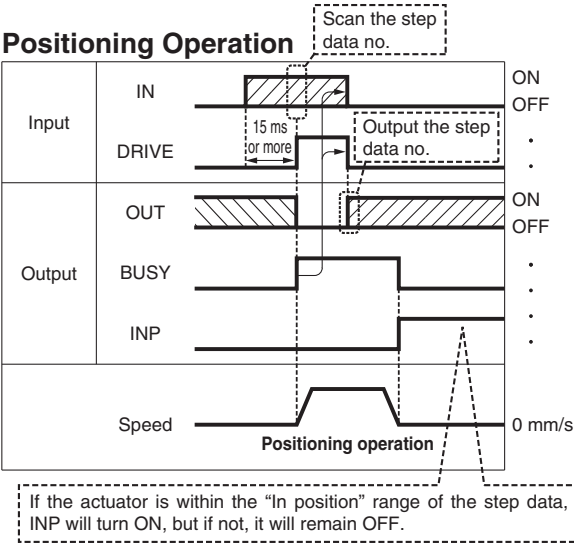


*"OUT" is output when "DRIVE" is changed from ON to OFF.
 (When power supply is applied, "DRIVE" or "RESET" is turned ON or "*ESTOP" is turned OFF, all of the "OUT" outputs are OFF.)

HOLD

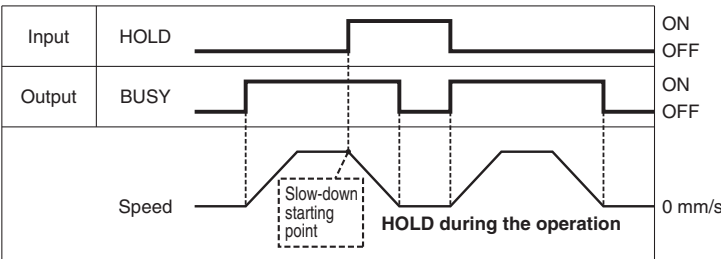


* When the actuator is within the "In position" range in the pushing operation, it does not stop even if HOLD signal is input.

Pushing Operation

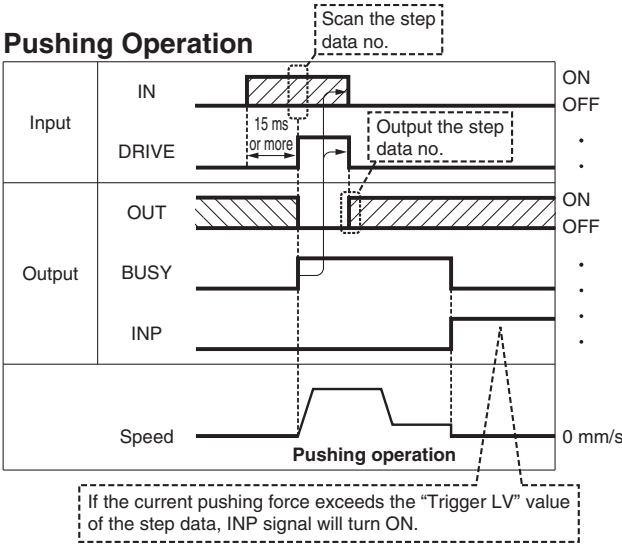

Reset

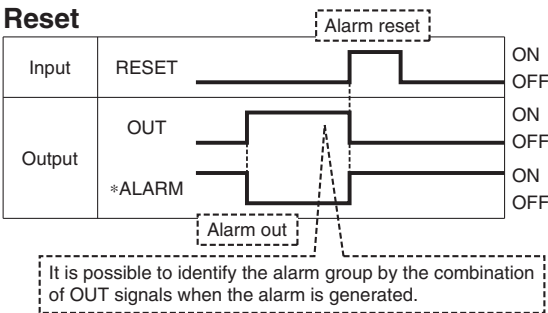

* "ALARM" is expressed as negative-logic circuit.

LEFS
LEJB
LEL
LEM
LEY
LESH
LEPY
LER
LEH
LEY-X5
11-LEFS
11-LEJS
25A-
LEC
LECS
LECS-T
LECYM
LECYU
Motorless
LAT3

Series LECP6

Series LECA6

Options: Actuator Cable

[Robotic cable, standard cable for step motor (Servo/24 VDC)]

LE-CP-1-

Cable length (L) [m]


1	1.5
3	3
5	5
8	8*
A	10*
B	15*
C	20*

* Produced upon receipt of order (Robotic cable only)


Cable type

Nil	Robotic cable (Flexible cable)
S	Standard cable

LE-CP- $\frac{1}{5}$ /Cable length: 1.5 m, 3 m, 5 m

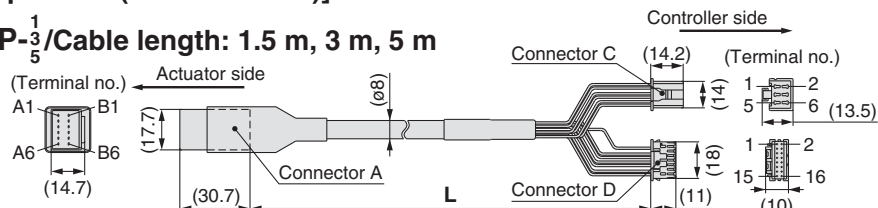

LE-CP- $\frac{8}{AC}$ /Cable length: 8 m, 10 m, 15 m, 20 m
(* Produced upon receipt of order)

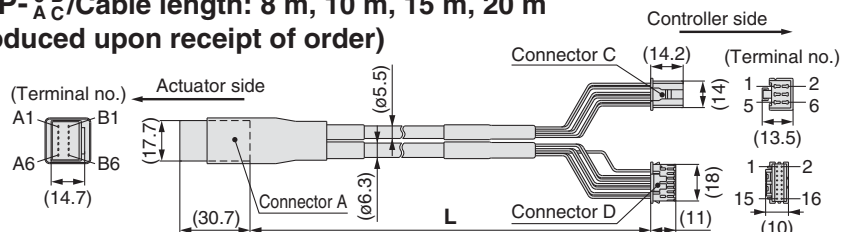

Signal	Connector A terminal no.	Cable color	Connector C terminal no.
A	B-1	Brown	2
A	A-1	Red	1
B	B-2	Orange	6
B	A-2	Yellow	5
COM-A/COM	B-3	Green	3
COM-B/-	A-3	Blue	4
Shield			
Vcc	B-4	Brown	12
GND	A-4	Black	13
A	B-5	Red	7
A	A-5	Black	6
B	B-6	Orange	9
B	A-6	Black	8
			3

[Robotic cable, standard cable with lock and sensor for step motor (Servo/24 VDC)]

LE-CP-1-B-

Cable length (L) [m]

1	1.5
3	3
5	5
8	8*
A	10*
B	15*
C	20*


* Produced upon receipt of order (Robotic cable only)

With lock and sensor


Cable type

Nil	Robotic cable (Flexible cable)
S	Standard cable

LE-CP- $\frac{1}{5}$ /Cable length: 1.5 m, 3 m, 5 m

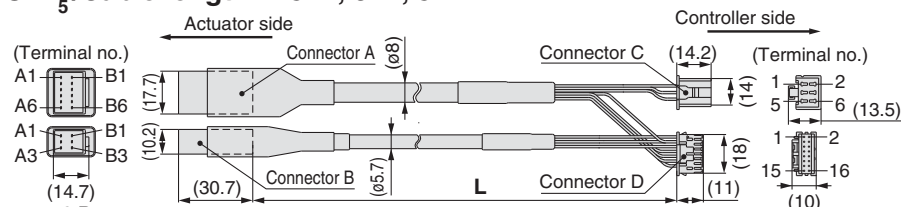

LE-CP- $\frac{8}{AC}$ /Cable length: 8 m, 10 m, 15 m, 20 m
(* Produced upon receipt of order)

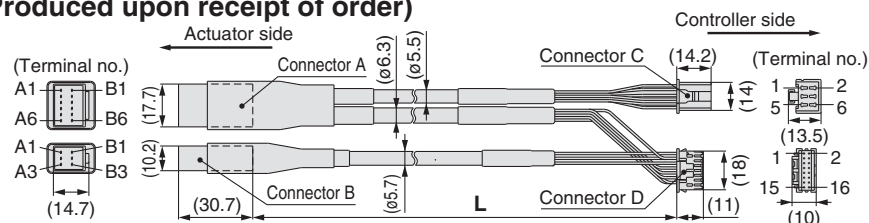

Signal	Connector A terminal no.	Cable color	Connector C terminal no.
A	B-1	Brown	2
A	A-1	Red	1
B	B-2	Orange	6
B	A-2	Yellow	5
COM-A/COM	B-3	Green	3
COM-B/-	A-3	Blue	4
Shield			
Vcc	B-4	Brown	12
GND	A-4	Black	13
A	B-5	Red	7
A	A-5	Black	6
B	B-6	Orange	9
B	A-6	Black	8
			3
Signal	Connector B terminal no.	Cable color	Connector D terminal no.
Lock (+)	B-1	Red	4
Lock (-)	A-1	Black	5
Sensor (+) (Note)	B-3	Brown	1
Sensor (-) (Note)	A-3	Blue	2

Note) Not used for the LE series.

[Robotic cable for servo motor (24 VDC)]


LE-CA-1

Cable length (L) [m]

1	1.5
3	3
5	5
8	8*
A	10*
B	15*
C	20*

* Produced upon receipt of order

LE-CA-

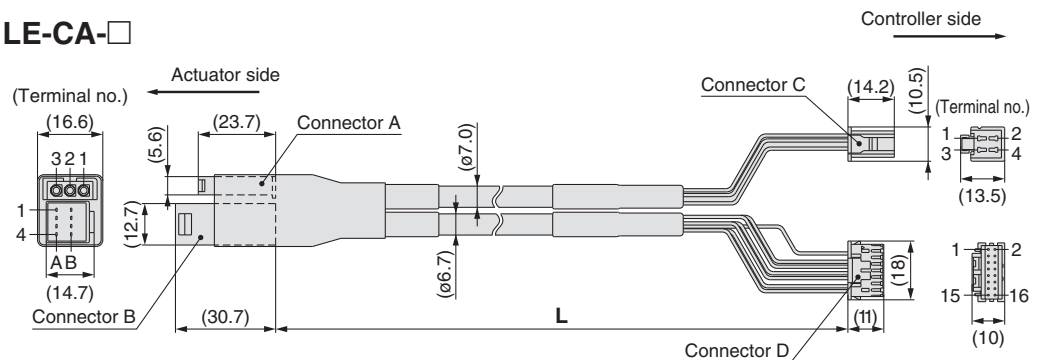

Signal	Connector A terminal no.	Cable color	Connector C terminal no.
U	1	Red	1
V	2	White	2
W	3	Black	3

Signal	Connector B terminal no.	Cable color	Connector D terminal no.
Vcc	B-1	Brown	12
GND	A-1	Black	13
A	B-2	Red	7
A	A-2	Black	6
B	B-3	Orange	9
B	A-3	Black	8
Z	B-4	Yellow	11
Z	A-4	Black	10
		—	3

Connection of shield material

[Robotic cable with lock and sensor for servo motor (24 VDC)]

LE-CA-1-B


Cable length (L) [m]

1	1.5
3	3
5	5
8	8*
A	10*
B	15*
C	20*

* Produced upon receipt of order

With lock and sensor

LE-CA-B

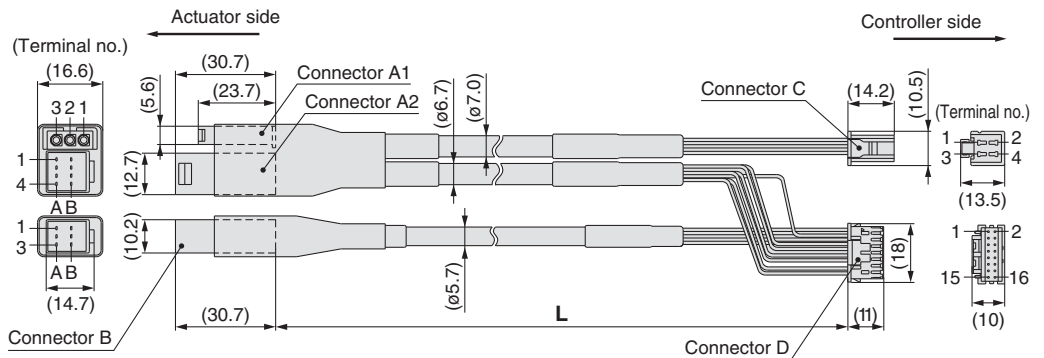

Signal	Connector A1 terminal no.	Cable color	Connector C terminal no.
U	1	Red	1
V	2	White	2
W	3	Black	3

Signal	Connector A2 terminal no.	Cable color	Connector D terminal no.
Vcc	B-1	Brown	12
GND	A-1	Black	13
A	B-2	Red	7
A	A-2	Black	6
B	B-3	Orange	9
B	A-3	Black	8
Z	B-4	Yellow	11
Z	A-4	Black	10
		—	3

Signal	Connector B terminal no.	Cable color	Connector D terminal no.
Lock (+)	B-1	Red	4
Lock (-)	A-1	Black	5
Sensor (+) ^{Note)}	B-3	Brown	1
Sensor (-) ^{Note)}	A-3	Black	2

Connection of shield material

Note) Not used for the LE series.

Series
LECP6


Series
LECA6

Option: I/O Cable

LEC – CN5 – 1

Cable length (L) [m]	
1	1.5
3	3
5	5

* Conductor size: AWG28

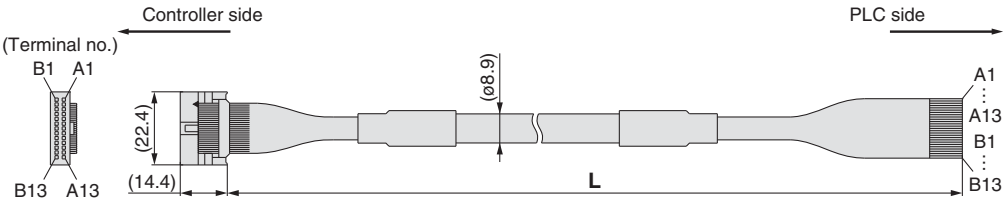


Connector pin no.	Insulation color	Dot mark	Dot color
A1	Light brown	■	Black
A2	Light brown	■	Red
A3	Yellow	■	Black
A4	Yellow	■	Red
A5	Light green	■	Black
A6	Light green	■	Red
A7	Gray	■	Black
A8	Gray	■	Red
A9	White	■	Black
A10	White	■	Red
A11	Light brown	■ ■	Black
A12	Light brown	■ ■	Red
A13	Yellow	■ ■	Black

Connector pin no.	Insulation color	Dot mark	Dot color
B1	Yellow	■ ■	Red
B2	Light green	■ ■	Black
B3	Light green	■ ■	Red
B4	Gray	■ ■	Black
B5	Gray	■ ■	Red
B6	White	■ ■	Black
B7	White	■ ■	Red
B8	Light brown	■ ■ ■	Black
B9	Light brown	■ ■ ■	Red
B10	Yellow	■ ■ ■	Black
B11	Yellow	■ ■ ■	Red
B12	Light green	■ ■ ■	Black
B13	Light green	■ ■ ■	Red
—	Shield		

Option: Noise Filter Set for Servo Motor (24 VDC)

LEC – NFA

Contents of the set: 2 noise filters (Manufactured by WURTH ELEKTRONIK: 74271222)

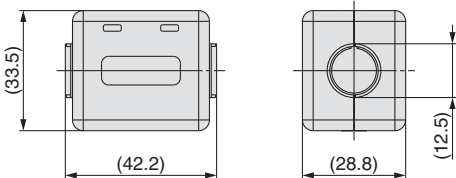

* Refer to the LECA6 series Operation Manual for installation.

Controller Setting Kit/LEC-W2

How to Order


LEC-W2

Controller setting kit
(Japanese and English are available.)

Contents

	Description	Model*
①	Controller setting software (CD-ROM)	LEC-W2-S
②	Communication cable	LEC-W2-C
③	USB cable (between the PC and the communication cable)	LEC-W2-U

* Can be ordered separately.

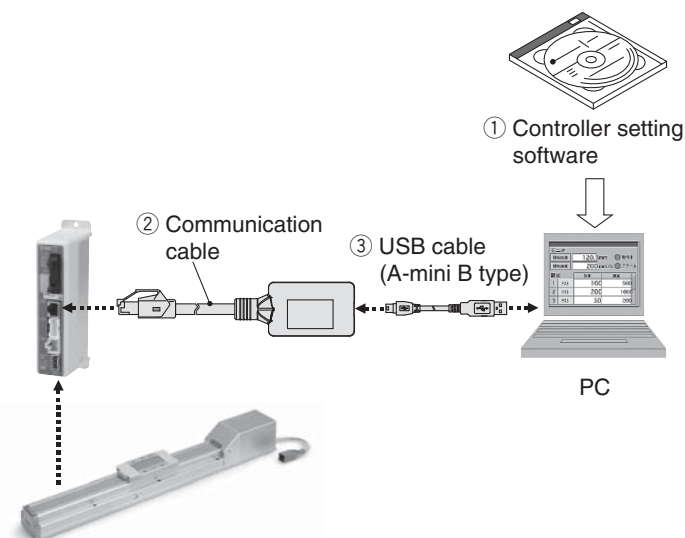

Compatible Controller/Driver

Step data input type

Pulse input type

CC-Link direct input type

Series **LECP6**/Series **LECA6**

Series **LECPA**

Series **LECPMJ**

Hardware Requirements


OS	IBM PC/AT compatible machine running Windows®XP (32-bit), Windows®7 (32-bit and 64-bit), Windows®8.1 (32-bit and 64-bit).
Communication interface	USB 1.1 or USB 2.0 ports
Display	XGA (1024 x 768) or more

* Windows®XP, Windows®7 and Windows®8.1 are registered trademarks of Microsoft Corporation in the United States.

* Refer to SMC website for version upgrade information, <http://www.smcworld.com>

Screen Example


Easy mode screen example

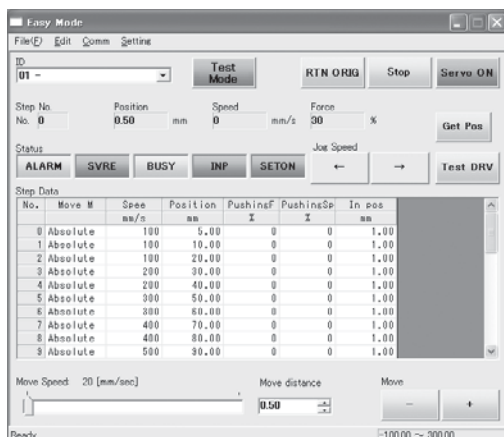

Easy operation and simple setting

- Allowing to set and display actuator step data such as position, speed, force, etc.
- Setting of step data and test drive can be performed on the same page.
- Can be used to jog and move at a constant rate.

Normal mode screen example

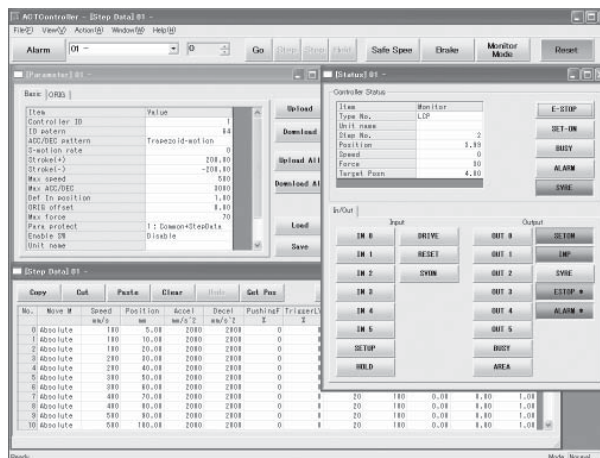

Detailed setting

- Step data can be set in detail.
- Signals and terminal status can be monitored.
- Parameters can be set.
- JOG and constant rate movement, return to origin, test drive and testing of forced output can be performed.

Series LEC Teaching Box/LEC-T1



How to Order



LEC-T1-3 J G

Teaching box

Cable length [m]
3 3

Initial language

J	Japanese
E	English

Enable switch

Nil	None
S	Equipped with enable switch

* Interlock switch for jog and test function

Stop switch

G Equipped with stop switch

* The displayed language can be changed to English or Japanese.

Specifications

Item	Description
Switch	Stop switch, Enable switch (Option)
Cable length [m]	3
Enclosure	IP64 (Except connector)
Operating temperature range [°C]	5 to 50
Operating humidity range [%RH]	90 or less (No condensation)
Weight [g]	350 (Except cable)

[CE-compliant products]

The EMC compliance of the teaching box was tested with the LEC6 series step motor controller (servo/24 VDC) and an applicable actuator.

[UL-compliant products]

When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

Standard functions

- Chinese character display
- Stop switch is provided.


Option

- Enable switch is provided.

Easy Mode

Function	Details
Step data	• Setting of step data
Jog	• Jog operation • Return to origin
Test	• 1 step operation • Return to origin
Monitor	• Display of axis and step data no. • Display of two items selected from Position, Speed, Force.
ALM	• Active alarm display • Alarm reset
TB setting	• Reconnection of axis (Ver. 1.**) • Displayed language setting (Ver. 2.**) • Setting of easy/normal mode • Setting step data and selection of items from easy mode monitor


Menu Operations Flowchart

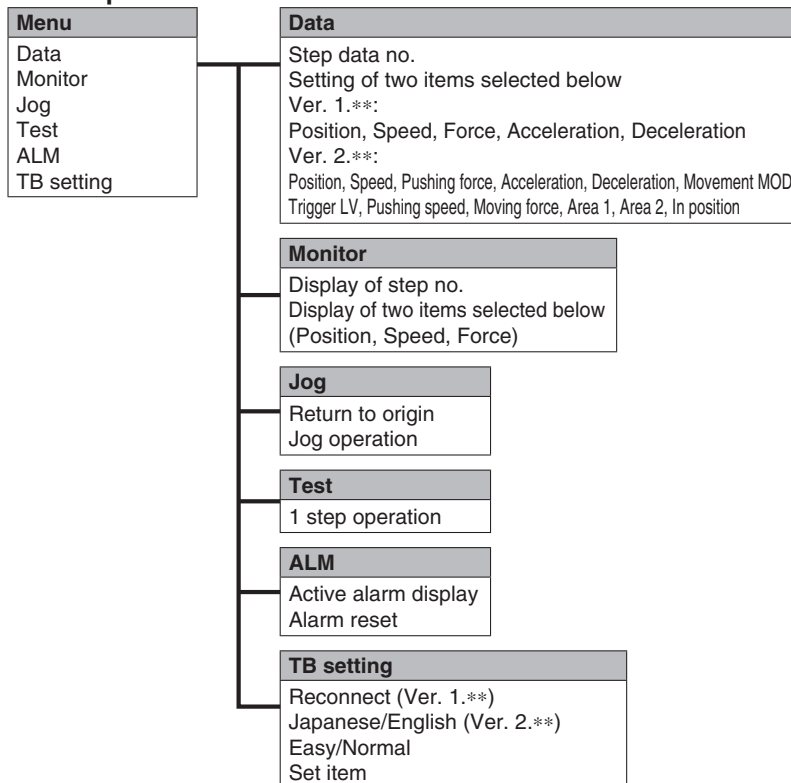


Normal Mode

Function	Details
Step data	• Step data setting
Parameter	• Parameters setting
Test	• Jog operation/Constant rate movement • Return to origin • Test drive (Specify a maximum of 5 step data and operate.) • Forced output (Forced signal output, Forced terminal output)
Monitor	• Drive monitor • Output signal monitor • Input signal monitor • Output terminal monitor • Input terminal monitor
ALM	• Active alarm display (Alarm reset) • Alarm log record display
File	• Data saving Save the step data and parameters of the controller which is being used for communication (it is possible to save four files, with one set of step data and parameters defined as one file). • Load to controller Loads the data which is saved in the teaching box to the controller which is being used for communication. • Delete the saved data. • File protection (Ver. 2.**)
TB setting	• Display setting (Easy/Normal mode) • Language setting (Japanese/English) • Backlight setting • LCD contrast setting • Beep sound setting • Max. connection axis • Distance unit (mm/inch)
Reconnect	• Reconnection of axis

Menu Operations Flowchart

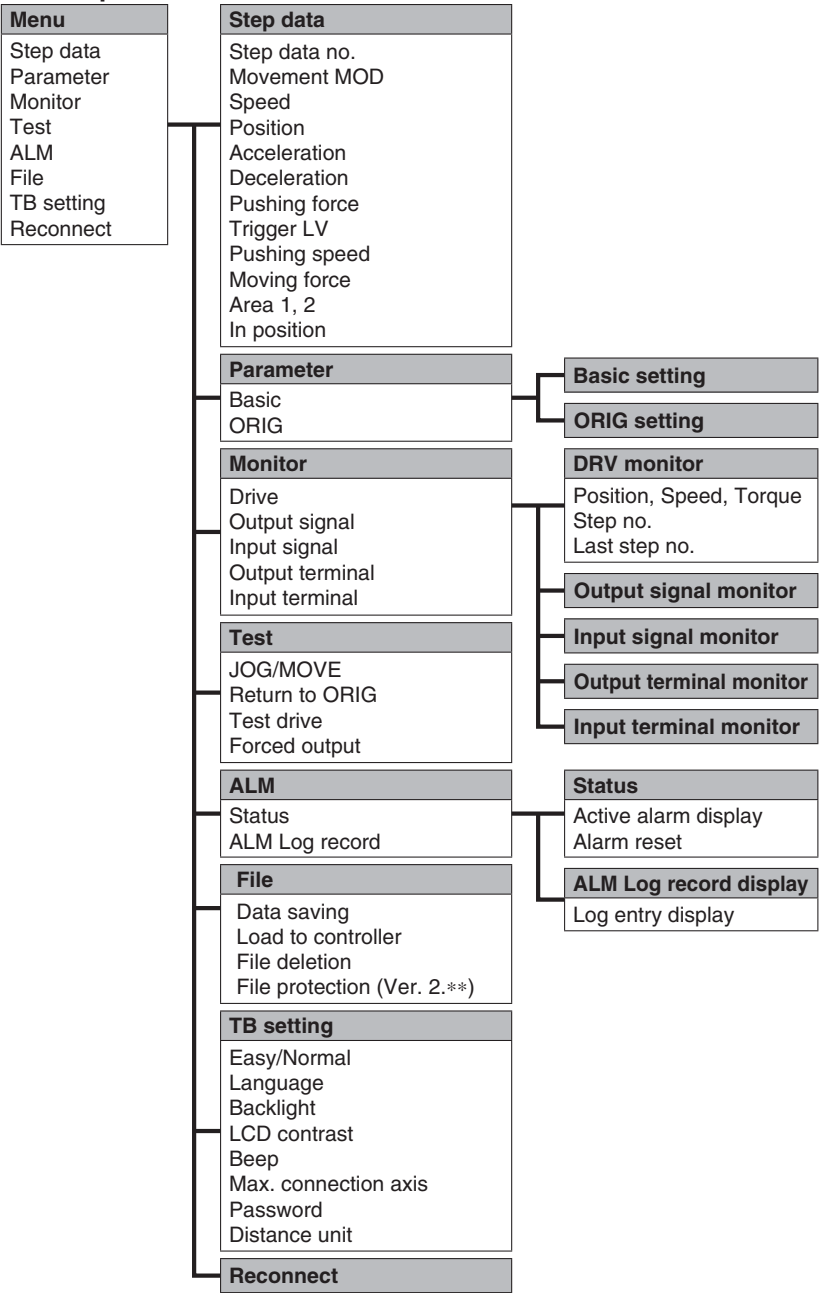

Dimensions

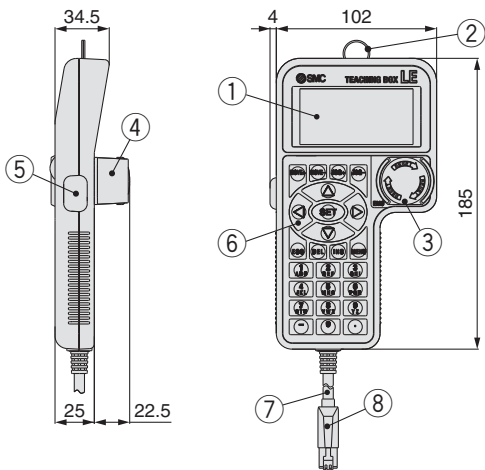

No.	Description	Function
1	LCD	A screen of liquid crystal display (with backlight)
2	Ring	A ring for hanging the teaching box
3	Stop switch	When switch is pushed in, the switch locks and stops. The lock is released when it is turned to the right.
4	Stop switch guard	A guard for the stop switch
5	Enable switch (Option)	Prevents unintentional operation (unexpected operation) of the jog test function. Other functions such as data change are not covered.
6	Key switch	Switch for each input
7	Cable	Length: 3 meters
8	Connector	A connector connected to CN4 of the controller

LEFS
LEJB
LEJ
LEM
LEYG
LESH
LEPS
LER
LEH
LEY-X5
11-LEFS
11-LEJS
25A-
LEC
LECS
LECS-T
LECYM
LECYU
Motorless
LAT3

Gateway Unit

Series LEC-G



How to Order

⚠ Caution

[CE-compliant products]

EMC compliance was tested by combining the electric actuator LE series and the controller LEC series. The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, conformity to the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify conformity to the EMC directive for the machinery and equipment as a whole.

[UL-compliant products]

When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

Gateway unit LEC-G MJ2

Applicable Fieldbus protocols

MJ2	CC-Link Ver. 2.0
DN1	DeviceNet™
PR1	PROFIBUS DP
EN1	EtherNet/IP™

Mounting

Nil	Screw mounting
D (Note)	DIN rail mounting

Note) DIN rail is not included.
Order it separately.



Cable


LEC-CG 1-L

Cable type

1	Communication cable
2	Cable between branches

Cable length

K	0.3 m
L	0.5 m
1	1 m

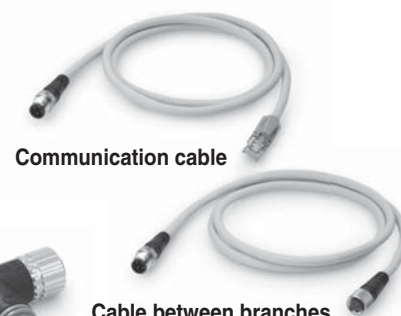

Branch connector LEC-CGD

Branch connector



Terminating resistor LEC-CGR

Specifications

Model			LEC-GMJ2□		LEC-GDN1□	LEC-GPR1□	LEC-GEN1□
Communication specifications	Applicable system	Fieldbus	CC-Link		DeviceNet™	PROFIBUS DP	EtherNet/IP™
		Version <small>Note 1)</small>	Ver. 2.0		Release 2.0	V1	Release 1.0
	Communication speed [bps]		156 k/625 k/2.5 M /5 M/10 M		125 k/250 k/500 k	9.6 k/19.2 k/45.45 k/ 93.75 k/187.5 k/500 k/ 1.5 M/3 M/6 M/12 M	10 M/100 M
	Configuration file <small>Note 2)</small>		—		EDS file	GSD file	EDS file
	I/O occupation area		4 stations occupied (8 times setting)	Input 896 points 108 words Output 896 points 108 words	Input 200 bytes Output 200 bytes	Input 57 words Output 57 words	Input 256 bytes Output 256 bytes
	Power supply for communication	Power supply voltage [V] <small>Note 6)</small>	—		11 to 25 VDC	—	—
		Internal current consumption [mA]	—		100	—	—
	Communication connector specifications		Connector (Accessory)		Connector (Accessory)	D-sub	RJ45
Terminating resistor		Not included		Not included	Not included	Not included	
Power supply voltage [V] <small>Note 6)</small>			24 VDC ±10%				
Current consumption [mA]	Not connected to teaching box		200				
	Connected to teaching box		300				
EMG output terminal			30 VDC 1 A				
Controller specifications	Applicable controllers		Series LEC6, Series LECA6				
	Communication speed [bps] <small>Note 3)</small>		115.2 k/230.4 k				
	Max. number of connectable controllers <small>Note 4)</small>		12	8 <small>Note 5)</small>		5	12
Accessories			Power supply connector, communication connector			Power supply connector	
Operating temperature range [°C]			0 to 40 (No freezing)				
Operating humidity range [%RH]			90 or less (No condensation)				
Storage temperature range [°C]			-10 to 60 (No freezing)				
Storage humidity range [%RH]			90 or less (No condensation)				
Weight [g]			200 (Screw mounting), 220 (DIN rail mounting)				

Note 1) Please note that the version is subject to change.

Note 2) Each file can be downloaded from the SMC website, <http://www.smcworld.com>

Note 3) When using a teaching box (LEC-T1-□), set the communication speed to 115.2 kbps.

Note 4) A communication response time for 1 controller is approximately 30 ms.


Refer to "Communication Response Time Guideline" for response times when several controllers are connected.

Note 5) For step data input, up to 12 controllers connectable.

Note 6) When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

Communication Response Time Guideline

Response time between gateway unit and controllers depends on the number of controllers connected to the gateway unit. For response time, refer to the graph below.

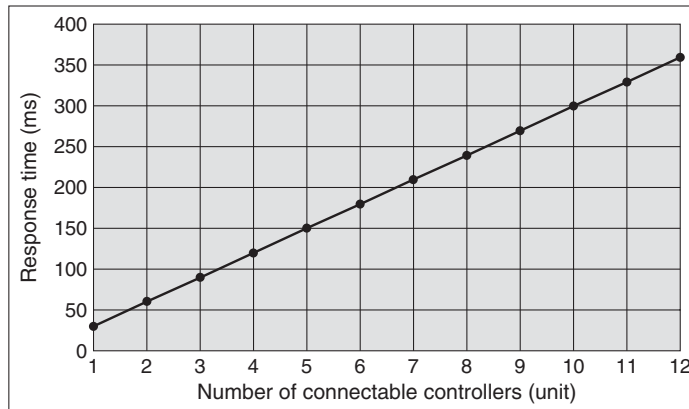


* This graph shows delay times between gateway unit and controllers. Fieldbus network delay time is not included.


Dimensions

Screw mounting (LEC-G□□□)


Applicable Fieldbus protocol: CC-Link Ver. 2.0

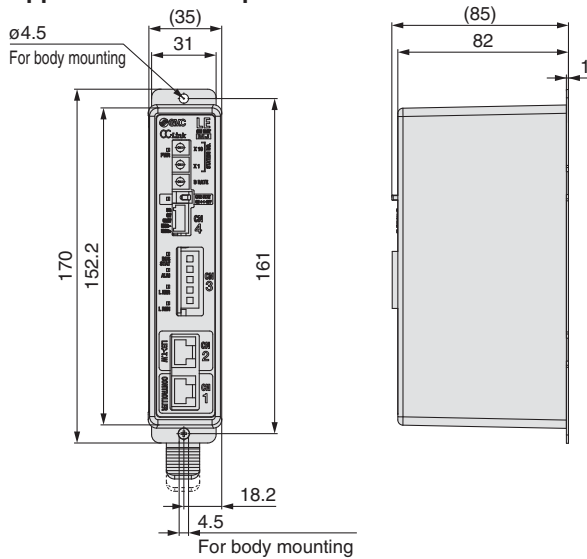


Applicable Fieldbus protocol: DeviceNet™

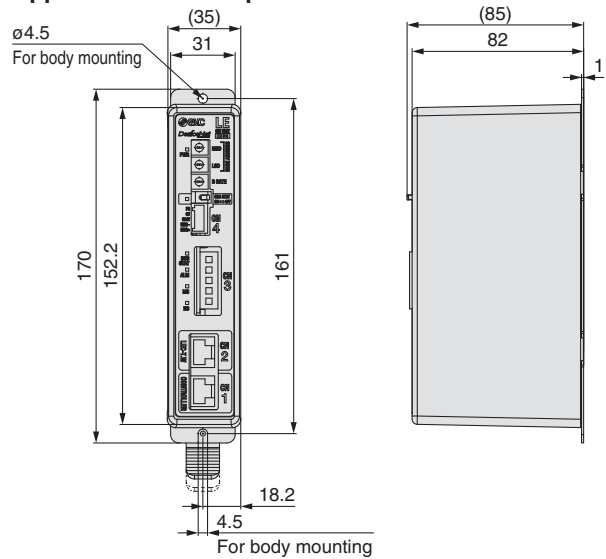

Applicable Fieldbus protocol: PROFIBUS DP

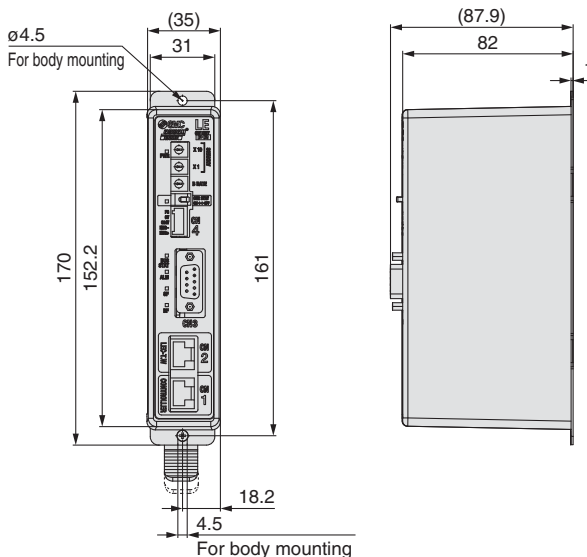

Applicable Fieldbus protocol: EtherNet/IP™

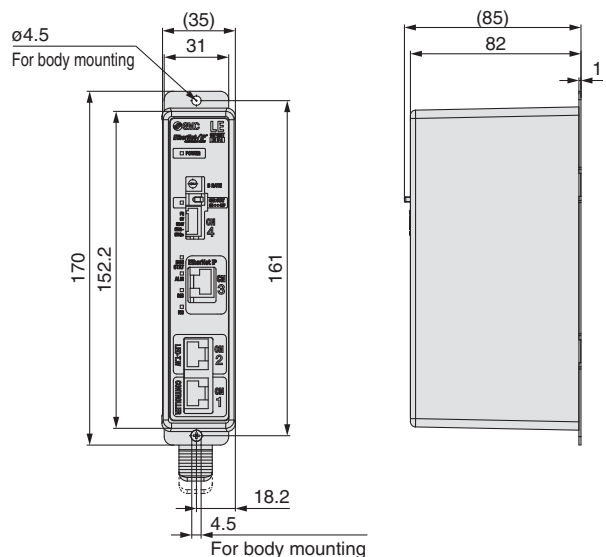


■ **Trademark** DeviceNet™ is a trademark of ODVA. EtherNet/IP™ is a trademark of ODVA.

Series LEC-G


Dimensions

DIN rail mounting (LEC-G□□□D)


Applicable Fieldbus protocol: CC-Link Ver. 2.0

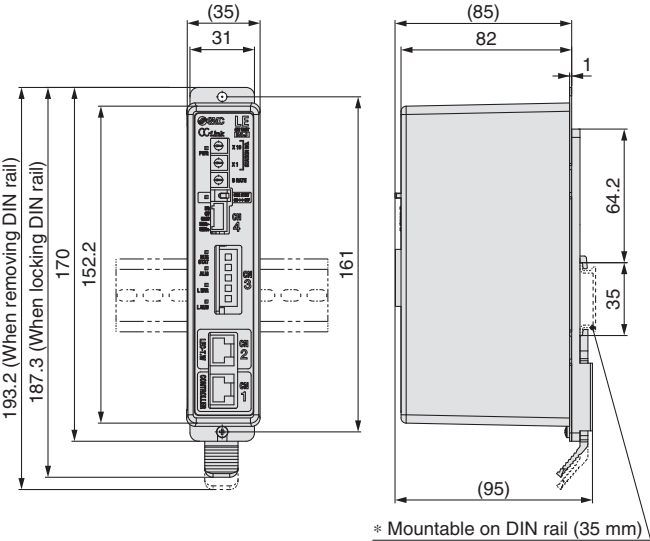


Applicable Fieldbus protocol: DeviceNet™

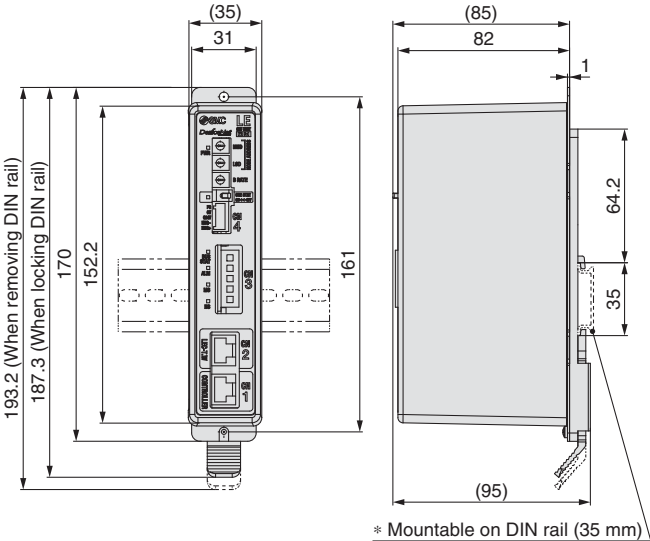

Applicable Fieldbus protocol: PROFIBUS DP

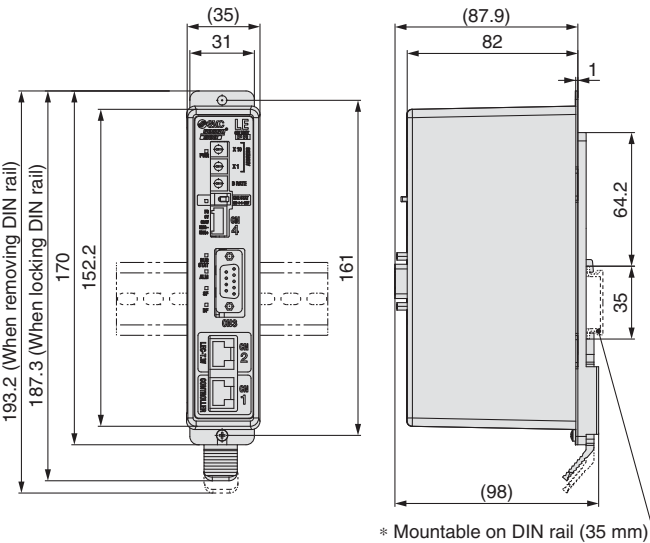


Applicable Fieldbus protocol: EtherNet/IP™

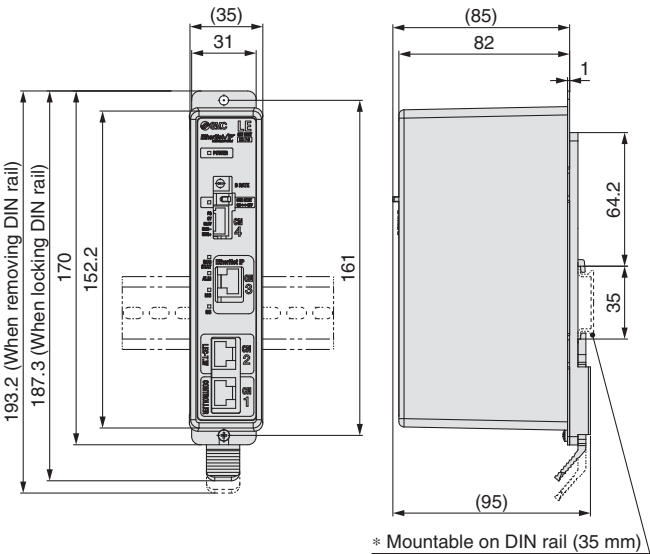

DIN rail AXT100-DR-□

* For □, enter a number from the "No." line in the table below.
Refer to the dimensions above for the mounting dimensions.

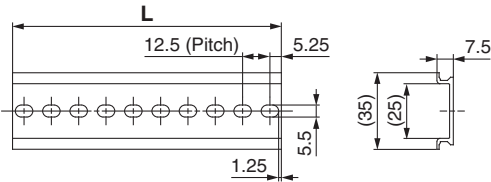

L Dimension [mm]

No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
L	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5

■Trademark DeviceNet™ is a trademark of ODVA. EtherNet/IP™ is a trademark of ODVA.



LAT3	Motorless	LECYM LECYU	LECSS-T	LECS□	LEC□	25A-	11-LEJS	11-LEFS	LEY-X5	LEH	LER	LEPY LEPS	LES LESH	LEY LEYG	LEM	LEL	LEJS LEJB	LEFS LEFB
------	-----------	----------------	---------	-------	------	------	---------	---------	--------	-----	-----	--------------	-------------	-------------	-----	-----	--------------	--------------

Programless Controller

Series *LECP1*



How to Order

LECP1N1 - **LEFS16A-400**

Controller
Compatible motor
Number of step data (Points)
Parallel I/O type

Option
I/O cable length [m]

Actuator part number
 (Except cable specifications and actuator options)
 Example: Enter "LEFS16A-400" for the LEFS16A-400B-R11N1.

* When controller equipped type is selected when ordering the LE series, you do not need to order this controller.

P	Step motor (Servo/24 VDC)
----------	---------------------------

Nil	Screw mounting
D (Note)	DIN rail mounting

Note) DIN rail is not included. Order it separately.

1	14 (Programless)
----------	------------------

N	NPN
P	PNP

Nil	Without cable
1	1.5
3	3
5	5

Caution

[CE-compliant products]

EMC compliance was tested by combining the electric actuator LE series and the controller LEC series. The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, conformity to the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify conformity to the EMC directive for the machinery and equipment as a whole.

[UL-compliant products]

When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

The controller is sold as single unit after the compatible actuator is set.

Confirm that the combination of the controller and the actuator is correct.

* Refer to the operation manual for using the products. Please download it via our website, <http://www.smcworld.com>

Specifications

Basic Specifications

Item	LECP1
Compatible motor	Step motor (Servo/24 VDC)
Power supply ^{Note 1)}	Power supply voltage: 24 VDC $\pm 10\%$ ^{Note 2)} [Including the motor drive power, control power supply, stop, lock release]
Parallel input	6 inputs (Photo-coupler isolation)
Parallel output	6 outputs (Photo-coupler isolation)
Stop points	14 points (Position number 1 to 14(E))
Compatible encoder	Incremental A/B phase (800 pulse/rotation)
Memory	EEPROM
LED indicator	LED (Green/Red) one of each
7-segment LED display ^{Note 3)}	1 digit, 7-segment display (Red) Figures are expressed in hexadecimal ("10" to "15" in decimal number are expressed as "A" to "F")
Lock control	Forced-lock release terminal ^{Note 4)}
Cable length [m]	I/O cable: 5 or less, Actuator cable: 20 or less
Cooling system	Natural air cooling
Operating temperature range [°C]	0 to 40 (No freezing)
Operating humidity range [%RH]	90 or less (No condensation)
Storage temperature range [°C]	-10 to 60 (No freezing)
Storage humidity range [%RH]	90 or less (No condensation)
Insulation resistance [MΩ]	Between the housing and SG terminal: 50 (500 VDC)
Weight [g]	130 (Screw mounting), 150 (DIN rail mounting)

Note 1) Do not use the power supply of "inrush current prevention type" for the controller input power supply. When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

Note 2) The power consumption changes depending on the actuator model. Refer to the each actuator's operation manual etc. for details.


Note 3) "10" to "15" in decimal number are displayed as follows in the 7-segment LED.



Decimal display	10	11	12	13	14	15
Hexadecimal display	A	b	c	d	E	F

Note 4) Applicable to non-magnetizing lock.

Controller Details

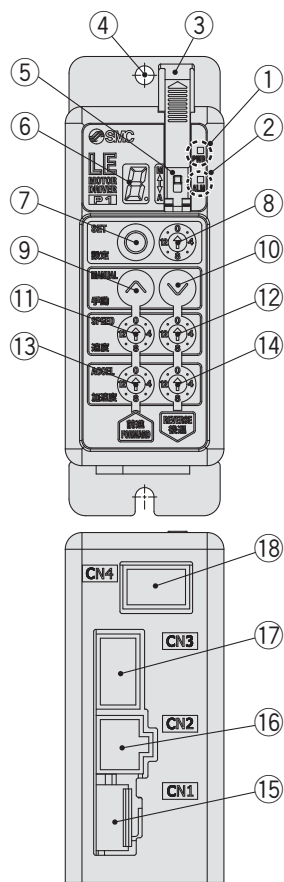


No.	Display	Description	Details
①	PWR	Power supply LED	Power supply ON/Servo ON : Green turns on Power supply ON/Servo OFF: Green flashes
②	ALM	Alarm LED	With alarm : Red turns on Parameter setting : Red flashes
③	—	Cover	Change and protection of the mode switch (Close the cover after changing switch)
④	—	FG	Frame ground (Tighten the screw with the washer when mounting the controller. Connect the ground wire.)
⑤	—	Mode switch	Switch the mode between manual and auto.
⑥	—	7-segment LED	Stop position, the value set by ⑧ and alarm information are displayed.
⑦	SET	Set button	Decide the settings or drive operation in Manual mode.
⑧	—	Position selecting switch	Assign the position to drive (1 to 14), and the origin position (15).
⑨	MANUAL	Manual forward button	Perform forward jog and inching.
⑩		Manual reverse button	Perform reverse jog and inching.
⑪	SPEED	Forward speed switch	16 forward speeds are available.
⑫		Reverse speed switch	16 reverse speeds are available.
⑬	ACCEL	Forward acceleration switch	16 forward acceleration steps are available.
⑭		Reverse acceleration switch	16 reverse acceleration steps are available.
⑮	CN1	Power supply connector	Connect the power supply cable.
⑯	CN2	Motor connector	Connect the motor connector.
⑰	CN3	Encoder connector	Connect the encoder connector.
⑱	CN4	I/O connector	Connect I/O cable.

How to Mount

Controller mounting shown below.


1. Mounting screw (LECP1□□-□)

(Installation with two M4 screws)

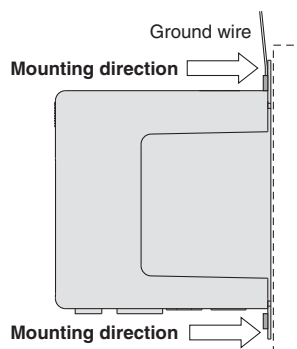

2. Grounding

Tighten the screw with the washer when mounting the ground wire as shown below.

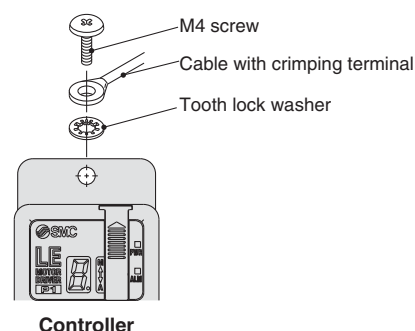


Note) When size 25 or more of the LE series are used, the space between the controllers should be 10 mm or more.

⚠ Caution


- M4 screws, cable with crimping terminal and tooth lock washer are not included. Be sure to carry out grounding earth in order to ensure the noise tolerance.
- Use a watchmaker's screwdriver of the size shown below when changing position switch ⑧ and the set value of the speed/acceleration switch ⑪ to ⑭.

Size

End width **L**: 2.0 to 2.4 [mm]
End thickness **W**: 0.5 to 0.6 [mm]

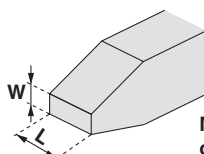



Magnified view of the end of the screwdriver

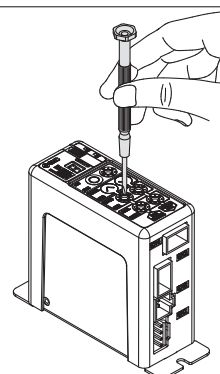


Series LECP1

Dimensions

Screw mounting (LEC□1□□-□)

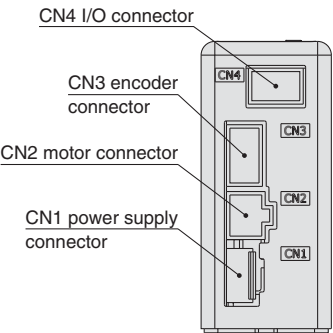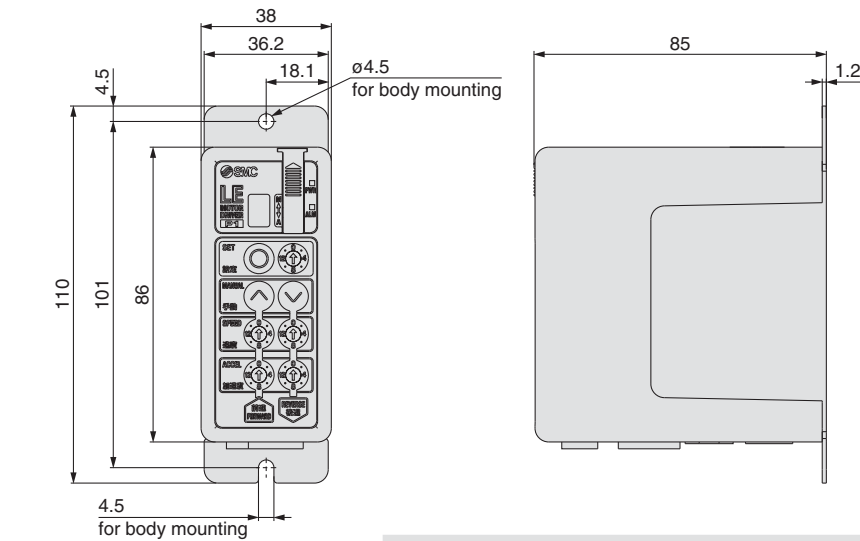

DIN rail mounting (LEC□1□□D-□)

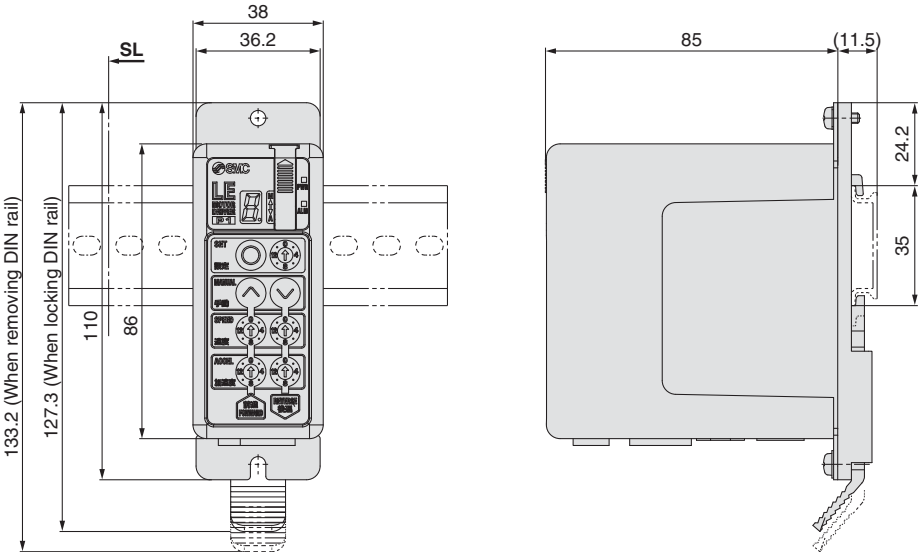

DIN rail AXT100-DR-□

* For □, enter a number from the "No." line in the table below.
Refer to the dimensions above for the mounting dimensions.

L Dimension [mm]

No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14
L	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5	148	160.5	173	185.5
No.	15	16	17	18	19	20	21	22	23	24	25	26	27	28
L	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323	335.5	348	360.5
No.	29	30	31	32	33	34	35	36	37	38	39	40		
L	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5		

DIN rail mounting adapter LEC-1-D0 (with 2 mounting screws)

This should be used when the DIN rail mounting adapter is mounted onto the screw mounting type controller afterwards.

Wiring Example 1

Power Supply Connector: CN1

- * When you connect a CN1 power supply connector, please use the power supply cable (LEC-CK1-1).
- * Power supply cable (LEC-CK1-1) is an accessory.

CN1 Power Supply Connector Terminal for LECP1

Terminal name	Cable color	Function	Details
0V	Blue	Common supply (-)	M 24V terminal/C 24V terminal/BK RLS terminal are common (-).
M 24V	White	Motor power supply (+)	Motor power supply (+) supplied to the controller
C 24V	Brown	Control power supply (+)	Control power supply (+) supplied to the controller
BK RLS	Black	Lock release (+)	Input (+) for releasing the lock

Power supply cable for LECP1 (LEC-CK1-1)




Wiring Example 2


Parallel I/O Connector: CN4

- * When you connect a PLC, etc., to the CN4 parallel I/O connector, please use the I/O cable (LEC-CK4-□).
- * The wiring should be changed depending on the type of the parallel I/O (NPN or PNP).

■NPN

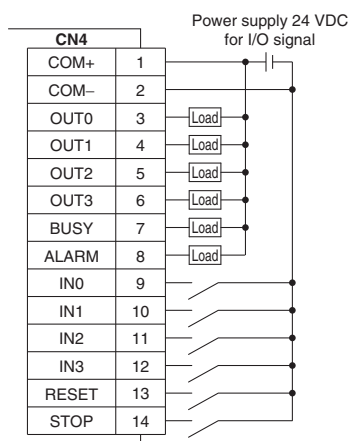

■PNP

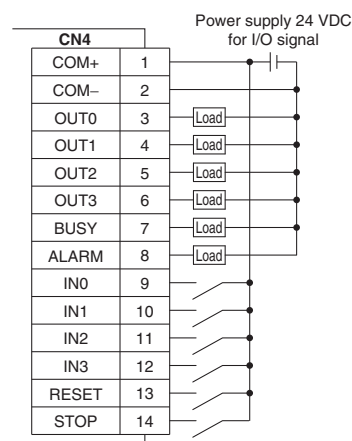

Input Signal

Input Signal

Name	Details								
COM+	Connects the power supply 24 V for input/output signal								
COM-	Connects the power supply 0 V for input/output signal								
IN0 to IN3	<div><ul style="list-style-type: none">• Instruction to drive (input as a combination of IN0 to IN3)• Instruction to return to origin (IN0 to IN3 all ON simultaneously)<div>Example - (instruction to drive for position no. 5)</div><table><tr><td>IN3</td><td>IN2</td><td>IN1</td><td>IN0</td></tr><tr><td>OFF</td><td>ON</td><td>OFF</td><td>ON</td></tr></table></div>	IN3	IN2	IN1	IN0	OFF	ON	OFF	ON
IN3	IN2	IN1	IN0						
OFF	ON	OFF	ON						
RESET	<div>Alarm reset and operation interruption</div> <div>During operation: deceleration stop from position at which signal is input (servo ON maintained)</div> <div>While alarm is active: alarm reset</div>								
STOP	Instruction to stop (after maximum deceleration stop, servo OFF)								

Input Signal [IN0 - IN3] Position Number Chart

○: OFF ●: ON

Position number	IN3	IN2	IN1	IN0
1	○	○	○	●
2	○	○	●	○
3	○	○	●	●
4	○	●	○	○
5	○	●	○	●
6	○	●	●	○
7	○	●	●	●
8	●	○	○	○
9	●	○	○	●
10 (A)	●	○	●	○
11 (B)	●	○	●	●
12 (C)	●	●	○	○
13 (D)	●	●	○	●
14 (E)	●	●	●	○
Return to origin	●	●	●	●

Output Signal

Output Signal:

Name	Details								
OUT0 to OUT3	<p>Turns on when the positioning or pushing is completed. (Output is instructed in the combination of OUT0 to 3.) Example - (operation complete for position no. 3)</p> <table><tr><td>OUT3</td><td>OUT2</td><td>OUT1</td><td>OUT0</td></tr><tr><td>OFF</td><td>OFF</td><td>ON</td><td>ON</td></tr></table>	OUT3	OUT2	OUT1	OUT0	OFF	OFF	ON	ON
OUT3	OUT2	OUT1	OUT0						
OFF	OFF	ON	ON						
BUSY	Outputs when the actuator is moving								
*ALARM ^{Note)}	Not output when alarm is active or servo OFF								

Note) Signal of negative-logic circuit (N.C.)


Output Signal [OUT0 - OUT3] Position Number Chart

○: OFF ●: ON

Position number	OUT3	OUT2	OUT1	OUT0
1	○	○	○	●
2	○	○	●	○
3	○	○	●	●
4	○	●	○	○
5	○	●	○	●
6	○	●	●	○
7	○	●	●	●
8	●	○	○	○
9	●	○	○	●
10 (A)	●	○	●	○
11 (B)	●	○	●	●
12 (C)	●	●	○	○
13 (D)	●	●	○	●
14 (E)	●	●	●	○
Return to origin	●	●	●	●


Signal Timing

(1) Return to Origin

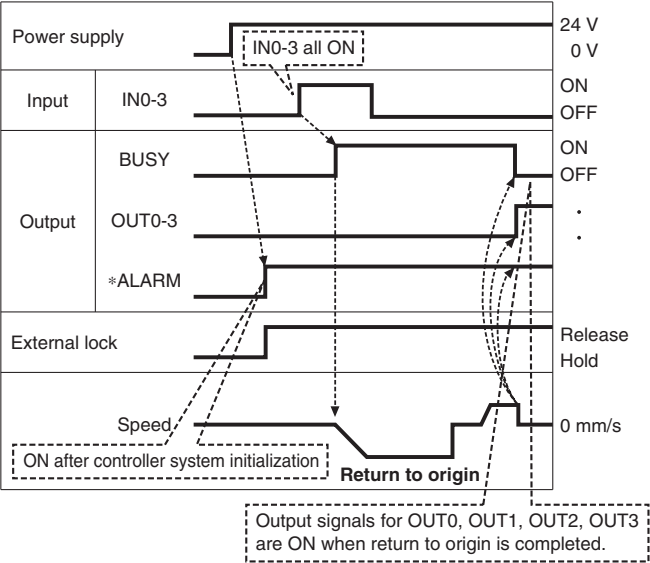


* *ALARM" is expressed as negative-logic circuit.


(2) Positioning Operation

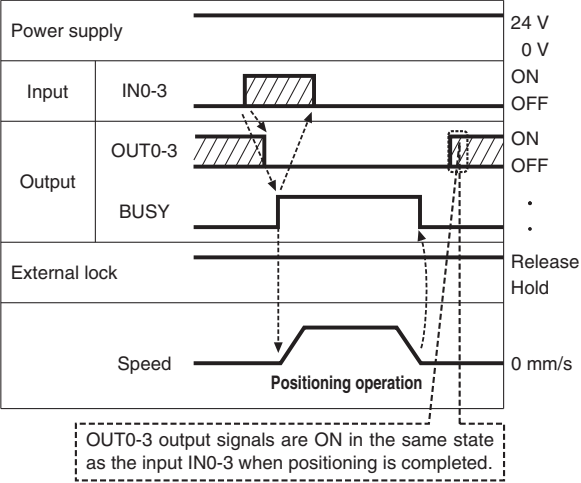


(3) Cut-off Stop (Reset Stop)

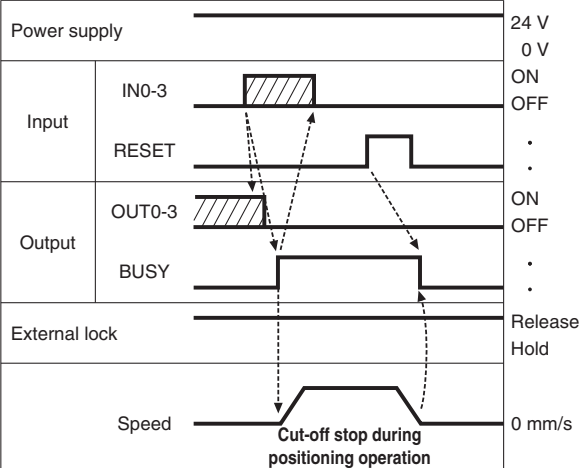

(4) Stop by the STOP Signal

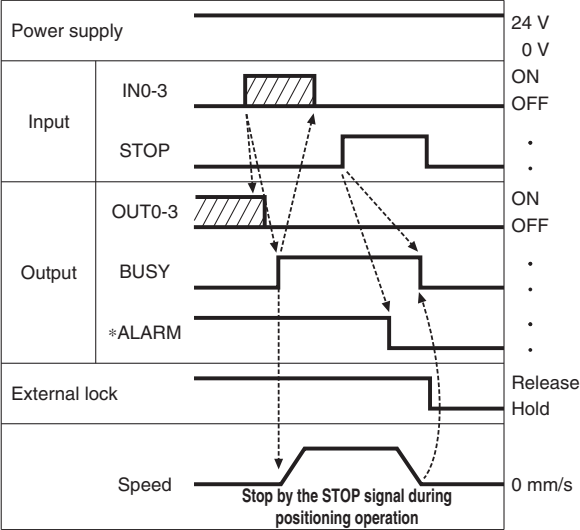

(5) Alarm Reset

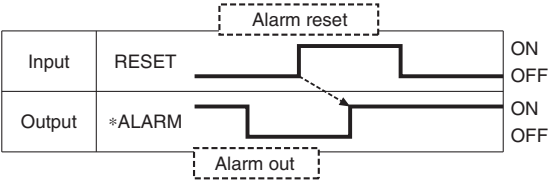

* *ALARM" is expressed as negative-logic circuit.

Options: Actuator Cable

[Robotic cable, standard cable for step motor (Servo/24 VDC)]

LE-CP-1- 1 -

Cable length (L) [m]


1	1.5
3	3
5	5
8	8*
A	10*
B	15*
C	20*

* Produced upon receipt of order (Robotic cable only)

Cable type


Nil	Robotic cable (Flexible cable)
S	Standard cable

LE-CP-¹/₅/Cable length: 1.5 m, 3 m, 5 m

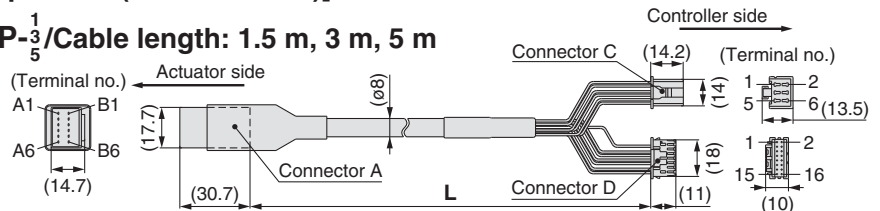

LE-CP-⁸/_{AC}/Cable length: 8 m, 10 m, 15 m, 20 m

(* Produced upon receipt of order)

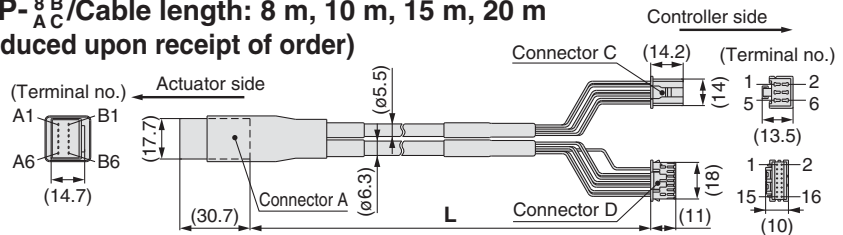

Signal	Connector A terminal no.	Cable color	Connector C terminal no.
A	B-1	Brown	2
A	A-1	Red	1
B	B-2	Orange	6
B	A-2	Yellow	5
COM-A/COM	B-3	Green	3
COM-B/-	A-3	Blue	4
Shield			
Vcc	B-4	Brown	12
GND	A-4	Black	13
A	B-5	Red	7
A	A-5	Black	6
B	B-6	Orange	9
B	A-6	Black	8
			3

[Robotic cable, standard cable with lock and sensor for step motor (Servo/24 VDC)]

LE-CP-1-B- 1 - B -

Cable length (L) [m]

1	1.5
3	3
5	5
8	8*
A	10*
B	15*
C	20*


* Produced upon receipt of order (Robotic cable only)

With lock and sensor

Cable type


Nil	Robotic cable (Flexible cable)
S	Standard cable

LE-CP-¹/₅/Cable length: 1.5 m, 3 m, 5 m

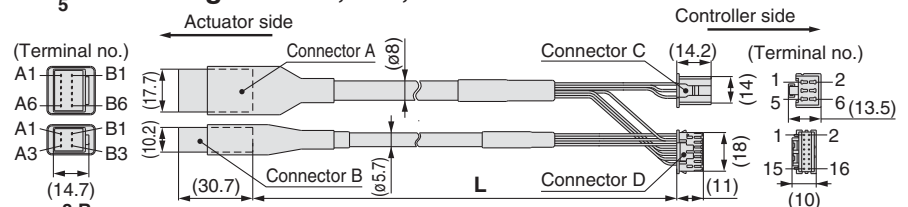

LE-CP-⁸/_{AC}/Cable length: 8 m, 10 m, 15 m, 20 m

(* Produced upon receipt of order)

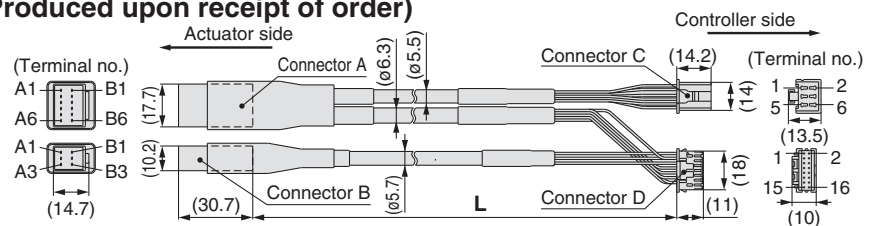

Signal	Connector A terminal no.	Cable color	Connector C terminal no.
A	B-1	Brown	2
A	A-1	Red	1
B	B-2	Orange	6
B	A-2	Yellow	5
COM-A/COM	B-3	Green	3
COM-B/-	A-3	Blue	4
Shield			
Vcc	B-4	Brown	12
GND	A-4	Black	13
A	B-5	Red	7
A	A-5	Black	6
B	B-6	Orange	9
B	A-6	Black	8
			3

Signal	Connector B terminal no.	Cable color	Connector D terminal no.
Lock (+)	B-1	Red	4
Lock (-)	A-1	Black	5
Sensor (+) Note	B-3	Brown	1
Sensor (-) Note	A-3	Blue	2


Note) Not used for the LE series.

Series LECP1

Options

[Power supply cable]

LEC-CK1-1

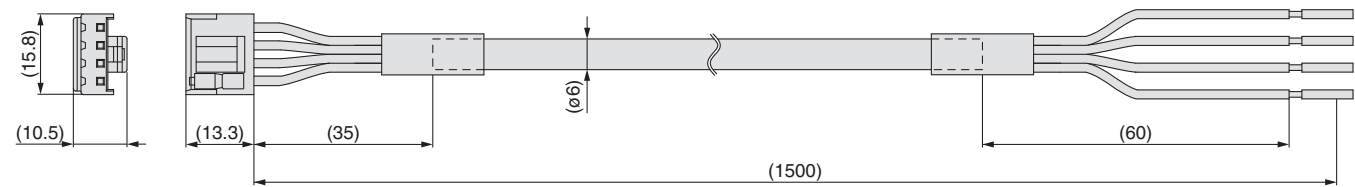

Terminal name	Covered color	Function
0V	Blue	Common supply (-)
M 24V	White	Motor power supply (+)
C 24V	Brown	Control power supply (+)
BK RLS	Black	Lock release (+)


* Conductor size: AWG20

[I/O cable]

LEC-CK4-

Cable length (L) [m]

1	1.5
3	3
5	5

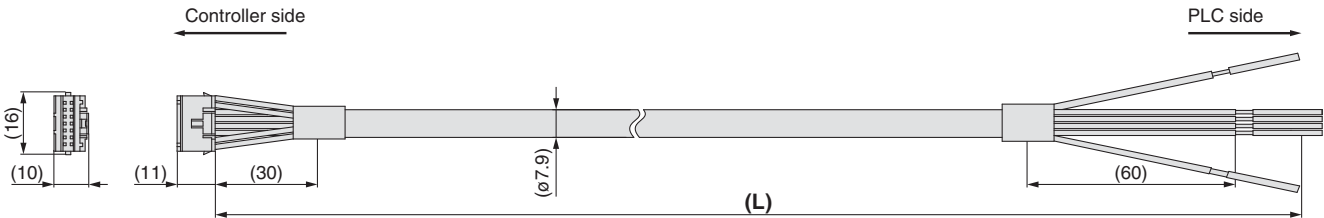

Terminal no.	Insulation color	Dot mark	Dot color	Function
1	Light brown	■	Black	COM+
2	Light brown	■	Red	COM-
3	Yellow	■	Black	OUT0
4	Yellow	■	Red	OUT1
5	Light green	■	Black	OUT2
6	Light green	■	Red	OUT3
7	Gray	■	Black	BUSY
8	Gray	■	Red	ALARM
9	White	■	Black	IN0
10	White	■	Red	IN1
11	Light brown	■ ■	Black	IN2
12	Light brown	■ ■	Red	IN3
13	Yellow	■ ■	Black	RESET
14	Yellow	■ ■	Red	STOP

* Conductor size: AWG26

* Parallel I/O signal is valid in auto mode. While the test function operates at manual mode, only the output is valid.

Programless Controller (With Stroke Study)

Series *LECP2*



How to Order

LECP2N1 - LEMB25T-300

Controller

Compatible motor

P Step motor (Servo/24 VDC)

Number of step data (Points)

2 2 stroke end points/
12 intermediate points (Programless)

Parallel I/O type

N	NPN
P	PNP

Option

Nil	Screw mounting
D (Note)	DIN rail mounting

Note) DIN rail is not included.
Order it separately.

I/O cable length [m]

Nil	Without cable
1	1.5
3	3
5	5

Actuator part number

(Except cable specifications and actuator options)
Example: Enter "LEMB25T-300" for the
LEMB25T-300W-S12N1.

Caution

[CE-compliant products]

EMC compliance was tested by combining the electric actuator LEM series and the controller LEC series. The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, conformity to the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify conformity to the EMC directive for the machinery and equipment as a whole.

[UL-compliant products]

When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

The controller is sold as single unit after the compatible actuator is set.

Confirm that the combination of the controller and the actuator is correct.

* Refer to the operation manual for using the products. Please download it via our website, <http://www.smcworld.com>

Specifications

Basic Specifications

Item	LECP2
Compatible motor	Step motor (Servo/24 VDC)
Power supply ^{Note 1)}	Power supply voltage: 24 VDC $\pm 10\%$ ^{Note 2)} [Including the motor drive power, control power supply, stop, lock release]
Parallel input	6 inputs (Photo-coupler isolation)
Parallel output	6 outputs (Photo-coupler isolation)
Stop points	Stroke ends 2 points (Position number 1 and 2), Intermediate position 12 points (Position number 3 to 14(E))
Compatible encoder	Incremental A/B phase (800 pulse/rotation)
Memory	EEPROM
LED indicator	LED (Green/Red) one of each
7-segment LED display ^{Note 3)}	1 digit, 7-segment display (Red) Figures are expressed in hexadecimal. ("10" to "15" in decimal number are expressed as "A" to "F")
Lock control	Forced-lock release terminal ^{Note 4)}
Cable length [m]	I/O cable: 5 or less, Actuator cable: 20 or less
Cooling system	Natural air cooling
Operating temperature range [°C]	0 to 40 (No freezing)
Operating humidity range [%RH]	90 or less (No condensation)
Storage temperature range [°C]	-10 to 60 (No freezing)
Storage humidity range [%RH]	90 or less (No condensation)
Insulation resistance [MΩ]	Between the housing and SG terminal: 50 (500 VDC)
Weight [g]	130 (Screw mounting), 150 (DIN rail mounting)

Note 1) Do not use the power supply of "inrush current prevention type" for the controller input power supply. When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

Note 2) The power consumption changes depending on the actuator model. Refer to the each actuator's operation manual etc. for details.

Note 3) "10" to "15" in decimal number are displayed as follows in the 7-segment LED.



Decimal display

10

11

12

13

14

15

Hexadecimal display

A

b

c


d

E

F

Note 4) Applicable to non-magnetizing lock

Controller Details

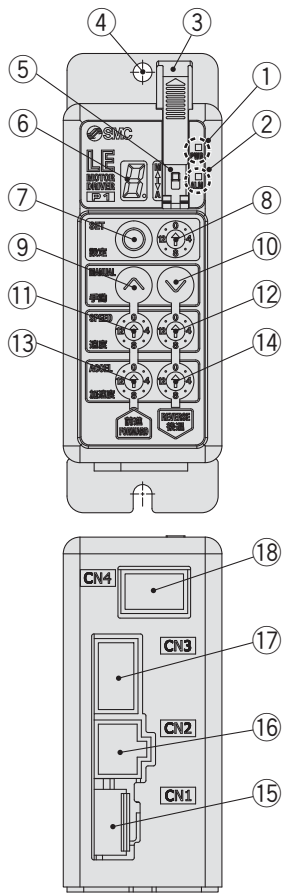


No.	Display	Description	Details
①	PWR	Power supply LED	Power supply ON/Servo ON : Green turns on. Power supply ON/Servo OFF: Green flashes.
②	ALM	Alarm LED	With alarm : Red turns on. Parameter setting : Red flashes.
③	—	Cover	Change and protection of the mode switch (Close the cover after changing switch.)
④	—	FG	Frame ground (Tighten the screw with the washer when mounting the controller. Connect the ground wire.)
⑤	—	Mode switch	Switch the mode between manual and auto.
⑥	—	7-segment LED	Stop position, the value set by ⑧ and alarm information are displayed.
⑦	SET	Set button	Decide the settings or drive operation in manual mode.
⑧	—	Position selecting switch	Assign the position to drive (1 to 14), and the origin position (15).
⑨	MANUAL	Manual forward button	Perform forward jog and inching.
⑩		Manual reverse button	Perform reverse jog and inching.
⑪	SPEED	Forward speed switch	16 forward speeds are available.
⑫		Reverse speed switch	16 reverse speeds are available.
⑬	ACCEL	Forward acceleration switch	16 forward acceleration steps are available.
⑭		Reverse acceleration switch	16 reverse acceleration steps are available.
⑮	CN1	Power supply connector	Connect the power supply cable.
⑯	CN2	Motor connector	Connect the motor connector.
⑰	CN3	Encoder connector	Connect the encoder connector.
⑱	CN4	I/O connector	Connect the I/O cable.

How to Mount

Controller mounting shown below

1. Mounting screw (LECP2□□-□)


(Installation with two M4 screws)

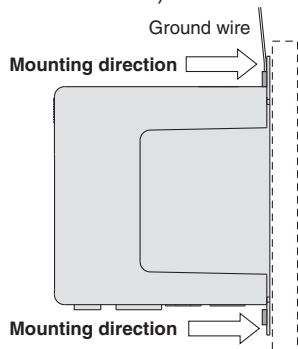

Note) The space between the controllers should be 10 mm or more.

2. Grounding

Tighten the screw with the washer when mounting the ground wire as shown below.

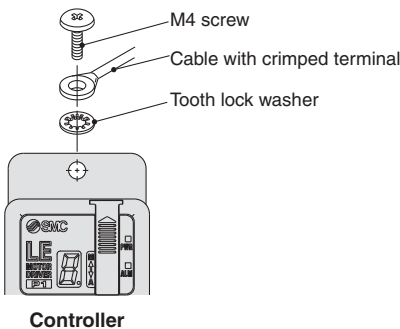


⚠ Caution


- M4 screws, cable with crimping terminal and tooth lock washer are not included. Be sure to carry out grounding earth in order to ensure the noise tolerance.
- Use a watchmaker's screwdriver of the size shown below when changing position switch ⑧ and the set value of the speed/acceleration switch ⑪ to ⑭.

Size

End width **L**: 2.0 to 2.4 [mm]
End thickness **W**: 0.5 to 0.6 [mm]


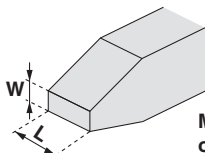


Magnified view of the end of the screwdriver

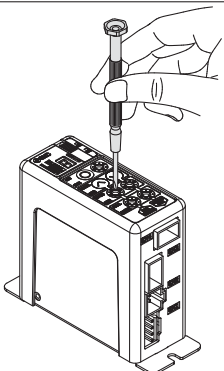


Dimensions

Screw mounting (LEC□2□□-□)

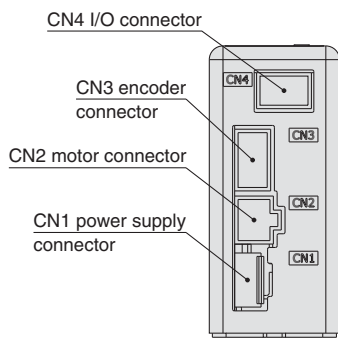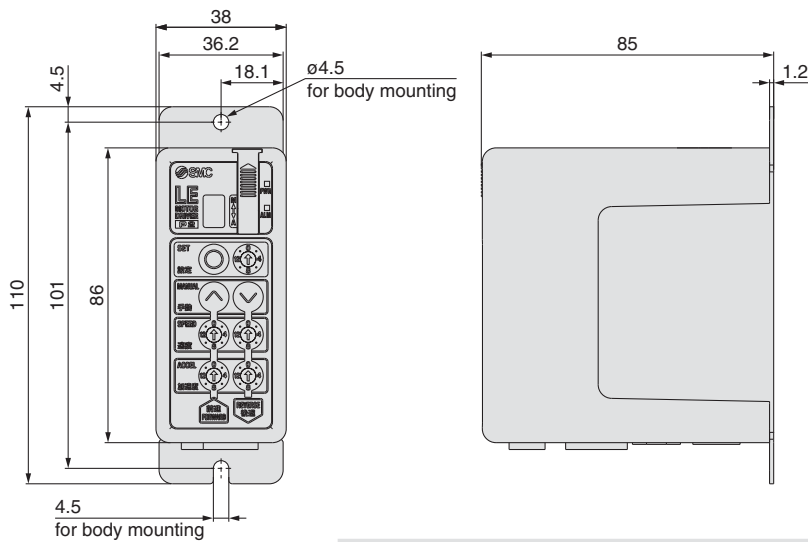

DIN rail mounting (LEC□2□□D-□)

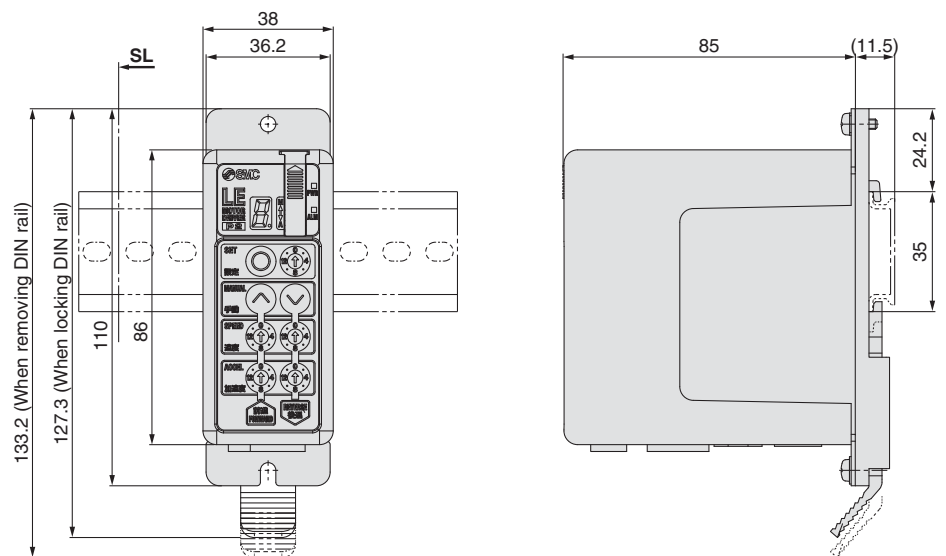

DIN rail AXT100-DR-□

* For □, enter a number from the "No." line in the table below.
Refer to the dimensions above for the mounting dimensions.

L Dimension [mm]

No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14
L	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5	148	160.5	173	185.5
No.	15	16	17	18	19	20	21	22	23	24	25	26	27	28
L	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323	335.5	348	360.5
No.	28	29	30	31	32	33	34	35	36	37	38	39	40	
L	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	

DIN rail mounting adapter LEC-1-D0 (with 2 mounting screws)

This should be used when the DIN rail mounting adapter is mounted onto the screw mounting type controller afterwards.

Series LEC2

Wiring Example 1

Power Supply Connector: CN1

- * When you connect a CN1 power supply connector, use the power supply cable (LEC-CK1-1).
- * Power supply cable (LEC-CK1-1) is an accessory.

CN1 Power Supply Connector Terminal for LEC2

Terminal name	Cable color	Function	Details
0V	Blue	Common supply (-)	M 24V terminal/C 24V terminal/BK RLS terminal are common (-).
M 24V	White	Motor power supply (+)	Motor power supply (+) supplied to the controller
C 24V	Brown	Control power supply (+)	Control power supply (+) supplied to the controller
BK RLS	Black	Lock release (+)	Input (+) for releasing the lock

Power supply cable for LEC2 (LEC-CK1-1)




Wiring Example 2


Parallel I/O Connector: CN4

- * When you connect a PLC, etc., to the CN4 parallel I/O connector, use the I/O cable (LEC-CK4-□).
- * The wiring should be changed depending on the type of the parallel I/O (NPN or PNP).

■ NPN

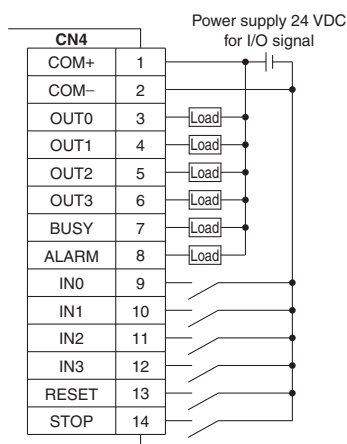

■ PNP

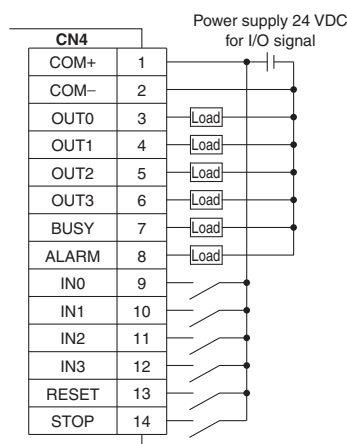

Input Signal

Input signal

Name	Details								
COM+	Connects the power supply 24 V for input/output signal								
COM-	Connects the power supply 0 V for input/output signal								
IN0 to IN3	<div><div><div>• Instruction to drive (input as a combination of IN0 to IN3) Example - (instruction to drive for position no. 5)</div><table><tr><th>IN3</th><th>IN2</th><th>IN1</th><th>IN0</th></tr><tr><td>OFF</td><td>ON</td><td>OFF</td><td>ON</td></tr></table></div><div><div>• Instruction to return to origin</div><div><div>After the power is turned ON, first turn on IN0 or IN1.</div><div>Return to origin using IN0: Return to origin by moving to the extended end.</div><div>Return to origin using IN1: Return to origin by moving to the motor end.</div></div></div></div>	IN3	IN2	IN1	IN0	OFF	ON	OFF	ON
IN3	IN2	IN1	IN0						
OFF	ON	OFF	ON						
RESET	<div>Alarm reset and operation interruption</div> <div>During operation: deceleration stop from position at which signal is input (servo ON maintained)</div> <div>While alarm is active: alarm reset</div>								
STOP	Instruction to stop (after maximum deceleration stop, servo OFF)								

Output Signal

Output Signal

Name	Details								
OUT0 to OUT3	<ul style="list-style-type: none">Positioning completion (input as a combination of OUT0 to OUT3) Example - (positioning completion for position no. 3)								
	<table><tr><th>OUT3</th><th>OUT2</th><th>OUT1</th><th>OUT0</th></tr><tr><td>OFF</td><td>OFF</td><td>ON</td><td>ON</td></tr></table>	OUT3	OUT2	OUT1	OUT0	OFF	OFF	ON	ON
	OUT3	OUT2	OUT1	OUT0					
OFF	OFF	ON	ON						
<ul style="list-style-type: none">Return to origin completion (Completion of return to origin using IN0: Only OUT0 is ON. Completion of return to origin using IN1: Only OUT1 is ON.)									
BUSY	Outputs when the actuator is moving								
*ALARM (Note)	Not output when alarm is active or servo OFF								

Note) Signal of negative-logic circuit (N.C.)

Input Signal [IN0 - IN3] Position Number Chart ○: OFF ●: ON


Position number	IN3	IN2	IN1	IN0
1 (End side)	○	○	○	●
2 (Motor side)	○	○	●	○
3	○	○	●	●
4	○	●	○	○
5	○	●	○	●
6	○	●	●	○
7	○	●	●	●
8	●	○	○	○
9	●	○	○	●
10 (A)	●	○	●	○
11 (B)	●	○	●	●
12 (C)	●	●	○	○
13 (D)	●	●	○	●
14 (E)	●	●	●	○

Output Signal [OUT0 - OUT3] Position Number Chart ○: OFF ●: ON


Position number	OUT3	OUT2	OUT1	OUT0
1 (End side)	○	○	○	●
2 (Motor side)	○	○	●	○
3	○	○	●	●
4	○	●	○	○
5	○	●	○	●
6	○	●	●	○
7	○	●	●	●
8	●	○	○	○
9	●	○	○	●
10 (A)	●	○	●	○
11 (B)	●	○	●	●
12 (C)	●	●	○	○
13 (D)	●	●	○	●
14 (E)	●	●	●	○

Signal Timing


(1) Positioning Operation [Driving to the stroke end]

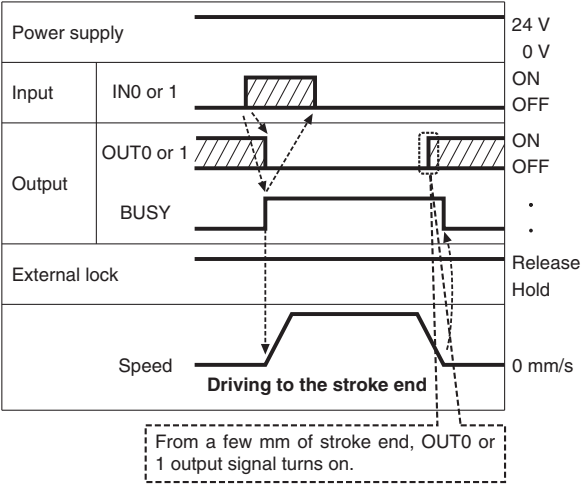


(2) Positioning Operation [Driving to the intermediate position]

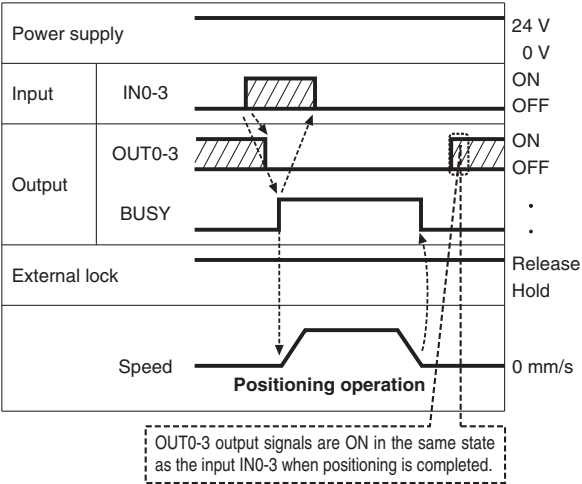


(3) Cut-off Stop (Reset Stop)

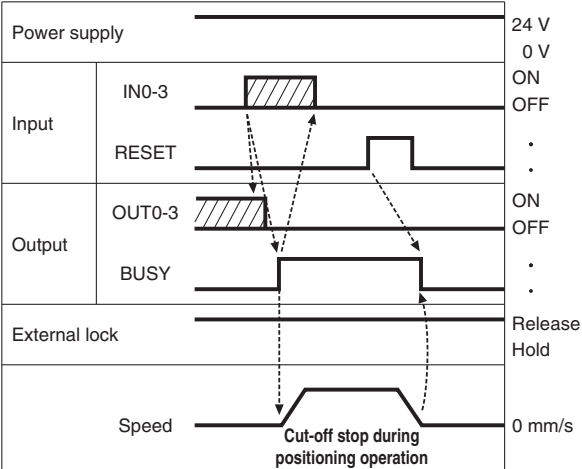

(4) Stop by the STOP Signal

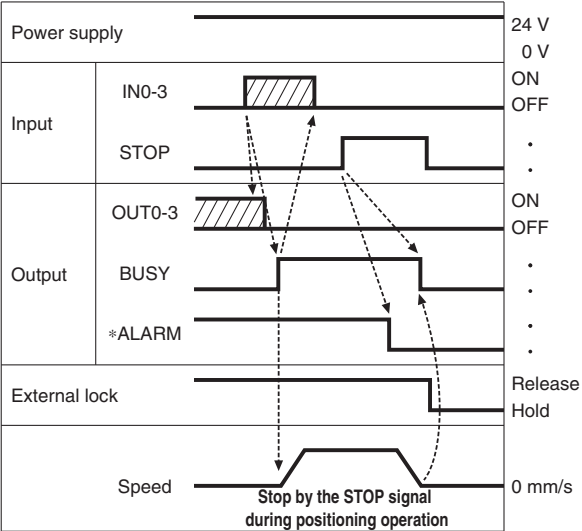

(5) Alarm Reset

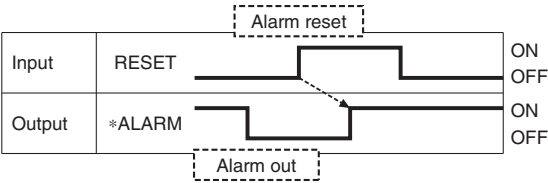

*ALARM is expressed as negative-logic circuit.

- LEFS
- LEJB
- LEJS
- LEJB
- LEL
- LEM
- LEY
- LEYG
- LES
- LESH
- LEPY
- LEPS
- LER
- LEH
- LEY-X5
- 11-LEFS
- 11-LEJS
- 25A-
- LEC
- LECS
- LECS-T
- LECYM
- LECYU
- Motorless
- LAT3

Series **LECP2**

Options: Actuator Cable

[Robotic cable, standard cable for step motor (Servo/24 VDC)]

LE-CP-1-

Cable length (L) [m]


1	1.5
3	3
5	5
8	8*
A	10*
B	15*
C	20*

* Produced upon receipt of order (Robotic cable only)


Cable type

Nil	Robotic cable (Flexible cable)
S	Standard cable

LE-CP-3/5/Cable length: 1.5 m, 3 m, 5 m

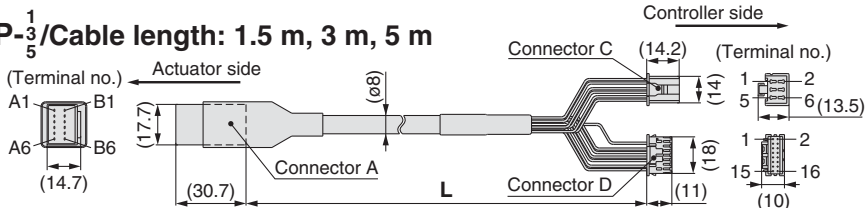

LE-CP-8/10/15/20/Cable length: 8 m, 10 m, 15 m, 20 m
(* Produced upon receipt of order)

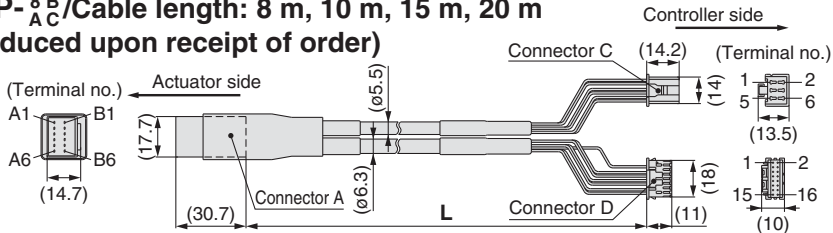

Signal	Connector A terminal no.	Cable color	Connector C terminal no.
A	B-1	Brown	2
A	A-1	Red	1
B	B-2	Orange	6
B	A-2	Yellow	5
COM-A/COM	B-3	Green	3
COM-B/-	A-3	Blue	4
Shield			
Vcc	B-4	Brown	12
GND	A-4	Black	13
A	B-5	Red	7
A	A-5	Black	6
B	B-6	Orange	9
B	A-6	Black	8
Shield			
			3

[Robotic cable, standard cable with lock and sensor for step motor (Servo/24 VDC)]

LE-CP-1-B-

Cable length (L) [m]

1	1.5
3	3
5	5
8	8*
A	10*
B	15*
C	20*


* Produced upon receipt of order (Robotic cable only)

With lock and sensor


Cable type

Nil	Robotic cable (Flexible cable)
S	Standard cable

LE-CP-3/5/Cable length: 1.5 m, 3 m, 5 m

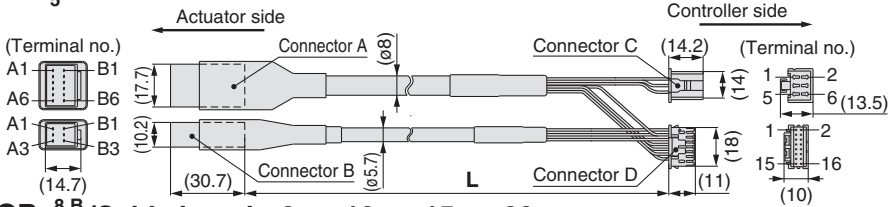

LE-CP-8/10/15/20/Cable length: 8 m, 10 m, 15 m, 20 m
(* Produced upon receipt of order)

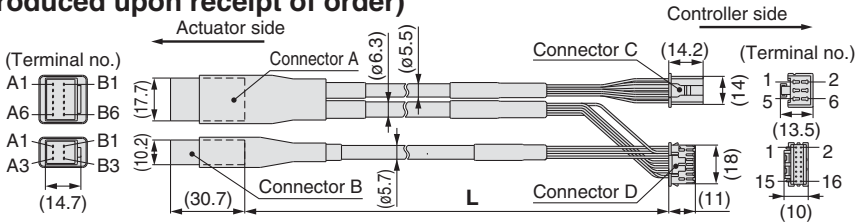

Signal	Connector A terminal no.	Cable color	Connector C terminal no.
A	B-1	Brown	2
A	A-1	Red	1
B	B-2	Orange	6
B	A-2	Yellow	5
COM-A/COM	B-3	Green	3
COM-B/-	A-3	Blue	4
Shield			
Vcc	B-4	Brown	12
GND	A-4	Black	13
A	B-5	Red	7
A	A-5	Black	6
B	B-6	Orange	9
B	A-6	Black	8
Shield			
			3


Signal	Connector B terminal no.	Cable color	Connector D terminal no.
Lock (+)	B-1	Red	4
Lock (-)	A-1	Black	5
Sensor (+) Note	B-3	Brown	1
Sensor (-) Note	A-3	Blue	2

Note) Not used for the LE series

Options

[Power supply cable]

LEC-CK1-1

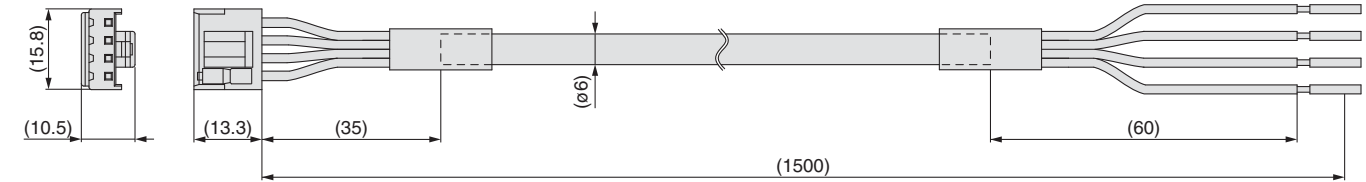

Terminal name	Covered color	Function
0V	Blue	Common supply (-)
M 24V	White	Motor power supply (+)
C 24V	Brown	Control power supply (+)
BK RLS	Black	Lock release (+)


* Conductor size: AWG20

[I/O cable]

LEC-CK4-

Cable length (L) [m]

1	1.5
3	3
5	5

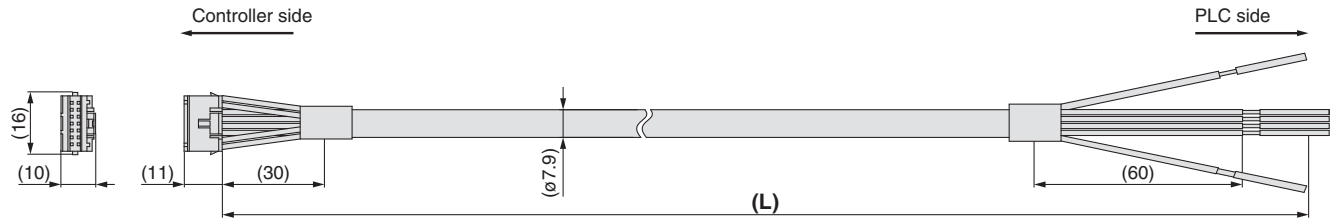

Terminal no.	Insulation color	Dot mark	Dot color	Function
1	Light brown	■	Black	COM+
2	Light brown	■	Red	COM-
3	Yellow	■	Black	OUT0
4	Yellow	■	Red	OUT1
5	Light green	■	Black	OUT2
6	Light green	■	Red	OUT3
7	Gray	■	Black	BUSY
8	Gray	■	Red	ALARM
9	White	■	Black	IN0
10	White	■	Red	IN1
11	Light brown	■ ■	Black	IN2
12	Light brown	■ ■	Red	IN3
13	Yellow	■ ■	Black	RESET
14	Yellow	■ ■	Red	STOP

* Conductor size: AWG26

* Parallel I/O signal is valid in auto mode. While the test function operates at manual mode, only the output is valid.

Compatible actuators

LEF LEY LES
LEP LER LEH

Step Motor Driver

Series *LECPA*



How to Order

⚠ Caution

[CE-compliant products]

① EMC compliance was tested by combining the electric actuator LE series and the LECPA series. The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, conformity to the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify conformity to the EMC directive for the machinery and equipment as a whole.

② For the LECPA series (step motor driver), EMC compliance was tested by installing a noise filter set (LEC-NFA).

Refer to page 559 for the noise filter set. Refer to the LECPA Operation Manual for installation.

[UL-compliant products]

When conformity to UL is required, the electric actuator and driver should be used with a UL1310 Class 2 power supply.

LECP AN 1 - LEFS16B-100

Driver type

AN	Pulse input type (NPN)
AP	Pulse input type (PNP)

I/O cable length [m]

Nil	None
1	1.5
3	3*
5	5*

* Pulse input usable only with differential. Only 1.5 m cables usable with open collector.

Driver mounting

Nil	Screw mounting
D (Note)	DIN rail mounting

Note) DIN rail is not included. Order it separately.

Actuator part number

Part number except cable specifications and actuator options
Example: Enter "LEFS16B-100" for the LEFS16B-100B-R1AN1D.

BC	Blank controller (Note)
----	-------------------------

Note) The dedicated software (LEC-BCW) is required.

* When controller equipped type is selected when ordering the LE series, you do not need to order this driver.
* When pulse signals are open collector, order the current limiting resistor (LEC-PA-R-□) separately.


The driver is sold as single unit after the compatible actuator is set.

Confirm that the combination of the driver and the actuator is correct.

<Check the following before use.>

① Check the actuator label for model number. This matches the driver.

② Check Parallel I/O configuration matches (NPN or PNP).

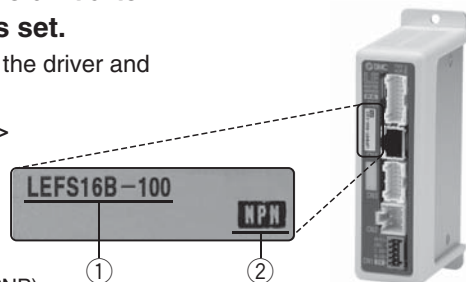

Precautions on blank controller (LECPA□□-BC)

Blank controller is a controller to which the customer can write the data of the actuator to be combined and used. Use the dedicated software (LEC-BCW) for data writing.

- Please download the dedicated software (LEC-BCW) via our website.
- Order the controller setting kit (LEC-W2) separately to use this software.

SMC website

<http://www.smcworld.com>

* Refer to the operation manual for using the products. Please download it via our website, <http://www.smcworld.com>

Specifications

Item	LECPA
Compatible motor	Step motor (Servo/24 VDC)
Power supply ^{Note 1)}	Power voltage: 24 VDC $\pm 10\%$ ^{Note 2)} [Including motor drive power, control power, stop, lock release]
Parallel input	5 inputs (Except photo-coupler isolation, pulse input terminal, COM terminal)
Parallel output	9 outputs (Photo-coupler isolation)
Pulse signal input	Maximum frequency: 60 kpps (Open collector), 200 kpps (Differential) Input method: 1 pulse mode (Pulse input in direction), 2 pulse mode (Pulse input in differing directions)
Compatible encoder	Incremental A/B phase (Encoder resolution: 800 pulse/rotation)
Serial communication	RS485 (Modbus protocol compliant)
Memory	EEPROM
LED indicator	LED (Green/Red) one of each
Lock control	Forced-lock release terminal ^{Note 3)}
Cable length [m]	I/O cable: 1.5 or less (Open collector), 5 or less (Differential), Actuator cable: 20 or less
Cooling system	Natural air cooling
Operating temperature range [°C]	0 to 40 (No freezing)
Operating humidity range [%RH]	90 or less (No condensation)
Storage temperature range [°C]	-10 to 60 (No freezing)
Storage humidity range [%RH]	90 or less (No condensation)
Insulation resistance [MΩ]	Between the housing and SG terminal: 50 (500 VDC)
Weight [g]	120 (Screw mounting), 140 (DIN rail mounting)


Note 1) Do not use the power supply of "inrush current prevention type" for the driver power supply. When conformity to UL is required, the electric actuator and driver should be used with a UL1310 Class 2 power supply.

Note 2) The power consumption changes depending on the actuator model. Refer to the specifications of actuator for more details.


Note 3) Applicable to non-magnetizing lock.

How to Mount

a) Screw mounting (LECPA□□-□)
(Installation with two M4 screws)

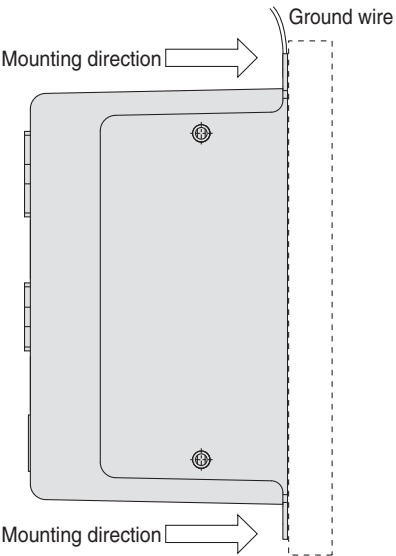


b) DIN rail mounting (LECPA□□D-□)
(Installation with the DIN rail)

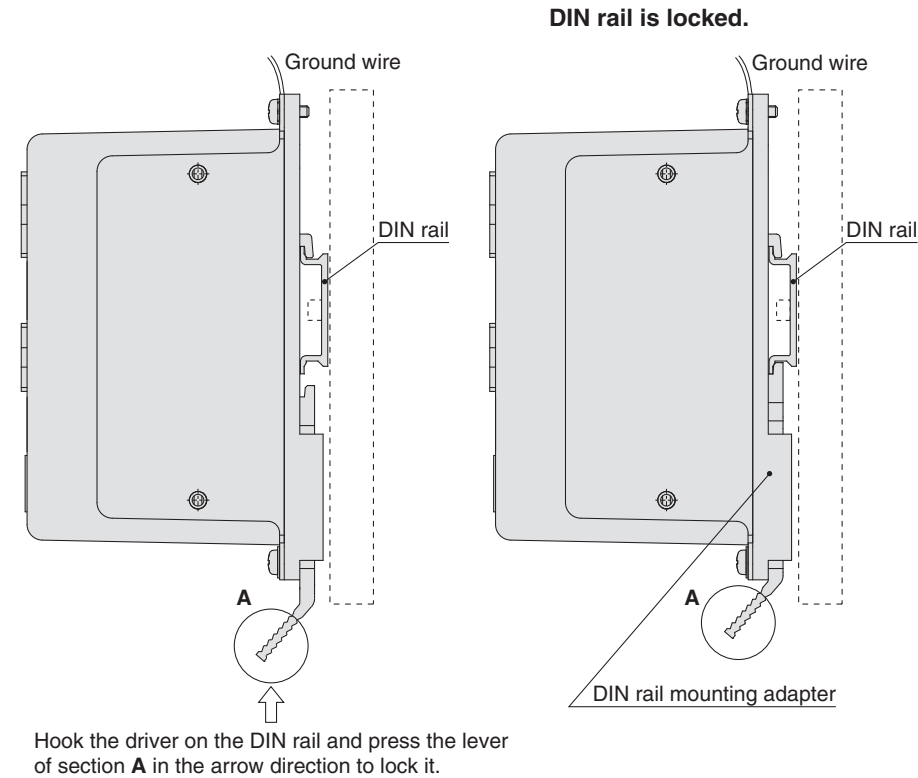

Note) The space between the drivers should be 10 mm or more.

DIN rail
AXT100-DR-□

* For □, enter a number from the “No.” line in the table below.
Refer to the dimensions on page 583 for the mounting dimensions.

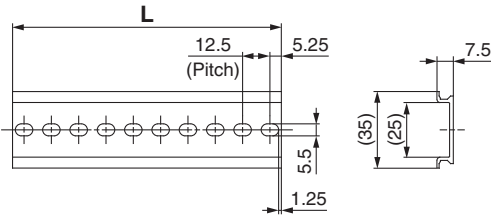

L Dimension [mm]

No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
L	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5

DIN rail mounting adapter
LEC-2-D0 (with 2 mounting screws)


This should be used when the DIN rail mounting adapter is mounted onto the screw mounting type driver afterwards.

LEFS	LEFB
LEJS	LEJB
LEL	
LEM	
LEY	LEYG
LES	LESH
LEPY	LEPS
LER	
LEH	
LEY-X5	
11-LEFS	
11-LEJS	
25A-	
LEC□	
LECS□	
LECSS-T	
LECYM	LECYU
Motorless	
LAT3	


Series LECPA

Dimensions

a) Screw mounting (LECPA□□-□)

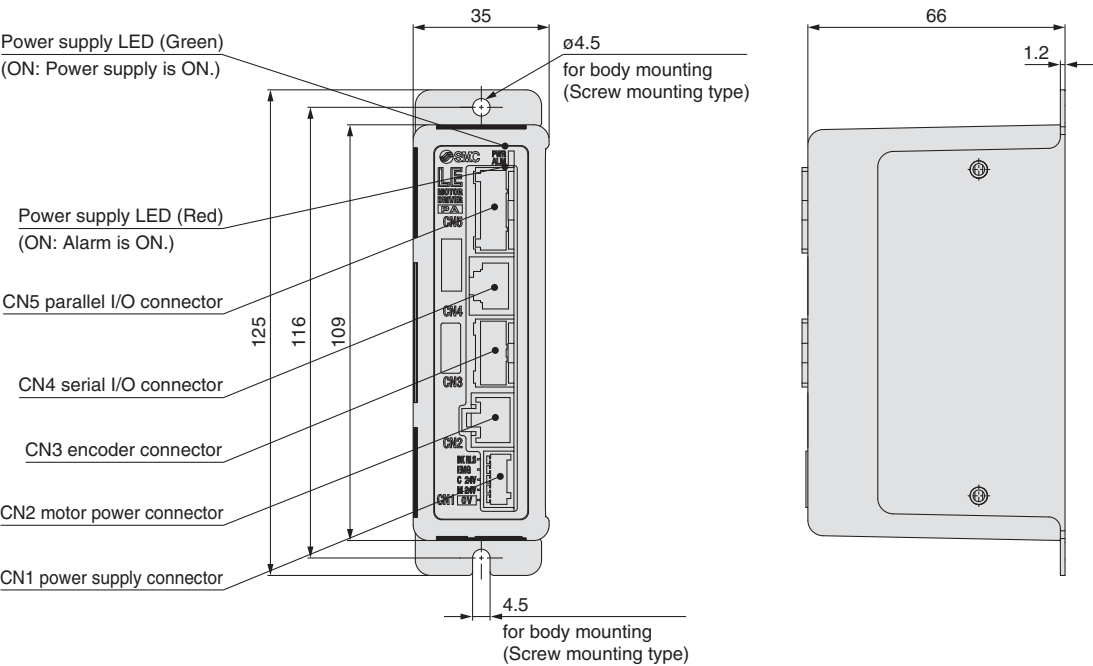

b) DIN rail mounting (LECPA□□D-□)

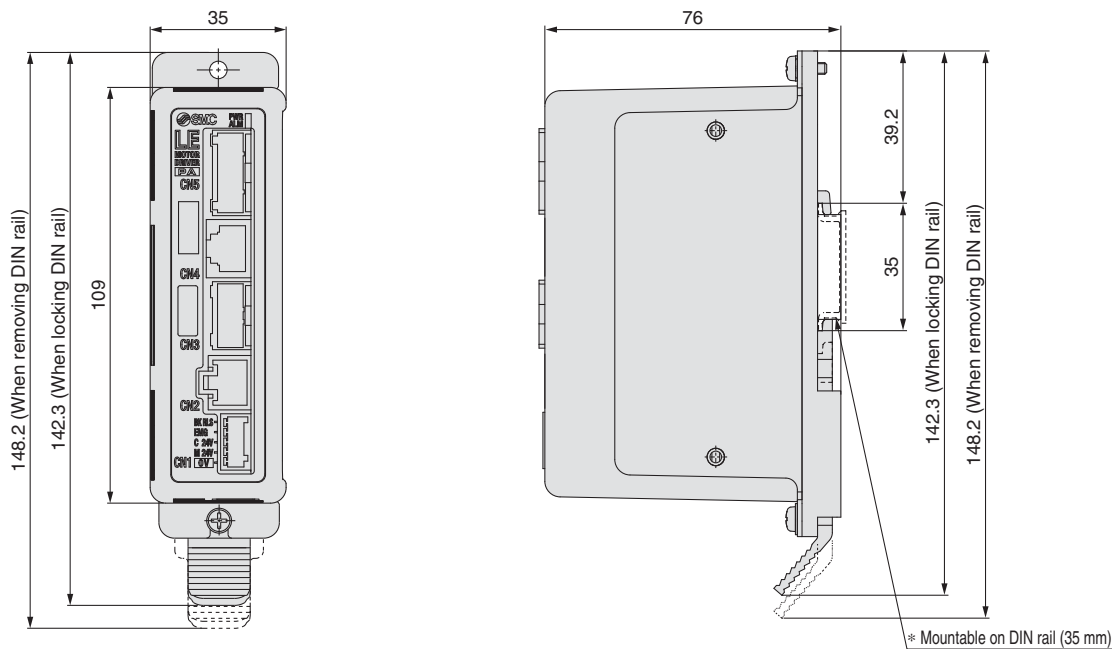


Wiring Example 1

Power Supply Connector: CN1 * Power supply plug is an accessory.
<Applicable cable size> AWG20 (0.5 mm²), cover diameter 2.0 mm or less

CN1 Power Supply Connector Terminal for LECPA (PHOENIX CONTACT FK-MC0.5/5-ST-2.5)

Terminal name	Function	Details
0V	Common supply (-)	M 24V terminal/C 24V terminal/EMG terminal/BK RLS terminal are common (-).
M 24V	Motor power supply (+)	Motor power supply (+) supplied to the driver
C 24V	Control power supply (+)	Control power supply (+) supplied to the driver
EMG	Stop (+)	Input (+) for releasing the stop
BK RLS	Lock release (+)	Input (+) for releasing the lock

Power supply plug for LECPA

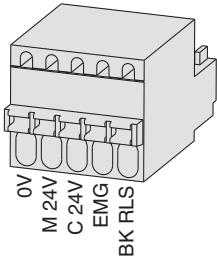


Wiring Example 2


Parallel I/O Connector: CN5

* When you connect a PLC, etc., to the CN5 parallel I/O connector, please use the I/O cable (LEC-CL5-□).
* The wiring should be changed depending on the type of the parallel I/O (NPN or PNP).

LECPAN□□-□ (NPN)

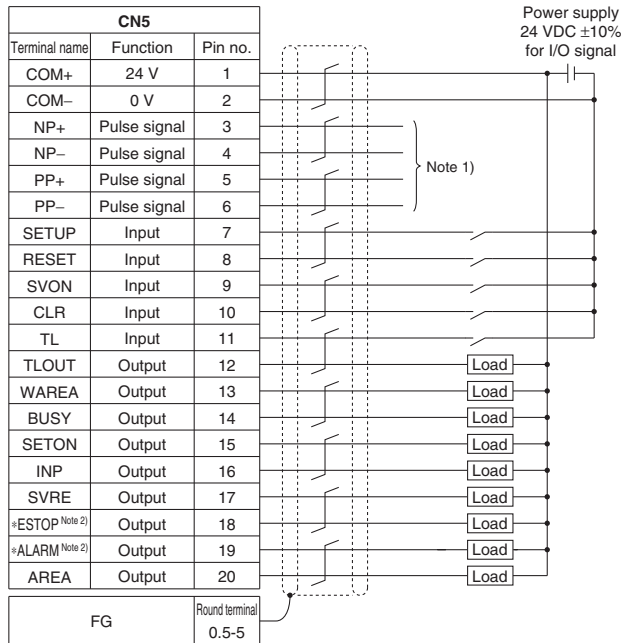

LECPAP□□-□ (PNP)

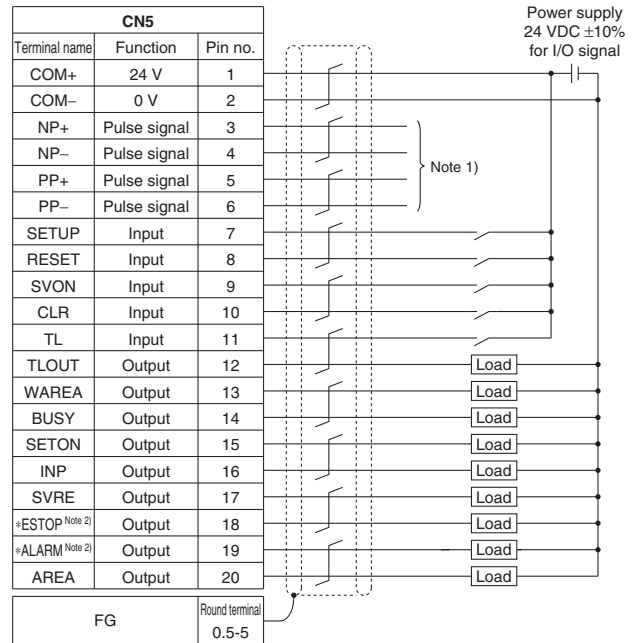

Note 1) For pulse signal wiring method, refer to "Pulse Signal Wiring Details".
Note 2) Output when the power supply of the driver is ON. (N.C.)

Input Signal

Name	Details
COM+	Connects the power supply 24 V for input/output signal
COM-	Connects the power supply 0 V for input/output signal
SETUP	Instruction to return to origin
RESET	Alarm reset
SVON	Servo ON instruction
CLR	Deviation reset
TL	Instruction to pushing operation


Output Signal

Name	Details
BUSY	Outputs when the actuator is operating
SETON	Outputs when returning to origin
INP	Outputs when target position is reached
SVRE	Outputs when servo is on
*ESTOP ^{Note 3)}	Not output when EMG stop is instructed
*ALARM ^{Note 3)}	Not output when alarm is generated
AREA	Outputs within the area output setting range
WAREA	Outputs within W-AREA output setting range
TLOUT	Outputs during pushing operation


Note 3) Signal of negative-logic circuit ON (N.C.)

Pulse Signal Wiring Details

•Pulse signal output of positioning unit is differential output

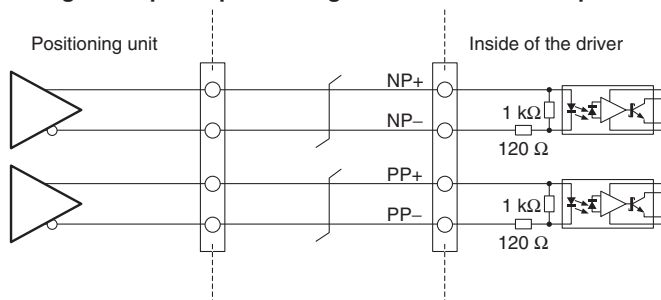

•Pulse signal output of positioning unit is open collector output

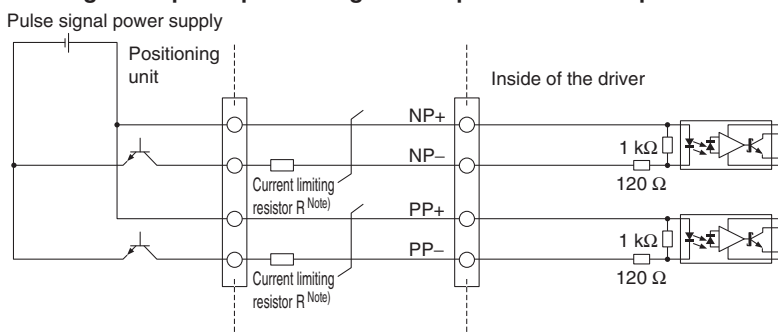


Note) Connect the current limiting resistor R in series to correspond to the pulse signal voltage.

Pulse signal power supply voltage	Current limiting resistor R specifications	Current limiting resistor part no.
24 VDC $\pm 10\%$	3.3 k Ω $\pm 5\%$ (0.5 W or more)	LEC-PA-R-332
5 VDC $\pm 5\%$	390 Ω $\pm 5\%$ (0.1 W or more)	LEC-PA-R-391


Signal Timing

Return to Origin

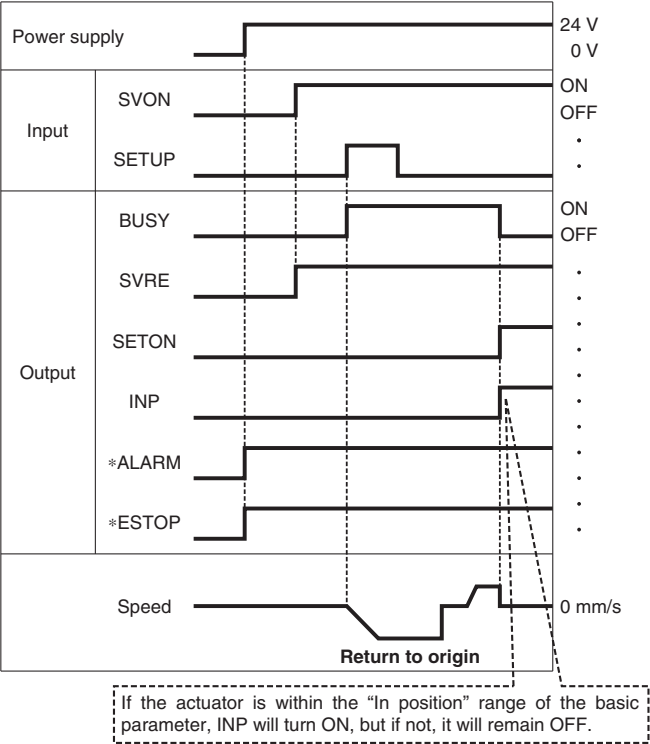


* "ALARM" and "ESTOP" are expressed as negative-logic circuit.

Positioning Operation

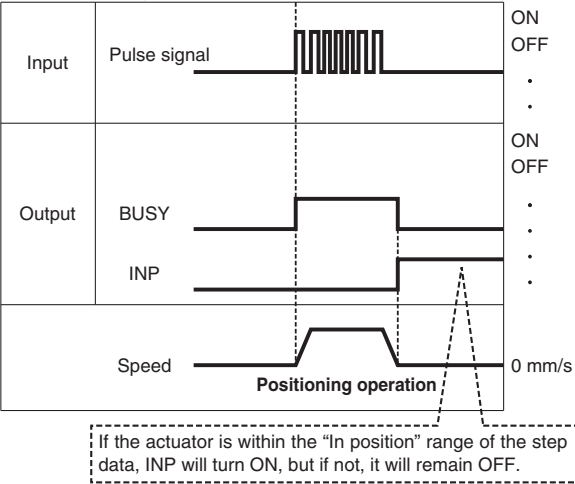


Pushing Operation

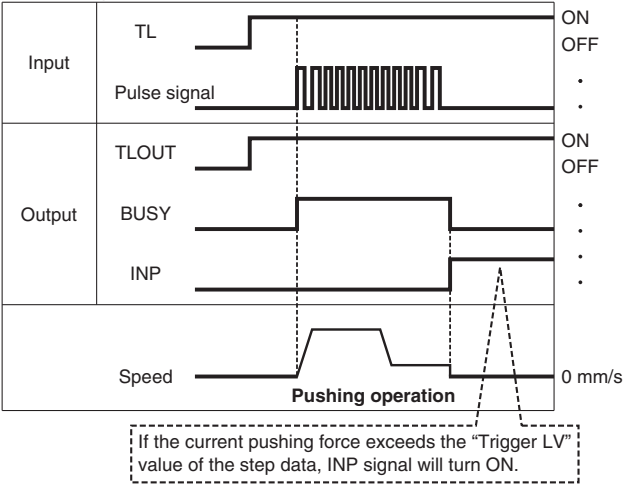

Note) If pushing operation is stopped when there is no pulse deviation, the moving part of the actuator may pulsate.

Alarm Reset

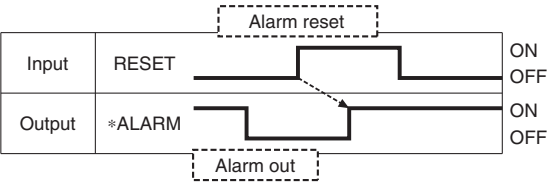

* "ALARM" is expressed as negative-logic circuit.

Options: Actuator Cable

[Robotic cable, standard cable for step motor (Servo/24 VDC)]

LE-CP-1- 1 -

Cable length (L) [m]


1	1.5
3	3
5	5
8	8*
A	10*
B	15*
C	20*

* Produced upon receipt of order (Robotic cable only)

Cable type


Nil	Robotic cable (Flexible cable)
S	Standard cable

LE-CP- $\frac{1}{5}$ /Cable length: 1.5 m, 3 m, 5 m

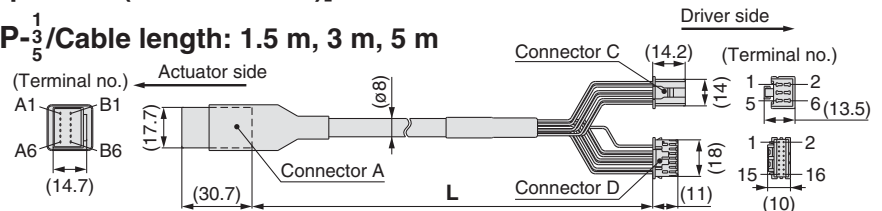

LE-CP- $\frac{8}{AC}$ /Cable length: 8 m, 10 m, 15 m, 20 m

(* Produced upon receipt of order)

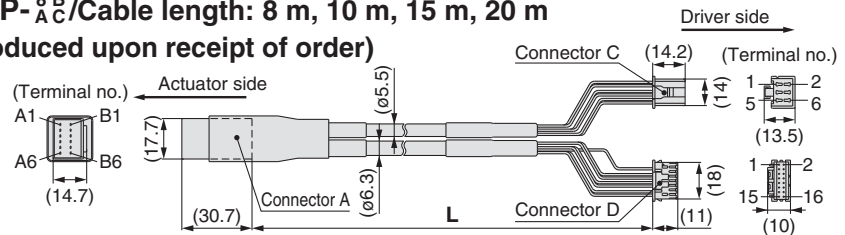

Signal	Connector A terminal no.	Cable color	Connector C terminal no.
A	B-1	Brown	2
A	A-1	Red	1
B	B-2	Orange	6
B	A-2	Yellow	5
COM-A/COM	B-3	Green	3
COM-B/-	A-3	Blue	4
Signal	Connector A terminal no.	Cable color	Connector D terminal no.
Vcc	B-4	Brown	12
GND	A-4	Black	13
A	B-5	Red	7
A	A-5	Black	6
B	B-6	Orange	9
B	A-6	Black	8
			3

[Robotic cable, standard cable with lock and sensor for step motor (Servo/24 VDC)]

LE-CP-1-B- 1 - B -

Cable length (L) [m]

1	1.5
3	3
5	5
8	8*
A	10*
B	15*
C	20*


* Produced upon receipt of order (Robotic cable only)

With lock and sensor

Cable type


Nil	Robotic cable (Flexible cable)
S	Standard cable

LE-CP- $\frac{1}{5}$ /Cable length: 1.5 m, 3 m, 5 m

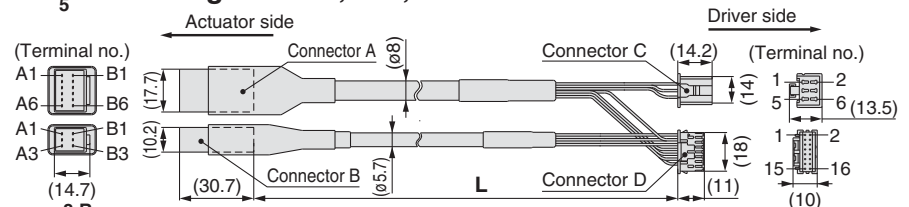

LE-CP- $\frac{8}{AC}$ /Cable length: 8 m, 10 m, 15 m, 20 m

(* Produced upon receipt of order)

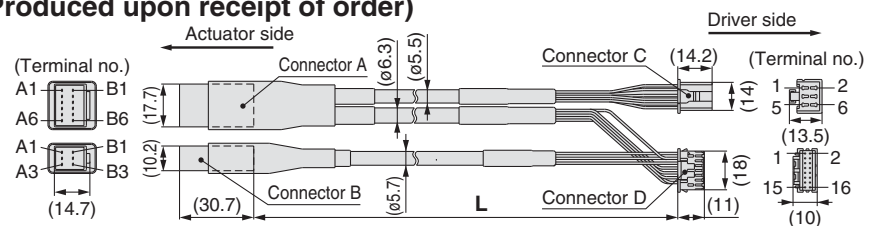

Signal	Connector A terminal no.	Cable color	Connector C terminal no.
A	B-1	Brown	2
A	A-1	Red	1
B	B-2	Orange	6
B	A-2	Yellow	5
COM-A/COM	B-3	Green	3
COM-B/-	A-3	Blue	4
Signal	Connector A terminal no.	Cable color	Connector D terminal no.
Vcc	B-4	Brown	12
GND	A-4	Black	13
A	B-5	Red	7
A	A-5	Black	6
B	B-6	Orange	9
B	A-6	Black	8
			3
Signal	Connector B terminal no.	Cable color	Connector D terminal no.
Lock (+)	B-1	Red	4
Lock (-)	A-1	Black	5
Sensor (+) (Note)	B-3	Brown	1
Sensor (-) (Note)	A-3	Blue	2

Note) Not used for the LE series.

Series LECPA

Options


[I/O cable]

LEC-C L5-1

I/O cable type	
L5	For LECPA

I/O cable length (L)	
1	1.5 m
3	3 m*
5	5 m*

* Pulse input usable only with differential. Only 1.5 m cables usable with open collector.

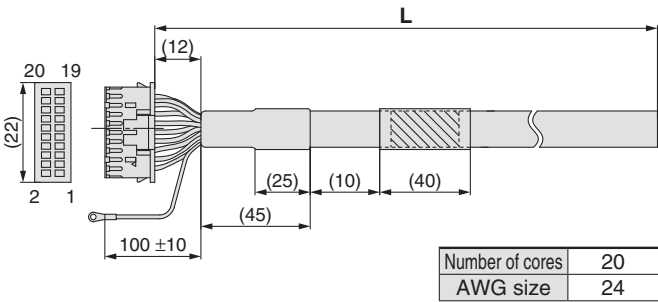


Pin no.	Insulation color	Dot mark	Dot color
1	Light brown	■	Black
2	Light brown	■	Red
3	Yellow	■	Black
4	Yellow	■	Red
5	Light green	■	Black
6	Light green	■	Red
7	Gray	■	Black
8	Gray	■	Red
9	White	■	Black
10	White	■	Red
11	Light brown	■ ■	Black

Pin no.	Insulation color	Dot mark	Dot color
12	Light brown	■ ■	Red
13	Yellow	■ ■	Black
14	Yellow	■ ■	Red
15	Light green	■ ■	Black
16	Light green	■ ■	Red
17	Gray	■ ■	Black
18	Gray	■ ■	Red
19	White	■ ■	Black
20	White	■ ■	Red
Round terminal 0.5-5	Green		

[Noise filter set]
Step Motor Driver (Pulse Input Type)

LEC-NFA

Contents of the set: 2 noise filters
(Manufactured by WURTH ELEKTRONIK: 74271222)

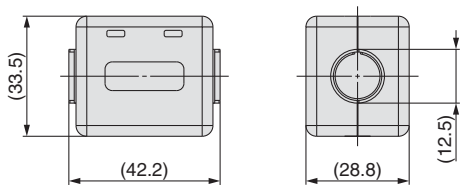

* Refer to the LECPA series Operation Manual for installation.

[Current limiting resistor]

This optional resistor (LEC-PA-R-□) is used when the pulse signal output of the positioning unit is open collector output.

LEC-PA-R-□

Current limiting resistor

Symbol	Resistance	Pulse signal power supply voltage
332	3.3 kΩ ±5%	24 VDC ±10%
391	390 Ω ±5%	5 VDC ±5%

* Select a current limiting resistor that corresponds to the pulse signal power supply voltage.
* For the LEC-PA-R-□, two pieces are shipped as a set.

Controller Setting Kit/LEC-W2

How to Order


LEC-W2

Controller setting kit
(Japanese and English are available.)

Contents

	Description	Model*
①	Controller setting software (CD-ROM)	LEC-W2-S
②	Communication cable	LEC-W2-C
③	USB cable (between the PC and the communication cable)	LEC-W2-U

* Can be ordered separately.

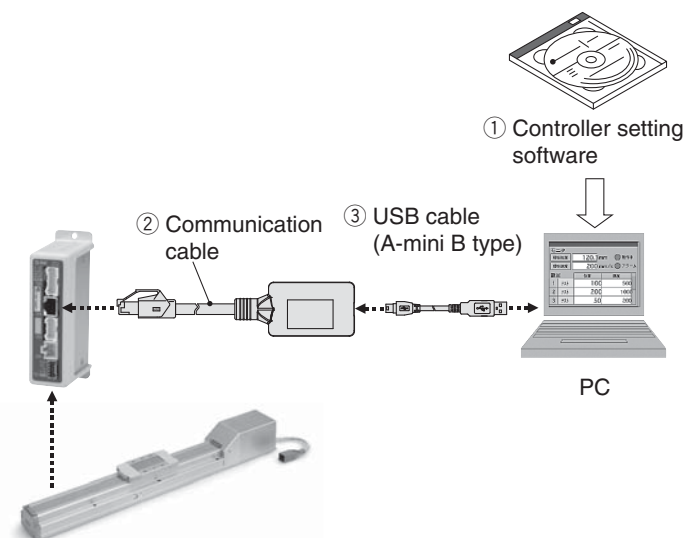

Compatible Controller/Driver

Step data input type

Pulse input type

CC-Link direct input type

Series **LECP6**/Series **LECA6**

Series **LECPA**

Series **LECPMJ**

Hardware Requirements


OS	IBM PC/AT compatible machine running Windows®XP (32-bit), Windows®7 (32-bit and 64-bit), Windows®8.1 (32-bit and 64-bit).
Communication interface	USB 1.1 or USB 2.0 ports
Display	XGA (1024 x 768) or more

* Windows®XP, Windows®7 and Windows®8.1 are registered trademarks of Microsoft Corporation in the United States.

* Refer to SMC website for version upgrade information, <http://www.smcworld.com>

Screen Example


Easy mode screen example

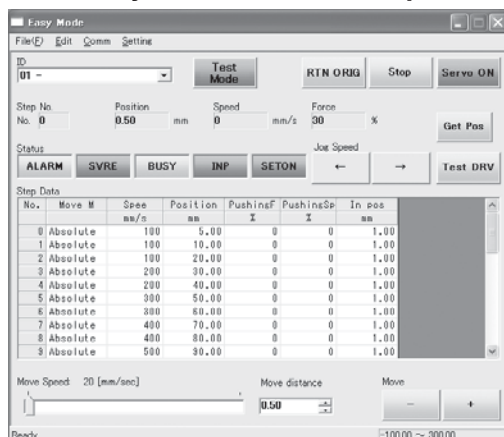

Easy operation and simple setting

- Allowing to set and display actuator step data such as position, speed, force, etc.
- Setting of step data and test drive can be performed on the same page.
- Can be used to jog and move at a constant rate.

Normal mode screen example

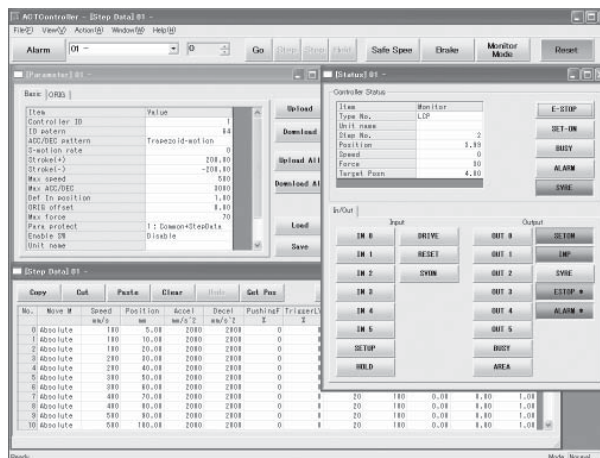

Detailed setting

- Step data can be set in detail.
- Signals and terminal status can be monitored.
- Parameters can be set.
- JOG and constant rate movement, return to origin, test drive and testing of forced output can be performed.

Series LEC Teaching Box/LEC-T1



How to Order



LEC-T1-3 J G

Teaching box

Cable length [m]

3 3

Initial language

J	Japanese
E	English

Enable switch

Nil	None
S	Equipped with enable switch

* Interlock switch for jog and test function

Stop switch

G Equipped with stop switch

* The displayed language can be changed to English or Japanese.

Specifications

Item	Description
Switch	Stop switch, Enable switch (Option)
Cable length [m]	3
Enclosure	IP64 (Except connector)
Operating temperature range [°C]	5 to 50
Operating humidity range [%RH]	90 or less (No condensation)
Weight [g]	350 (Except cable)

[CE-compliant products]

The EMC compliance of the teaching box was tested with the LECPC6 series step motor controller (servo/24 VDC) and an applicable actuator.

[UL-compliant products]

When conformity to UL is required, the electric actuator and driver should be used with a UL1310 Class 2 power supply.

Standard functions

- Chinese character display
- Stop switch is provided.


Option

- Enable switch is provided.

Easy Mode

Function	Details
Step data	• Setting of step data
Jog	• Jog operation • Return to origin
Test	• 1 step operation ^{Note 1)} • Return to origin
Monitor	• Display of axis and step data no. • Display of two items selected from Position, Speed, Force.
ALM	• Active alarm display • Alarm reset
TB setting	• Reconnection of axis (Ver. 1.**) • Displayed language setting (Ver. 2.**) • Setting of easy/normal mode • Setting step data and selection of items from easy mode monitor

Menu Operations Flowchart

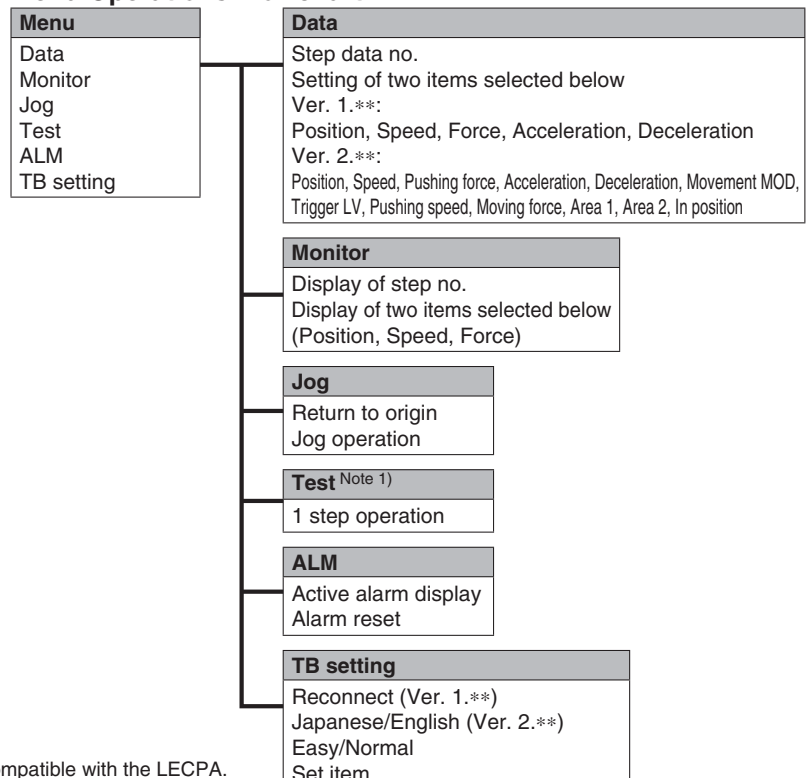


Note 1) Not compatible with the LECPC.

Normal Mode

Function	Details
Step data	• Step data setting
Parameter	• Parameters setting
Test	• Jog operation/Constant rate movement • Return to origin • Test drive ^{Note 1)} (Specify a maximum of 5 step data and operate.) • Forced output (Forced signal output, Forced terminal output) ^{Note 2)}
Monitor	• Drive monitor • Output signal monitor ^{Note 2)} • Input signal monitor ^{Note 2)} • Output terminal monitor • Input terminal monitor
ALM	• Active alarm display (Alarm reset) • Alarm log record display
File	• Data saving Save the step data and parameters of the driver which is being used for communication (it is possible to save four files, with one set of step data and parameters defined as one file). • Load to driver Loads the data which is saved in the teaching box to the driver which is being used for communication. • Delete the saved data. • File protection (Ver. 2.**)
TB setting	• Display setting (Easy/Normal mode) • Language setting (Japanese/English) • Backlight setting • LCD contrast setting • Beep sound setting • Max. connection axis • Distance unit (mm/inch)
Reconnect	• Reconnection of axis


Menu Operations Flowchart

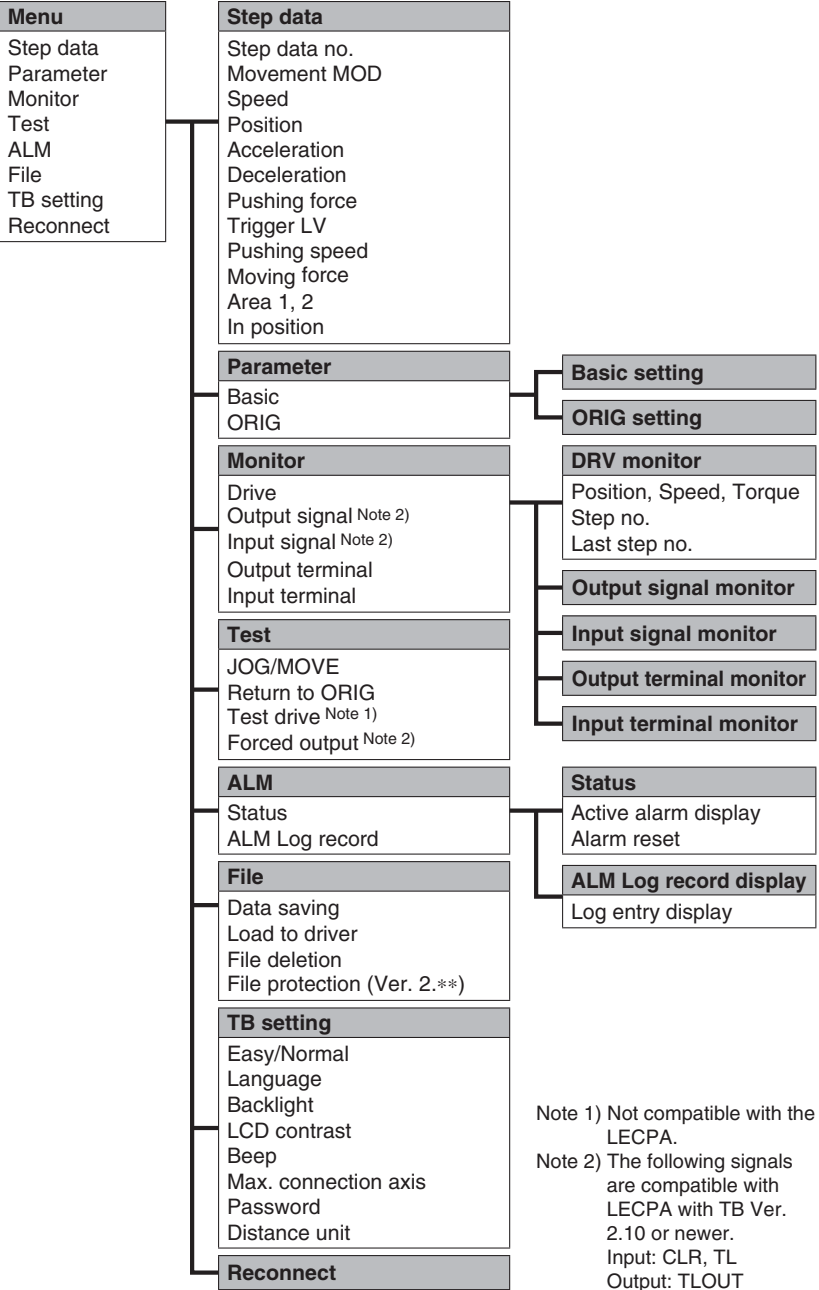

Note 1) Not compatible with the LECPA.

Note 2) The following signals are compatible with LECPA with TB Ver. 2.10 or newer.
Input: CLR, TL
Output: TLOUT

Dimensions

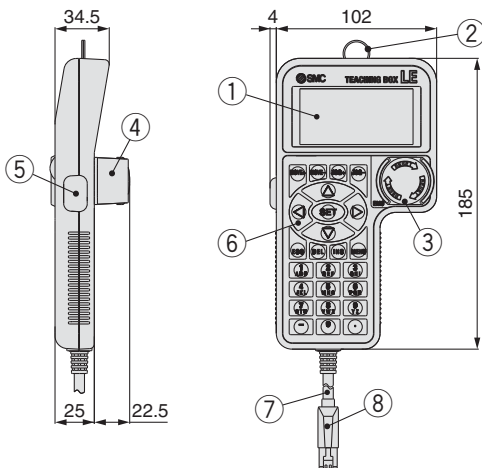

No.	Description	Function
1	LCD	A screen of liquid crystal display (with backlight)
2	Ring	A ring for hanging the teaching box
3	Stop switch	When switch is pushed in, the switch locks and stops. The lock is released when it is turned to the right.
4	Stop switch guard	A guard for the stop switch
5	Enable switch (Option)	Prevents unintentional operation (unexpected operation) of the jog test function. Other functions such as data change are not covered.
6	Key switch	Switch for each input
7	Cable	Length: 3 meters
8	Connector	A connector connected to CN4 of the driver

- LEFS
- LEJB
- LEJS
- LEJ
- LEM
- LEY
- LESH
- LEPS
- LER
- LEH
- LEY-X5
- 11-LEFS
- 11-LEJS
- 25A-
- LEC
- LECS
- LECS-T
- LECYM
- LECYU
- Motorless
- LAT3


CC-Link Direct Input Type Step Motor Controller

Series **LECPMJ**



RoHS

How to Order

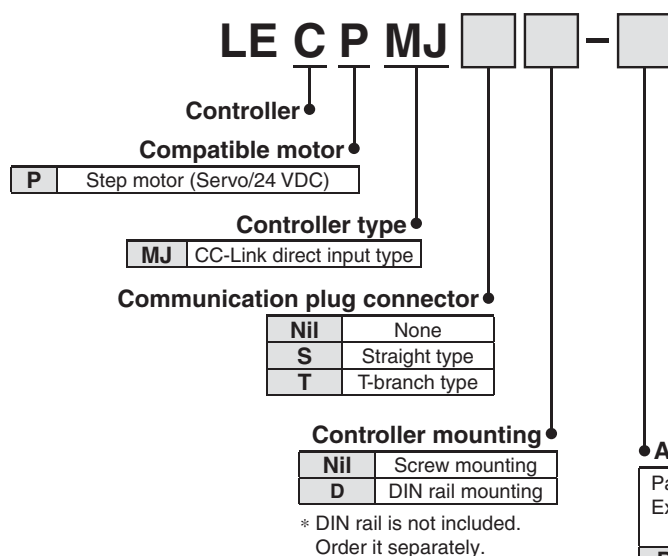

Actuator part number

Part number except cable specifications and actuator options
Example: Enter "**LEFS16B-100**"
for the LEFS16B-100B-S1MJS.


BC Blank controller Note)

Note) The dedicated software (LEC-BCW) is required.

Communication plug connector

* Part number that is used when ordering the communication plug connector individually.

LEC - C MJ - S

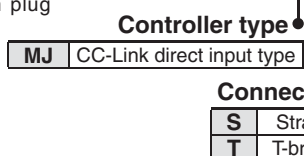

Straight type
LEC-CMJ-S




T-branch type
LEC-CMJ-T

The controller is sold as single unit after the compatible actuator is set.

Confirm that the combination of the controller and the actuator is correct.

- ① Check the actuator label for model number. This matches the controller.



* Refer to the operation manual for using the products. Please download it via our website, <http://www.smcworld.com>

Precautions on blank controller (LECPMJ[]-BC)

Blank controller is a controller to which the customer can write the data of the actuator to be combined and used. Use the dedicated software (LEC-BCW) for data writing.

- Please download the dedicated software (LEC-BCW) via our website.
- Order the controller setting kit (LEC-W2) separately to use this software.

SMC website: <http://www.smcworld.com>

Specifications

Item			LECPMJ				
Compatible motor			Step motor (Servo/24 VDC)				
Power supply <small>Note 1)</small>			Power voltage: 24 VDC ±10% <small>Note 2)</small>				
Compatible encoder			Incremental A/B phase (800 pulse/rotation)				
Communication specifications	Fieldbus		CC-Link Ver. 1.10				
	Communication speed [bps]		156 k/625 k/2.5 M/5 M/10 M				
	Communication method		Broadcast polling				
	Station type		Remote device station				
	I/O occupation area		1 station (Input 32 points/4 words Output 32 points/4 words)	2 stations (Input 64 points/8 words Output 64 points/8 words)	4 stations (Input 128 points/16 words Output 128 points/16 words)		
	Applicable communication cable		CC-Link Ver. 1.10 compliant cable (Shielded 3-core twisted pair cable) <small>Note 3)</small>				
	Maximum cable length	Communication speed [bps]	156 k	625 k	2.5 M	5 M	10 M
		Total cable length [m]	1200	900	400	160	100
Serial communication			RS485 (Modbus protocol)				
Memory			EEPROM				
LED indicator			PWR, ALM, L ERR, L RUN				
Lock control			Forced-lock release terminal <small>Note 4)</small>				
Cable length [m]			Actuator cable: 20 or less				
Cooling system			Natural air cooling				
Operating temperature range [°C]			0 to 40 (No freezing)				
Operating humidity range [%RH]			90 or less (No condensation)				
Storage temperature range [°C]			-10 to 60 (No freezing)				
Storage humidity range [%RH]			90 or less (No condensation)				
Insulation resistance [MΩ]			Between all of external terminals and the case 50 (500 VDC)				
Weight [g]			170 (Screw mounting), 190 (DIN rail mounting)				

Note 1) Do not use the power supply of "inrush current prevention type" for the controller power supply.

When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

Note 2) The power consumption changes depending on the actuator model. Refer to the specifications of actuator for more details.

Note 3) If the system comprises of both CC-Link Ver. 1.00 and Ver. 1.10 compliant cables, Ver. 1.00 specifications are applied to the maximum communication cable length and the cable length between stations.

Note 4) Applicable to non-magnetizing lock.

Mode explanation

Mode type	Description
Single numeric parameter	Can define numerical data in the Movement MOD and another item in the step data directly from the PLC when starting operation by specifying a registered step data No.
Half numeric parameters	Can define numerical data in the Movement MOD, Speed, Position, Acceleration/Pushing force, Pushing speed, or Deceleration/Trigger LV in the step data directly from the PLC when starting operation by specifying a registered step data No.
Full numeric parameters	Can define numerical data in all step data items, Movement MOD, Speed, Position, Acceleration, Pushing speed, Pushing force, Deceleration, Trigger LV, Moving force, Area 1, Area 2, and In position, directly from the PLC to start operation.

Function that can be executed in each mode

Mode setting [Number of occupied stations] <small>Note 5)</small>	Single numeric parameter [1]	Half numeric parameters [2]	Full numeric parameters [4]
Step no. defining operation		○	
Numerical data defining operation		○	
Number of definable numerical data items	1	6	12
Monitor of position/speed		○	
Step data editing		○ <small>Note 6)</small>	
Max. number of connectable controllers <small>Note 7)</small>	42	32	16

Note 5) The modes can be set by registering the number of occupied stations with basic parameter "Option setting 1" of the controller.

Note 6) It is possible to edit it from teaching box/controller setting software for "Single numeric parameter". It is possible to edit it from teaching box/controller setting software and PLC (CC-Link) for "Half numeric parameters" and "Full numeric parameters".

Note 7) Maximum number of units specified in CC-Link communication specifications.

Specifications

Modifiable step data item in each mode

●: Numerical data modifiable items

Mode setting	Step data item											
	Movement MOD	Speed	Position	Acceleration	Pushing force	Pushing speed	Deceleration	Trigger LV	Moving force	Area 1	Area 2	In position
Single numeric parameter	●	←				Only one item can be changed from 11 items, ranging from Speed to In position.						→
Half numeric parameters	●	●	●	Only one item can be changed from Acceleration/Pushing force.		●	Only one item can be changed from Deceleration/Trigger LV.					
Full numeric parameters	●	●	●	●	●	●	●	●	●	●	●	●

Note) Step data items, except items that have been changed, reference data registered in the controller.

Note) Refer to the LECPMJ operation manual for details of the step data items.

Operation example: Single numeric parameter




Controller [LECPMJ]

[Step data registered in LECPMJ]

No.	Movement MOD	Speed	Position	Acceleration	Deceleration	Pushing force	Trigger LV	Pushing speed	Moving force	Area 1	Area 2	In position
0	1: Absolute	100	10	3000	3000	0	0	0	100	0	0	0.50
1	1: Absolute	100	100	3000	3000	0	0	0	100	0	0	0.50
2	1: Absolute	100	200	3000	3000	0	0	0	100	0	0	0.50



Note) The step data input range changes depending on the actuator model. For details, refer to the operation manual for actuator.

Note) To register the step data, use the controller setting software, teaching box, or data editing function of the LECPMJ.

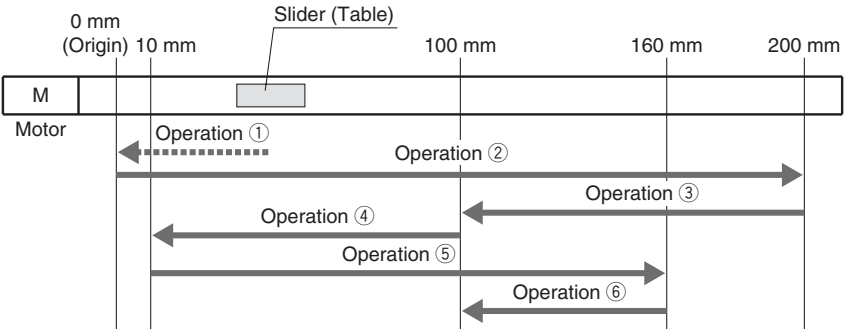

Operations	Description	Position after operation [mm]
Operation ① [Return to origin]	After the servo is turned ON and the SETUP signal is sent, the return to origin will start. After returning to the origin position, the SETON and INP signals are output.	0
Operation ② [Specify Step No.2 to input the DRIVE signal.]		200
Operation ③ [Specify Step No.1 to input the DRIVE signal.]		100
Operation ④ [Specify Step No.0 to input the DRIVE signal.]	Step data No. defining operation The operation starts by specifying a registered step data No. to input the DRIVE signal.	10
Operation ⑤ [Define numerical data in the Movement MOD and Position in Step No.1.] • Movement MOD: 2 (Relative) and Position: 150 are defined from the PLC.		160
Operation ⑥ [Specify Step No.1 to input the DRIVE signal.]	Numerical data defining operation The operation starts by changing the Movement MOD and Position in step data No.1 temporarily by defining numerical data from the PLC. Step data No. defining operation The operation starts by specifying a registered step data No. to input the DRIVE signal. * Change of numerical values when defining numerical data will not affect the registered step data.	100


Dimensions

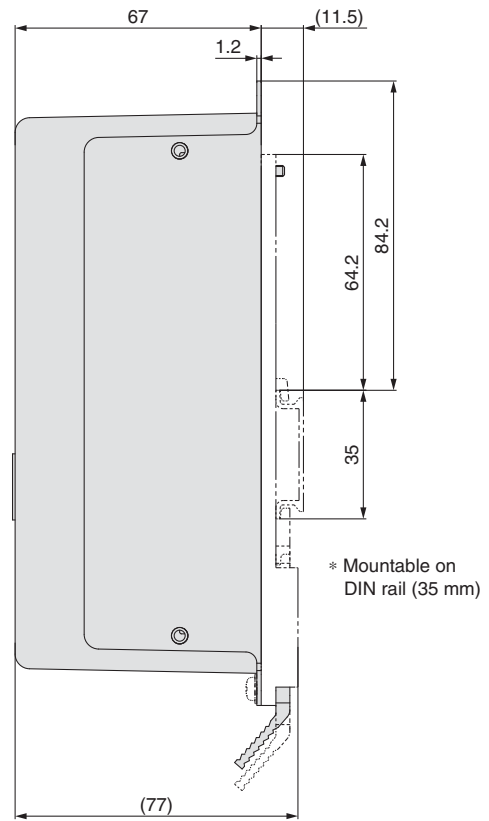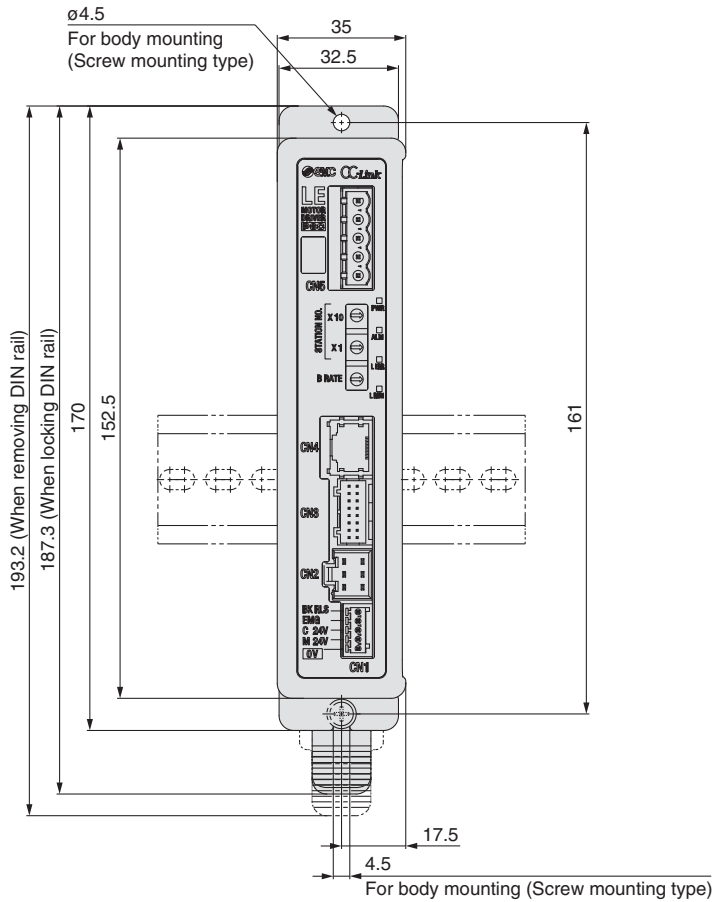

DIN rail

AXT100-DR-□

* For □, enter a number from the "No." line in the table below.
Refer to the dimensions above for the mounting dimensions.

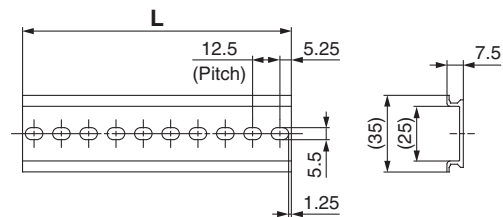

L Dimension [mm]

No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
L	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5

Wiring Example


Power Supply Connector: CN1

* Power supply plug is an accessory.
<Applicable cable size> AWG20 (0.5 mm²), cover diameter 2.0 mm or less

CN1 Power Supply Connector Terminal for LECPMJ (PHOENIX CONTACT FK-MC0.5/5-ST-2.5)

Terminal name	Function	Details
0V	Common supply (-)	M 24V terminal/C 24V terminal/EMG terminal/BK RLS terminal are common (-).
M 24V	Motor power supply (+)	Motor power supply (+) supplied to the driver
C 24V	Control power supply (+)	Control power supply (+) supplied to the driver
EMG	Stop (+)	Input (+) for releasing the stop
BK RLS	Lock release (+)	Input (+) for releasing the lock

Power supply plug for LECPMJ

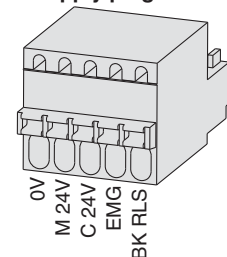

Series **LEC**

Windows®XP, Windows®7 compatible

Controller Setting Kit/LEC-W2

How to Order

LEC-W2

Controller setting kit
(Japanese and English are available.)

Contents

	Description	Model*
①	Controller setting software (CD-ROM)	LEC-W2-S
②	Communication cable	LEC-W2-C
③	USB cable (between the PC and the communication cable)	LEC-W2-U

* Can be ordered separately.

Compatible Controller/Driver

Step data input type

Series **LECP6**/Series **LECA6**

Pulse input type

Series **LECPA**

CC-Link direct input type

Series **LECPMJ**

Hardware Requirements


OS	IBM PC/AT compatible machine running Windows®XP (32-bit), Windows®7 (32-bit and 64-bit), Windows®8.1 (32-bit and 64-bit).
Communication interface	USB 1.1 or USB 2.0 ports
Display	XGA (1024 x 768) or more

* Windows®XP, Windows®7 and Windows®8.1 are registered trademarks of Microsoft Corporation in the United States.

* Refer to SMC website for version upgrade information, <http://www.smcworld.com>

Screen Example


Easy mode screen example

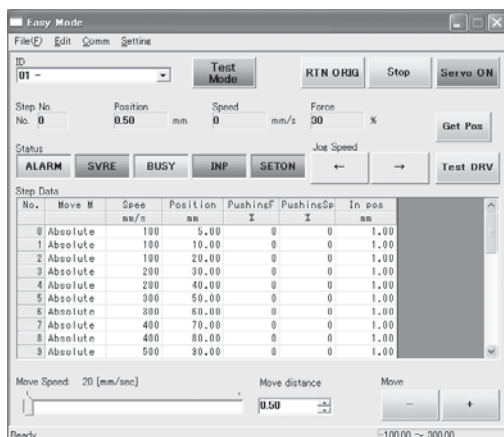

Easy operation and simple setting

- Allowing to set and display actuator step data such as position, speed, force, etc.
- Setting of step data and test drive can be performed on the same page.
- Can be used to jog and move at a constant rate.

Normal mode screen example

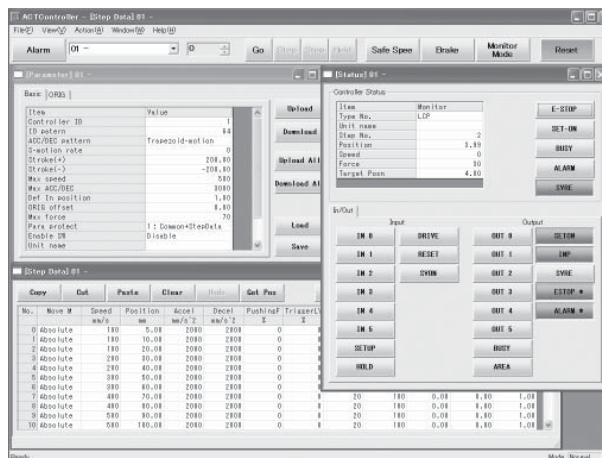

Detailed setting

- Step data can be set in detail.
- Signals and terminal status can be monitored.
- Parameters can be set.
- JOG and constant rate movement, return to origin, test drive and testing of forced output can be performed.

Series LEC Teaching Box/LEC-T1



How to Order



LEC-T1-3 J G

Teaching box

Cable length [m]
3 3

Initial language

J	Japanese
E	English

Enable switch

Nil	None
S	Equipped with enable switch

* Interlock switch for jog and test function

Stop switch

G	Equipped with stop switch
---	---------------------------

* The displayed language can be changed to English or Japanese.

Specifications

Item	Description
Switch	Stop switch, Enable switch (Option)
Cable length [m]	3
Enclosure	IP64 (Except connector)
Operating temperature range [°C]	5 to 50
Operating humidity range [%RH]	90 or less (No condensation)
Weight [g]	350 (Except cable)

[CE-compliant products]

The EMC compliance of the teaching box was tested with the LEC6 series step motor controller (servo/24 VDC) and an applicable actuator.

[UL-compliant products]

When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

Standard functions

- Chinese character display
- Stop switch is provided.


Option

- Enable switch is provided.

Easy Mode

Function	Details
Step data	• Setting of step data
Jog	• Jog operation • Return to origin
Test	• 1 step operation • Return to origin
Monitor	• Display of axis and step data no. • Display of two items selected from Position, Speed, Force.
ALM	• Active alarm display • Alarm reset
TB setting	• Reconnection of axis (Ver. 1.**) • Displayed language setting (Ver. 2.**) • Setting of easy/normal mode • Setting step data and selection of items from easy mode monitor

Menu Operations Flowchart

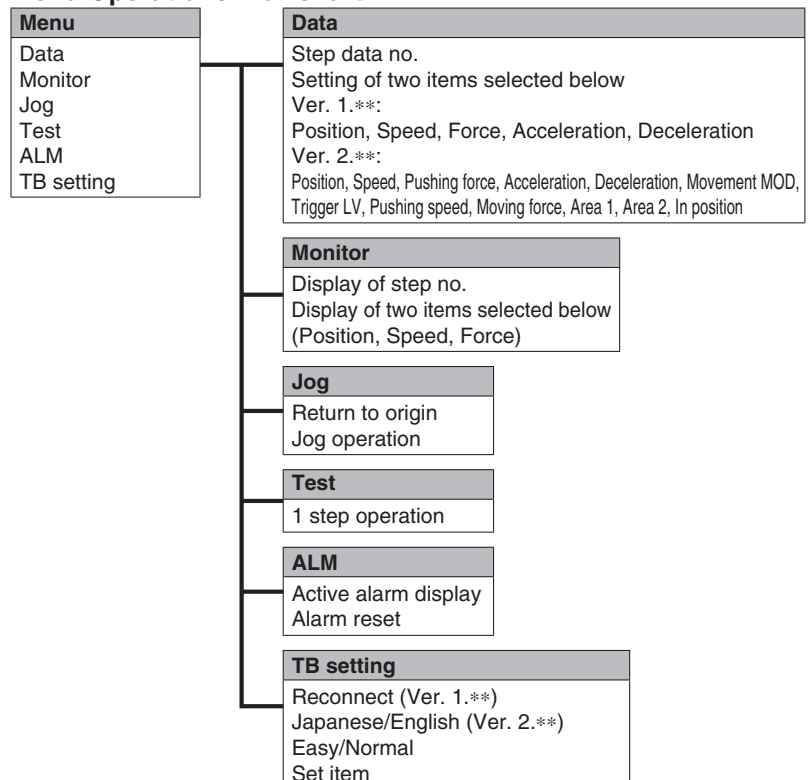


LEFS
LEJB
LEJ
LEM
LEY
LESH
LEPS
LER
LEH
LEY-X5
11-LEFS
11-LEJS
25A-
LEC
LECS
LECS-T
LECYM
LECYU
Motorless
LAT3


Normal Mode

Function	Details
Step data	• Step data setting
Parameter	• Parameters setting
Test	• Jog operation/Constant rate movement • Return to origin • Test drive (Specify a maximum of 5 step data and operate.) • Forced output (Forced signal output, Forced terminal output)
Monitor	• Drive monitor • Output signal monitor • Input signal monitor • Output terminal monitor • Input terminal monitor
ALM	• Active alarm display (Alarm reset) • Alarm log record display
File	• Data saving Save the step data and parameters of the controller which is being used for communication (it is possible to save four files, with one set of step data and parameters defined as one file). • Load to controller Loads the data which is saved in the teaching box to the controller which is being used for communication. • Delete the saved data. • File protection (Ver. 2.**)
TB setting	• Display setting (Easy/Normal mode) • Language setting (Japanese/English) • Backlight setting • LCD contrast setting • Beep sound setting • Max. connection axis • Distance unit (mm/inch)
Reconnect	• Reconnection of axis

Menu Operations Flowchart

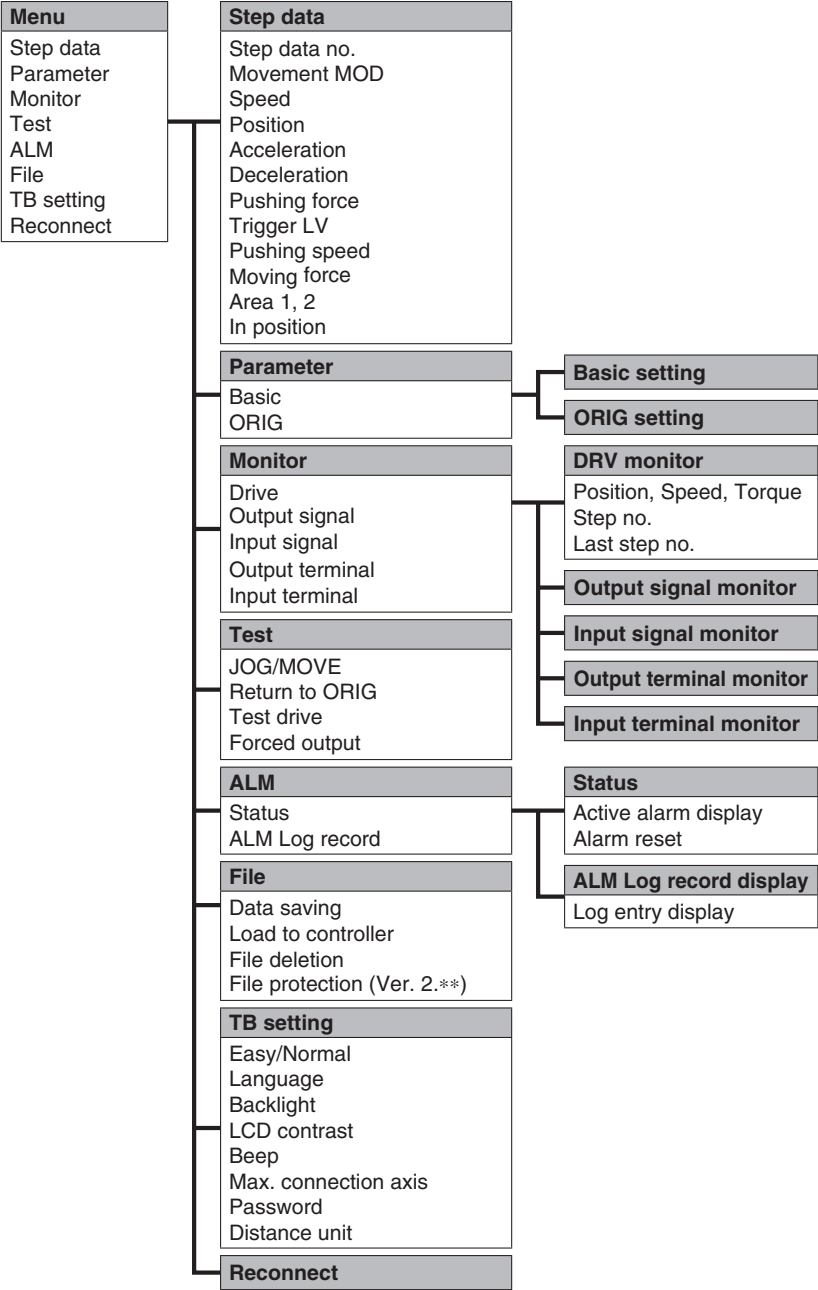

Dimensions

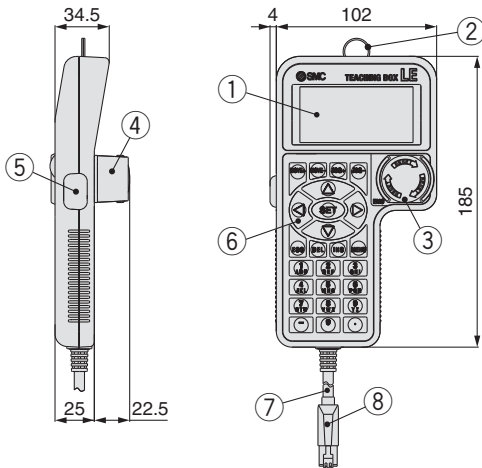

No.	Description	Function
1	LCD	A screen of liquid crystal display (with backlight)
2	Ring	A ring for hanging the teaching box
3	Stop switch	When switch is pushed in, the switch locks and stops. The lock is released when it is turned to the right.
4	Stop switch guard	A guard for the stop switch
5	Enable switch (Option)	Prevents unintentional operation (unexpected operation) of the jog test function. Other functions such as data change are not covered.
6	Key switch	Switch for each input
7	Cable	Length: 3 meters
8	Connector	A connector connected to CN4 of the controller